

# 1 -Comp, Loc.: Control modules - Vehicle Rear

## 1.1 Overview of Control Modules

### 1 - Right Rear Door Control Module -J389-

☐ and Connectors ⇒ [page 21](#)

### 2 - Comfort System Central Control Module -J393-

☐ and Connectors ⇒ [page 5](#)

### 3 - Air Ionization System Control Module -J897-

☐ and Connectors ⇒ [page 39](#)

### 4 - Fuel Pump (FP) Control Module -J538-

☐ and Connectors ⇒ [page 36](#)

### 5 - Rear Lid Control Module -J605-

☐ and Connectors Sedan ⇒ [page 6](#)

☐ and Connectors Avant ⇒ [page 7](#)

### 6 - Rear lid motor 1 -V444- / Rear lid motor 2 -V445- , Avant

☐ Components: -G525- , -G526- , -N527- , -N528-

☐ and Connectors ⇒ [page 8](#)

### 7 - Towing Recognition Control Module -J345-

☐ and Connectors ⇒ [page 9](#)

### 8 - Vehicle positioning system interface control module -J843-

☐ and Connectors ⇒ [page 31](#)

### 9 - Parking Aid Control Module -J446-

☐ and Connectors ⇒ [page 12](#)

### 9 - Parallel Parking Assistance Control Module -J791-

☐ and Connectors ⇒ [page 14](#)


### 9 - Amplifier for Telephone -R86-

☐ and connectors, through model year 2014 ⇒ [page 64](#)

☐ and connectors, from model year 2015 ⇒ [page 66](#)

### 10 - Auxiliary Heater RF Receiver -R64-

☐ and Connectors ⇒ [page 30](#)

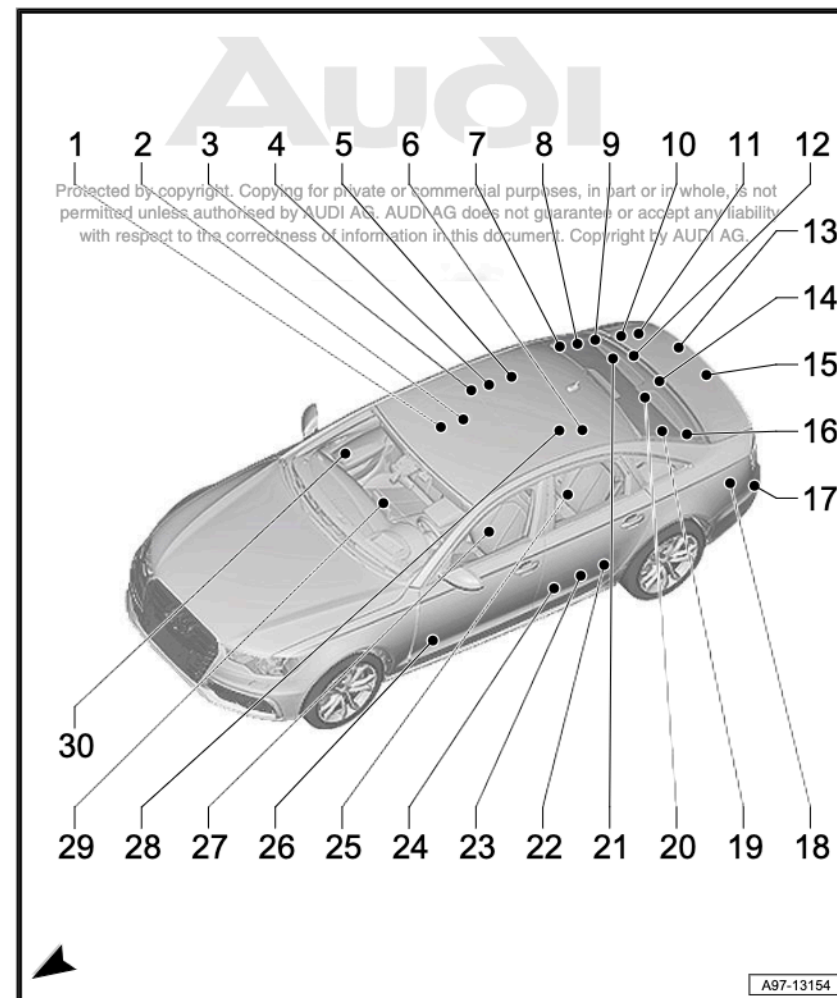

10 - Rear View Camera System Control Module -J772-

- ☐ and connectors through model year 2014 ⇒ [page 55](#)
- ☐ and connectors through model year 2015 ⇒ [page 57](#)
- ☐ and connectors from model year 2016 ⇒ [page 59](#)

11 - Lane Change Assistance Control Module -J769-

- ☐ and Connectors ⇒ [page 28](#)

12 - Level Control System Control Module -J197-

- ☐ and Connectors ⇒ [page 15](#)

12 - Electronic Damping Control Module -J250-

- ☐ and Connectors ⇒ [page 16](#)

13 - Rear lid opener control module -J938-

- ☐ and Connectors ⇒ [page 41](#)

14 - Battery Monitoring Control Module -J367-

- ☐ and Connectors ⇒ [page 34](#)

15 -

Door Closing Assist Control Module -J657-

- ☐ Components: -V382- , -F332- , -F333-
- ☐ and Connectors ⇒ [page 27](#)

16 - Voltage Stabilizer -J532-

- ☐ and Connectors ⇒ [page 18](#)

17 - Lane Change Assistance Control Module 2 -J770-

- ☐ and Connectors ⇒ [page 29](#)

18 - TV Tuner -R78- , from model year 2015

- ☐ and Connectors ⇒ [page 43](#)

18 - Digital Sound System Control Module -J525- , from model year 2015

- ☐ and connectors, Audi sound system (9VD), from model year 2015 ⇒ [page 45](#)
- ☐ and Pin Connectors, Bose Surround Sound (8RY), from model year 2015 ⇒ [page 49](#)
- ☐ and Pin Connectors, Bang and Olufsen Advanced Sound System (8RF), from model year 2015 ⇒ [page 52](#)

18 - Amplifier for Telephone -R86-

- ☐ and connectors, through model year 2014 ⇒ [page 64](#)
- ☐ and connectors, from model year 2015 ⇒ [page 66](#)

19 - Electro-Mechanical Parking Brake Control Module -J540-

- ☐ and Connectors ⇒ [page 19](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



- 19 - Engine Sound Generator Control Module -J943-
  - ☐ and Connectors, models with Hybrid Drive, from July 2017 ⇒ [page 33](#)
  - ☐ and Connectors, models without Hybrid Drive ⇒ [page 32](#)
- 20 - All-Wheel Drive Control Module -J492-
  - ☐ and Connectors ⇒ [page 17](#)
- 20 - Telematics Interface Control Module -J1221-
  - ☐ Models with Hybrid Drive only, from July 2017
  - ☐ and Connectors ⇒ [page 67](#)
- 20 - Telephone/Telematics Control Module -J526-
  - ☐ Models with Hybrid Drive only, from July 2017
  - ☐ and Connectors ⇒ [page 69](#)
- 21 - Engine Sound Generator Control Module -J943-
  - ☐ and Connectors, models without Hybrid Drive ⇒ [page 32](#)
  - ☐ and Connectors, models with Hybrid Drive, from July 2017 ⇒ [page 33](#)
- 22 - Left Rear Door Control Module -J388-
  - ☐ and Connectors ⇒ [page 20](#)
- 23 - Fuel Tank Lead Detection Control Module -J909-
  - ☐ and Connectors ⇒ [page 37](#)
- 23 - Reducing Agent Metering System Control Module -J880-
  - ☐ and Connectors ⇒ [page 61](#)
- 24 - Seat Heating Control Module -J882-
  - ☐ and Connectors ⇒ [page 35](#)
- 25 - Data Bus On Board Diagnostic Interface -J533-
  - ☐ and Connectors ⇒ [page 25](#)
- 26 - Driver's Door Control Module -J386-
  - ☐ and Connectors ⇒ [page 22](#)
- 27 -  
Rear A/C Display Control Head -E265-
  - ☐ Components: -E128- , -E129-
  - ☐ and Connectors ⇒ [page 26](#)
- 28 -  
Roof shade control module -J394-
  - ☐ Components: -V260-
  - ☐ and Connectors ⇒ [page 38](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



29 - Peripheral Camera Control Module -J928-

□ and Connectors ⇒ [page 63](#)

30 - Front Passenger's Door Control Module -J387-

□ and Connectors ⇒ [page 23](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



## 1.2 Comfort System Central Control Module -J393-

In right luggage compartment, on wheel housing -H-.

A - 17-Pin Connector -T17s- , black

B - 32-Pin Connector -T32i- , black

C - 17-Pin Connector -T17r- , brown


D - 2-Pin Connector -T2co- , Connector Central Locking and Anti-Theft Alarm System Antenna -R47-

E - 32-Pin Connector -T32g- , gray

F - 32-Pin Connector -T32h- , blue

G - Not used

H - Comfort System Central Control Module -J393-

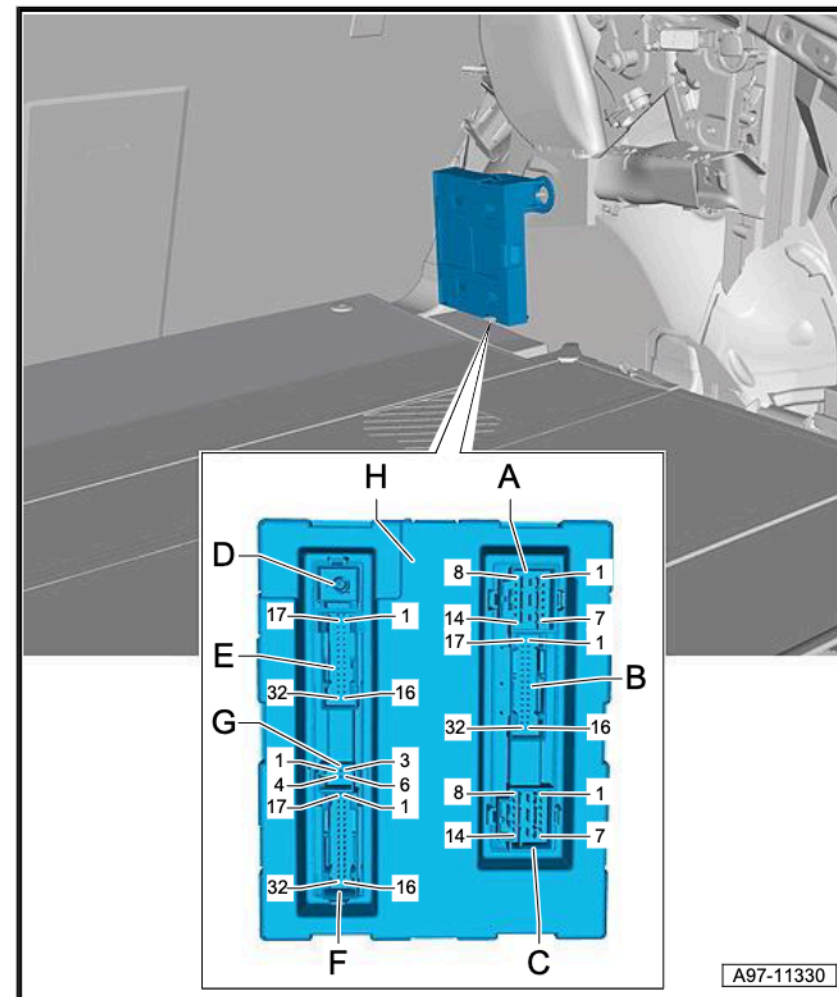

Back to overview ⇒ [page 1](#) .

### 1.3 Rear Lid Control Module -J605- , Sedan


In left luggage compartment, on wheel housing -A-.

A - Rear Lid Control Module -J605-

B - 4-Pin Connector -T4bx- , black

C - 26-Pin Connector -T26b- , black

D - 5-Pin Connector -T5ae- , black, Rear lid motor 1 -V444- , Rear lid motor 2 -V445-

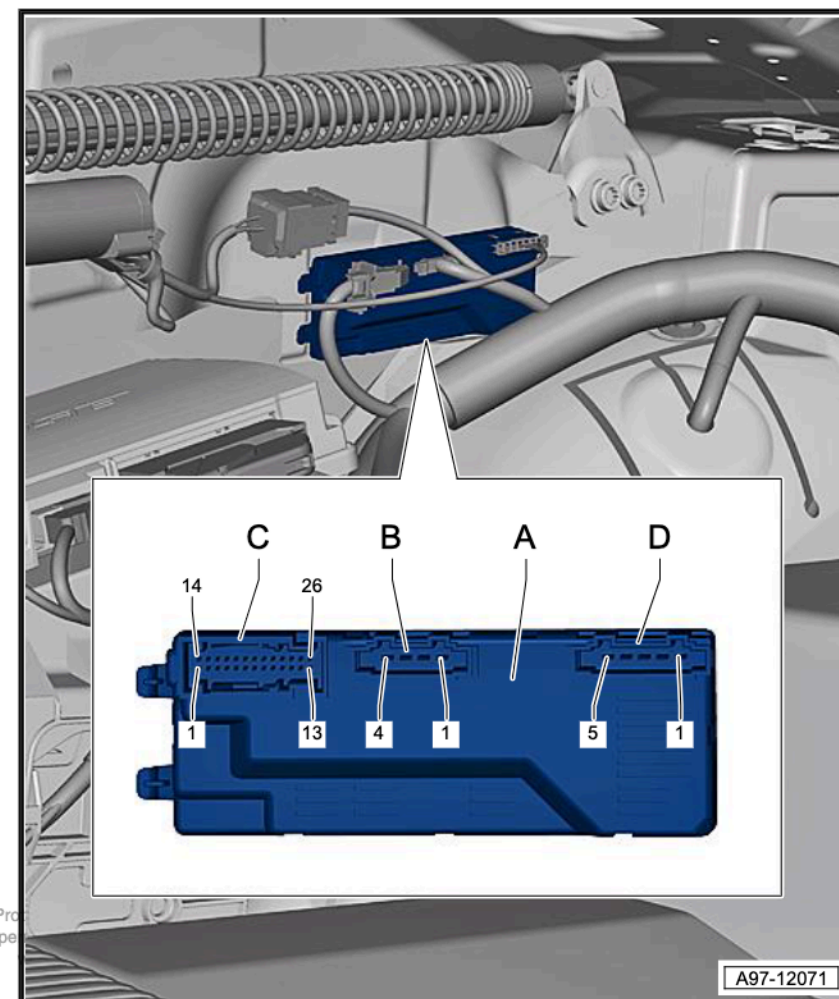

Back to overview ⇒ [page 1](#) .

## 1.4 Rear Lid Control Module -J605- , Avant


On upper centre of rear lid cutout -A-.

A - Rear Lid Control Module -J605-

B - 4-Pin Connector -T4bx- , black

C - 26-Pin Connector -T26b- , black

D - 5-Pin Connector -T5ae- , black

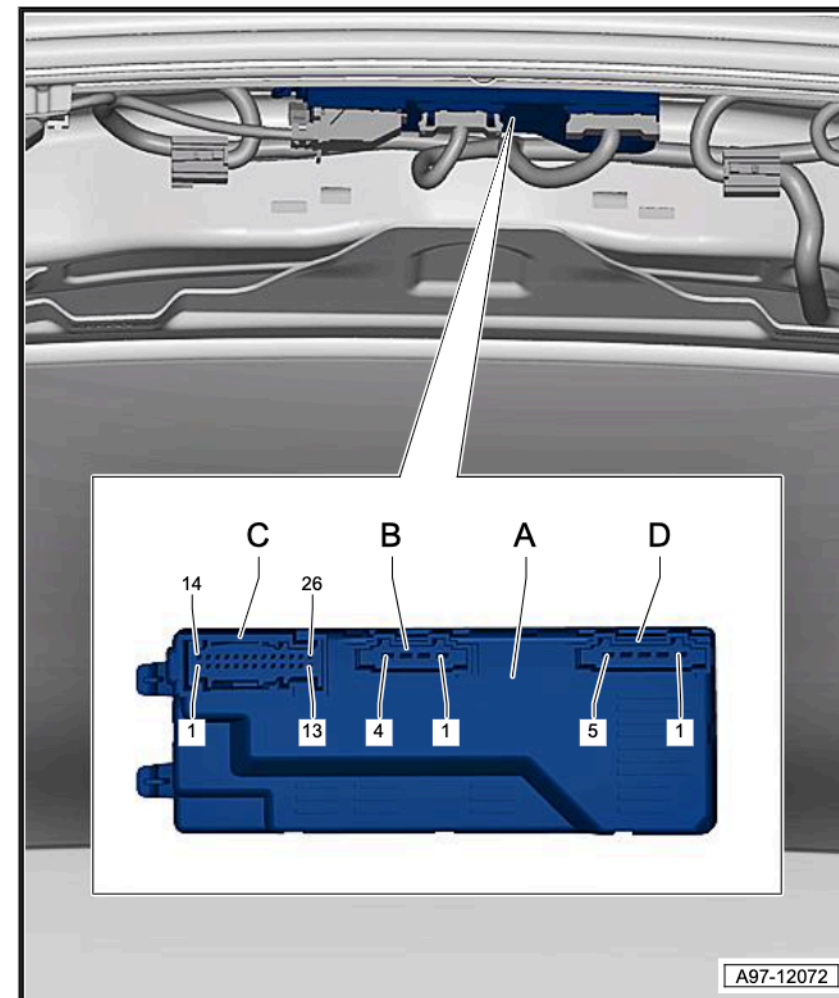

with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin



Back to overview [⇒ page 1](#) .

## 1.5 Rear lid motor 1 -V444- / Rear lid motor 2 -V445- , Avant

On upper left of rear lid cutout -2- and right -1-.

### 1 - Rear lid motor 2 -V445-

- ☐ in direction of travel, right
- ☐ with Coupling in rear lid motor 2 -N528-

### 2 - Rear lid motor 1 -V444-

- ☐ in direction of travel, left
- ☐ with Rear Lid Closed Sensor 1 -G525- , Rear Lid Closed Sensor 2 -G526- , Coupling in rear lid motor 1 -N527-

### A - 5-Pin Connector -T5ah-

- ☐ Through model year 2014

### A - 6-Pin Connector -T6ck-


- ☐ from model year 2015

### B - 5-Pin Connector -T5r-

- ☐ Through model year 2014

### B - 6-Pin Connector -T6ci-

- ☐ from model year 2015

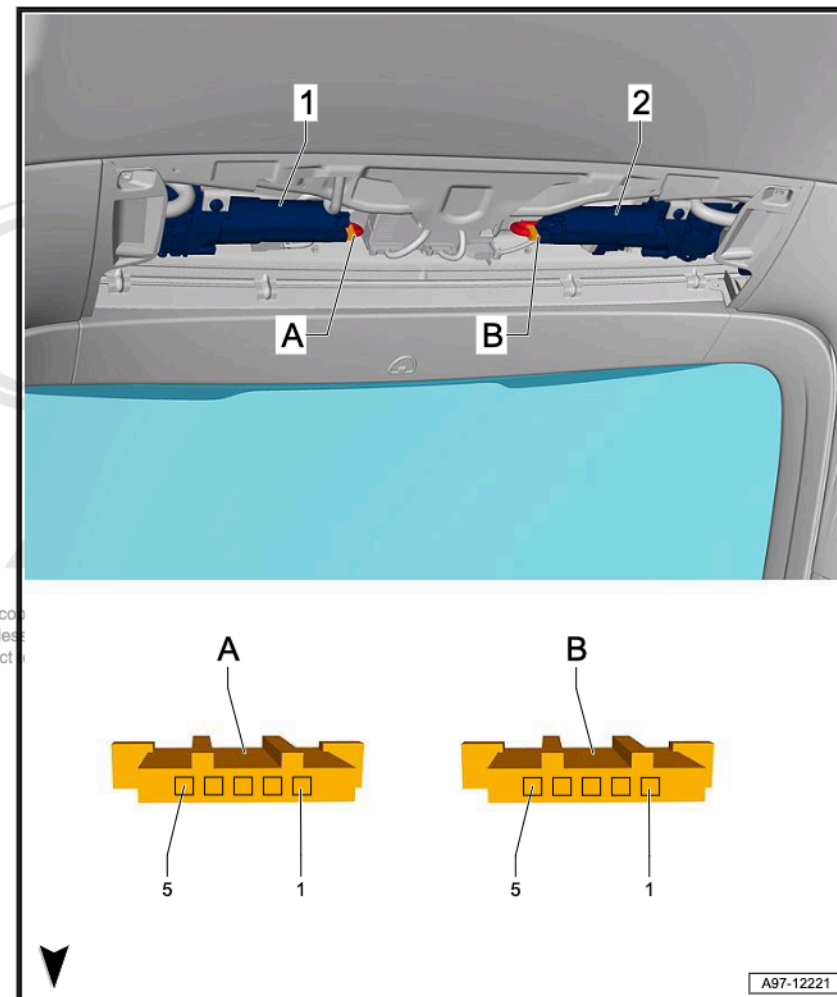

Pin Arrangements Rear lid motor 1 -V444- / Rear lid motor 2 -V445- , through model year 2014

-T5ah- (A)	Designation		-T5r- (B)	Designation
1	Rear Lid Control Module -J605-		1	Rear Lid Control Module -J605-
2			2	
3			3	
4			4	
5	Rear Lid Control Module -J605-		5	Rear Lid Control Module -J605-

Back to overview ⇒ [page 1](#) .

Pin Arrangements Rear lid motor 1 -V444- / Rear lid motor 2 -V445- , from model year 2015

-T6ck- (A)	Designation		-T6ci- (B)	Designation
1			1	Rear Lid Control Module -J605-
2			2	Rear Lid Control Module -J605-
3	Rear Lid Control Module -J605-		3	Rear Lid Control Module -J605-
4			4	Rear Lid Control Module -J605-
5			5	Rear Lid Control Module -J605-
6	Rear Lid Control Module -J605-		6	Rear Lid Control Module -J605-

Back to overview ⇒ [page 1](#) .

## 1.6 Towing Recognition Control Module -J345-

In right luggage compartment, behind side panel trim


Pin Arrangements, through model year 2014

A - Towing Recognition Control Module -J345-

B - 12-Pin Connector -T12n- , blue, Trailer Coupling -Locked- Indicator Lamp -K226- , Trailer Coupling -Unlocked - Indicator Lamp -K227-

C - 12-Pin Connector -T12m- , red

D - 16-Pin Connector -T16h- , black, to Trailer Socket -U10- , Lock Bolt Contact Switch -F355-

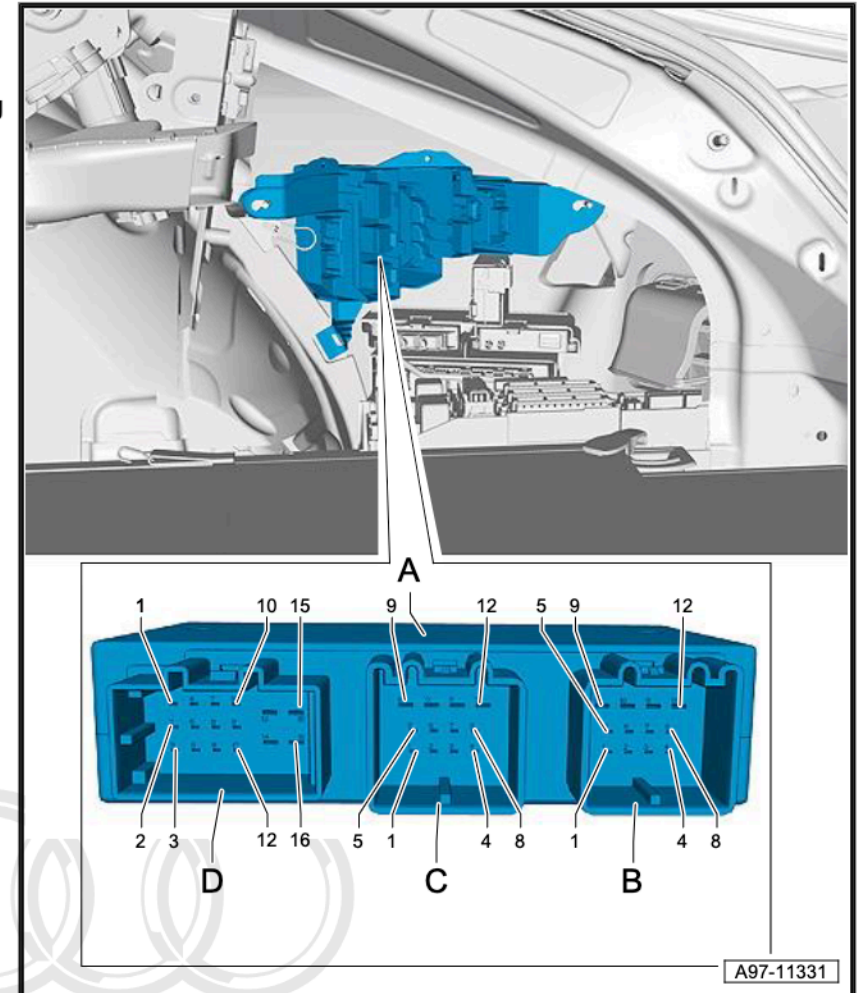

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Pin Arrangements, from model year 2015


1 - Towing Recognition Control Module -J345-

A - 24-Pin Connector -T24a- , black

B - 6-Pin Connector -T6ce- , black

C - 10-Pin Connector -T10bh- , black

D - 10-Pin Connector -T10bi- , red

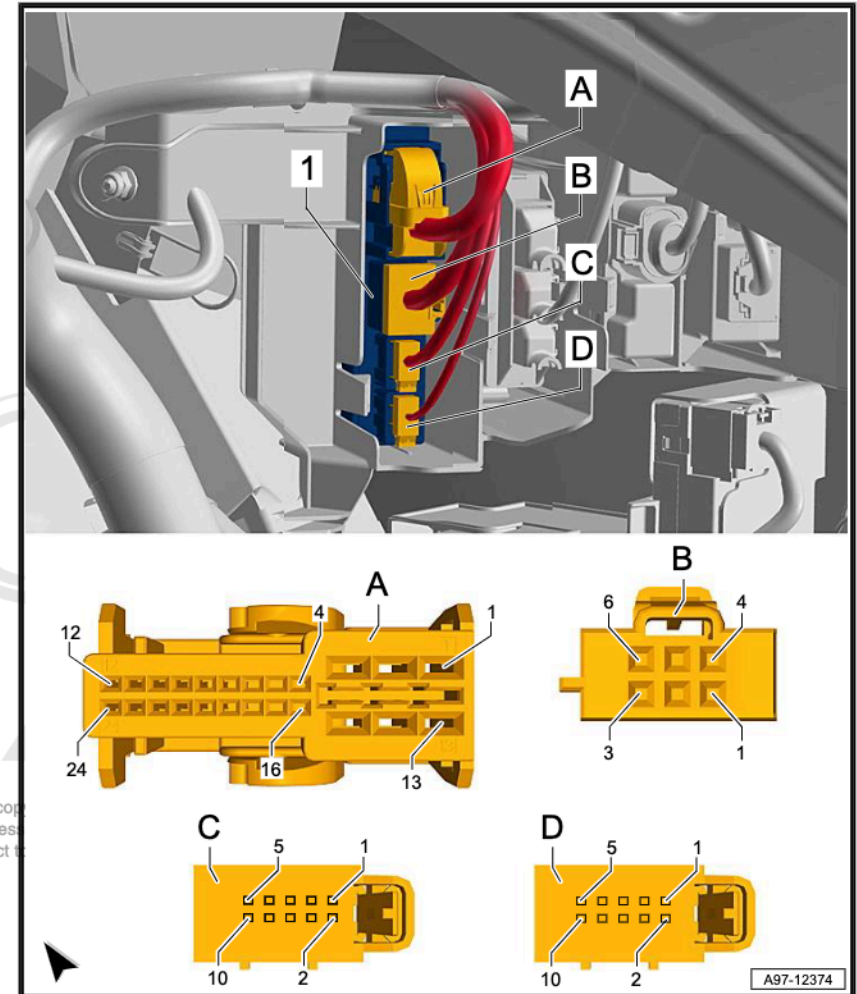

Pin Arrangements Towing Recognition Control Module -J345-

-T24a- (A)	Designation	-T24a- (A)	Designation
1	Trailer Socket -U10-13-Pin Connector -T13a-	13	
2	Trailer Socket -U10-13-Pin Connector -T13a-	14	

-T24a- (A)	Designation		-T24a- (A)	Designation
3	Trailer Socket -U10- 13-Pin Connector -T13a-		15	Trailer Socket -U10- 13-Pin Connector -T13a-
4			16	
5	Lock Bolt Contact Switch -F355-		17	
6			18	Trailer Socket -U10- 13-Pin Connector -T13a-
7	Lock Bolt Contact Switch -F355-		19	Trailer Socket -U10- 13-Pin Connector -T13a-
8			20	
9			21	
10	Lock Bolt Contact Switch -F355-		22	
11			23	Trailer Socket -U10- 13-Pin Connector -T13a-
12	Trailer Socket -U10- 13-Pin Connector -T13a-		24	Trailer Socket -U10- 13-Pin Connector -T13a-

Back to overview ⇒ [page 1](#) .

## 1.7 Parking Aid Control Module -J446-

In right luggage compartment, behind side panel trim -A-.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.





A - Parking Aid Control Module -J446-

B - 16-Pin Connector -T16i- , brown

C - 12-Pin Connector -T12w- , black


D - 12-Pin Connector -T12q- , brown



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

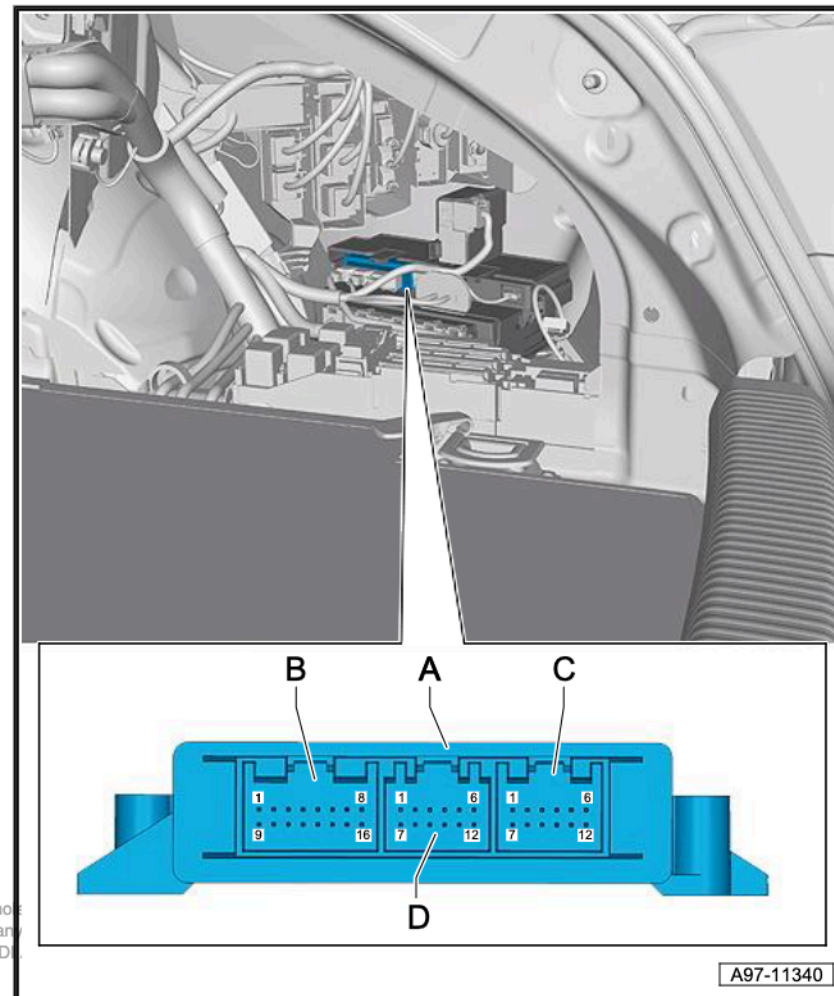

Back to overview [⇒ page 1](#) .

## 1.8 Parallel Parking Assistance Control Module -J791-

In right luggage compartment, behind side panel trim -A-.


A - Parallel Parking Assistance Control Module -J791-

B - 16-Pin Connector -T16i- , brown

C - 12-Pin Connector -T12w- , black

D - 12-Pin Connector -T12q- , brown

Protected by copyright  
permitted only  
with respect

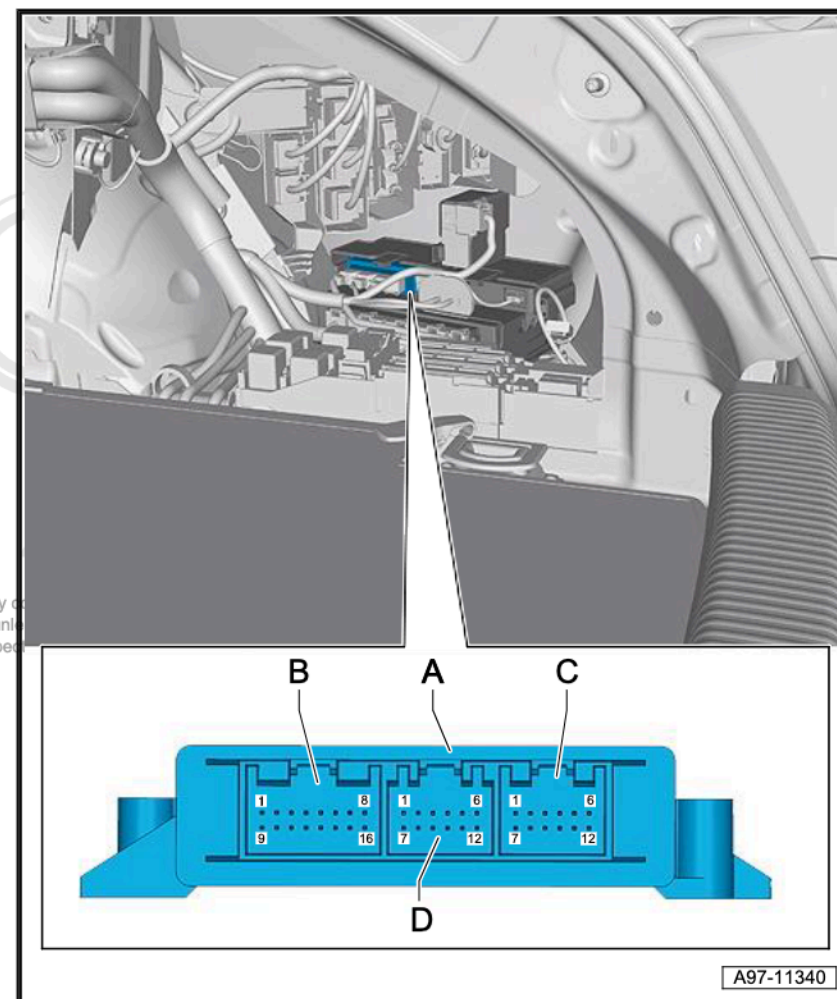

Back to overview ⇒ [page 1](#) .

## 1.9 Level Control System Control Module -J197-

In right luggage compartment, behind side panel trim -1-.

A - Level Control System Control Module -J197-


B - 9-Pin Connector -T9a- , gray

C - 18-Pin Connector -T18a- , gray

D - 15-Pin Connector -T15a- , purple

E - 12-Pin Connector -T12r- , green

F - 6-Pin Connector -T6w- , blue

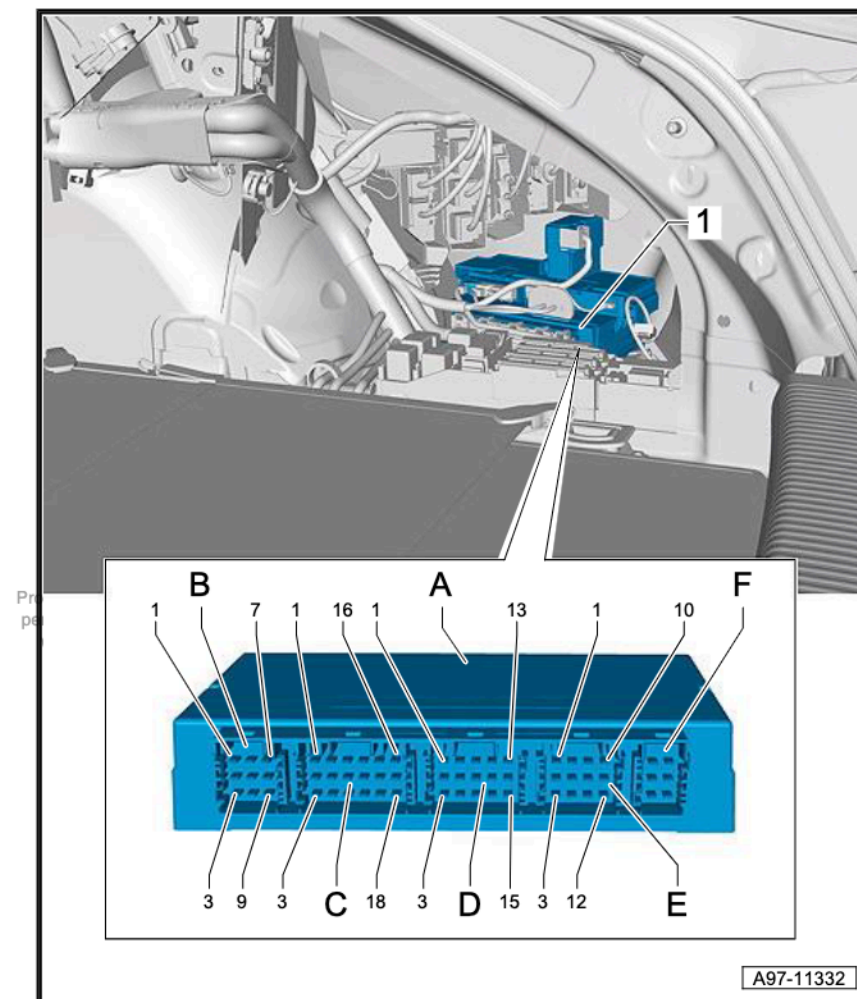

Back to overview ⇒ [page 1](#) .

## 1.10 Electronic Damping Control Module -J250-

In right luggage compartment, behind side panel trim -1-.

A - Electronic Damping Control Module -J250-


B - 9-Pin Connector -T9a- , gray

C - 18-Pin Connector -T18a- , gray

D - 15-Pin Connector -T15a- , purple

E - Not used

F - Not used

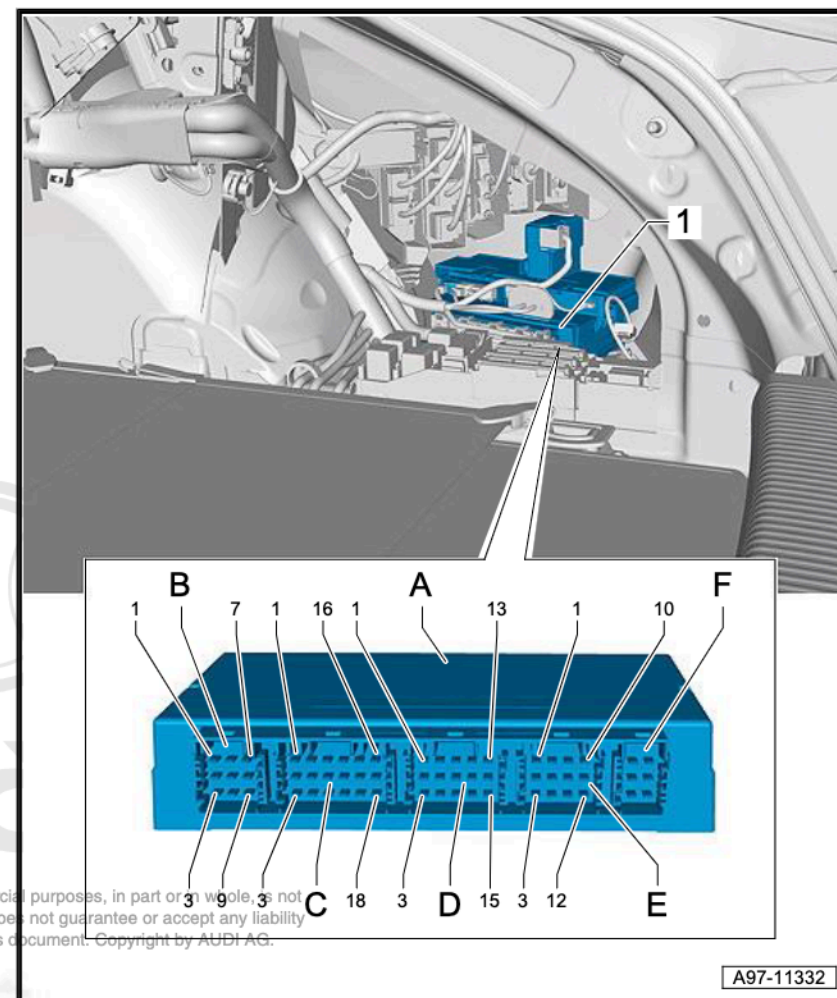


Back to overview [⇒ page 1](#) .

## 1.11 All-Wheel Drive Control Module -J492-

In right luggage compartment, in luggage compartment well -A-.

A - All-Wheel Drive Control Module -J492-

B - 47-Pin Connector -T47a- , black

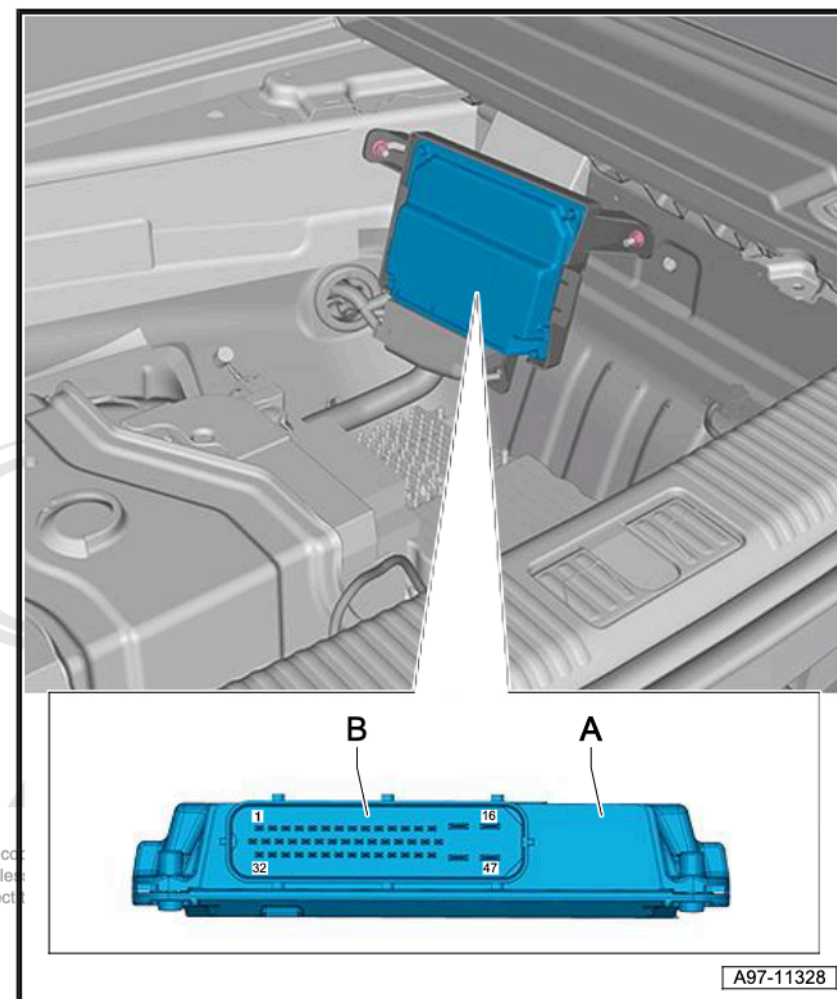




Back to overview ⇒ [page 1](#) .

## 1.12 Voltage Stabilizer -J532-

In right luggage compartment, in luggage compartment well -A-.

A - Voltage Stabilizer -J532-

B - 12-Pin Connector -T12p- , black

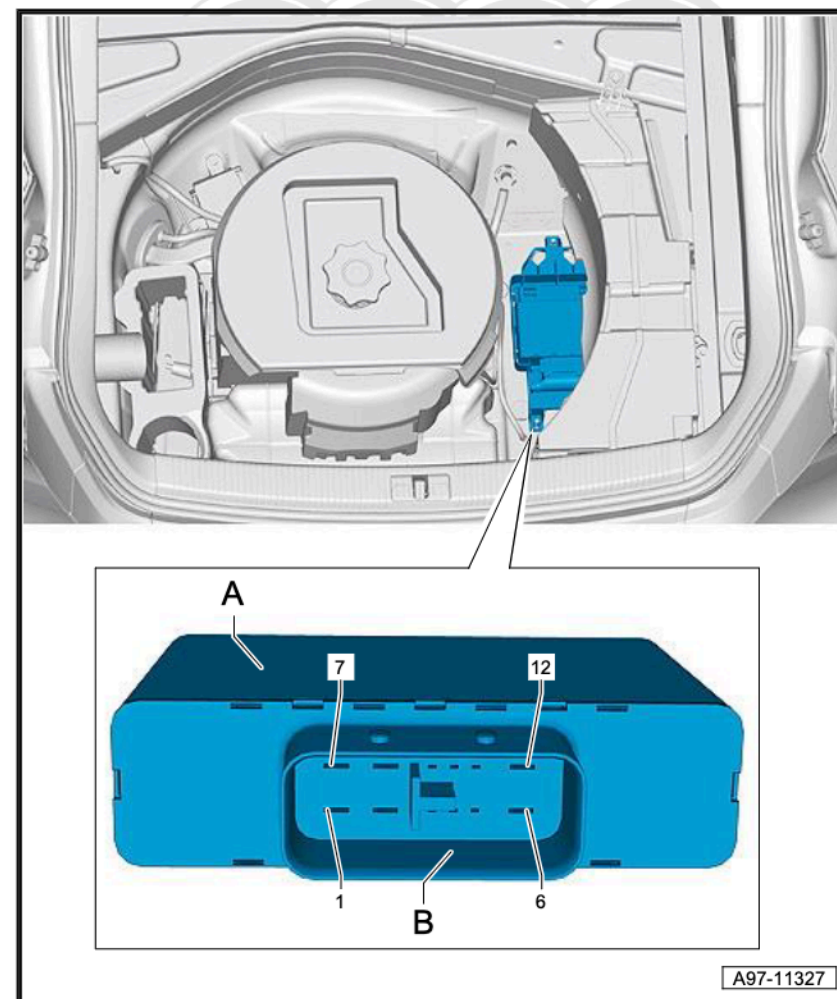


Back to overview ⇒ [page 1](#) .

## 1.13 Electro-Mechanical Parking Brake Control Module -J540-

In right luggage compartment, behind side panel trim -A-.

A - Electro-Mechanical Parking Brake Control Module -J540-

B - 30-Pin Connector -T30a- , black

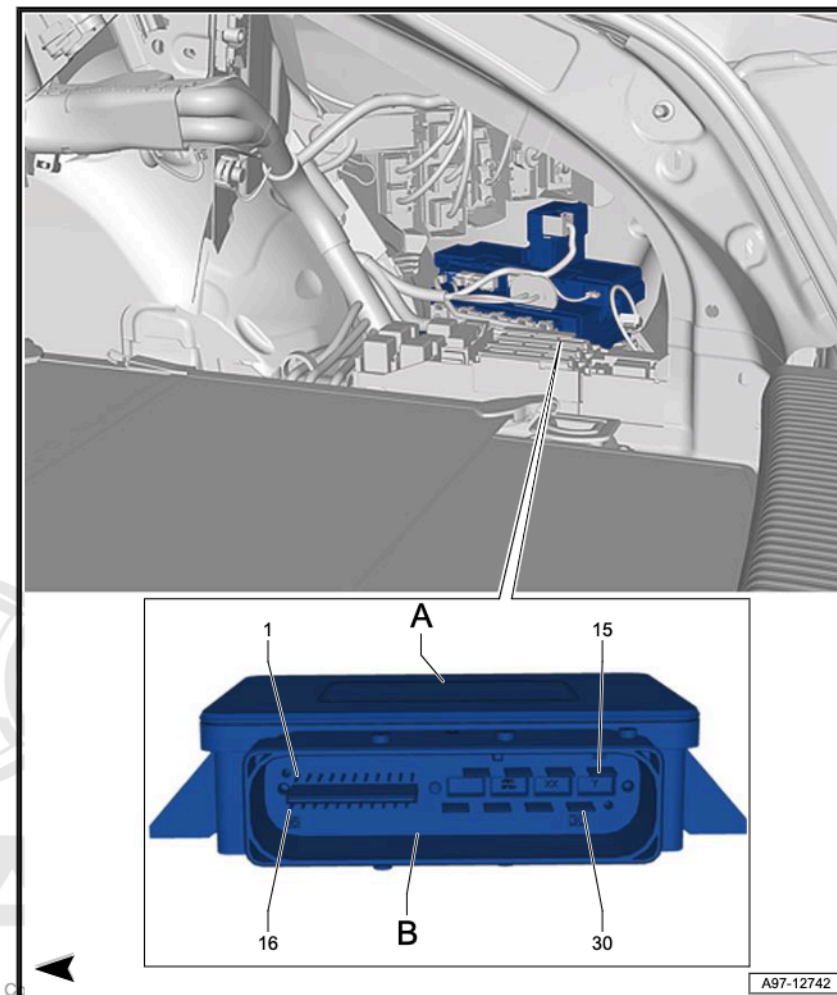

Protected by copyright. Copying or reproduction in any form is prohibited without the written permission of Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG.

A97-12742

Back to overview ⇒ [page 1](#) .

## 1.14 Left Rear Door Control Module -J388-


In left rear door -A-.

A - Left Rear Door Control Module -J388-

A2 - 16-Pin Connector -T16n- , black

A3 - 20-Pin Connector -T20g- , black

A4 - Not used

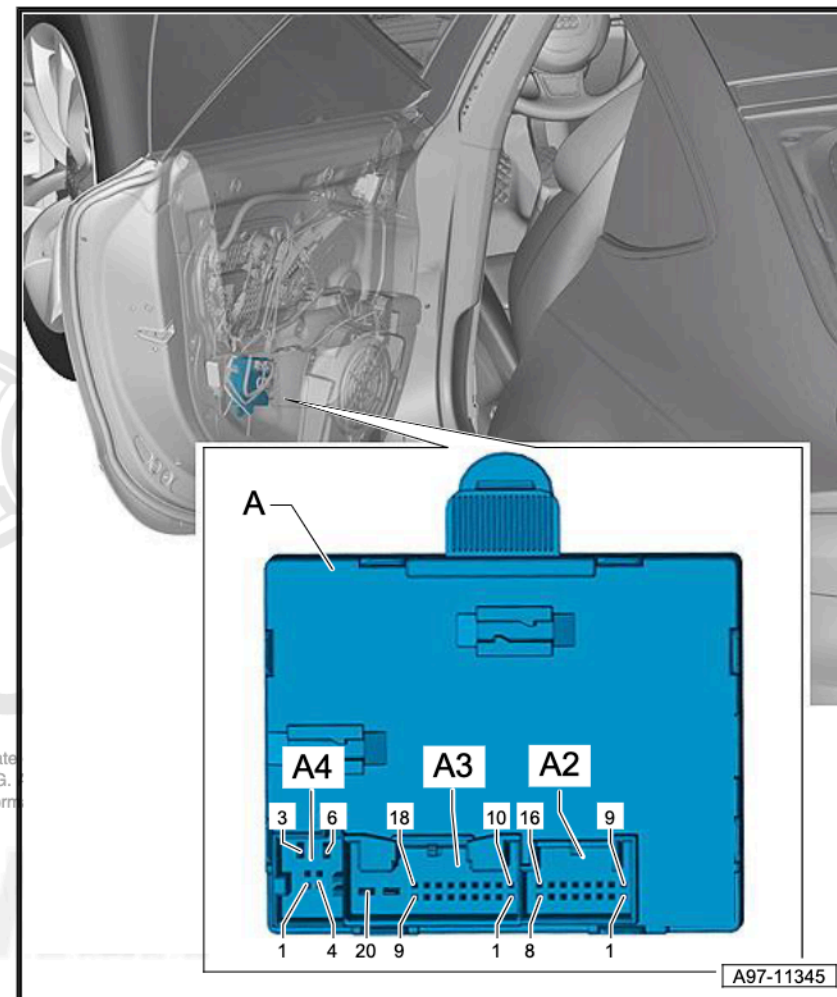

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. with respect to the correctness of information.

Back to overview ⇒ [page 1](#) .

## 1.15 Right Rear Door Control Module -J389-


In right rear door -A-.

A - Right Rear Door Control Module -J389-

A2 - 16-Pin Connector -T16o- , black

A3 - 20-Pin Connector -T20h- , black

A4 - Not used

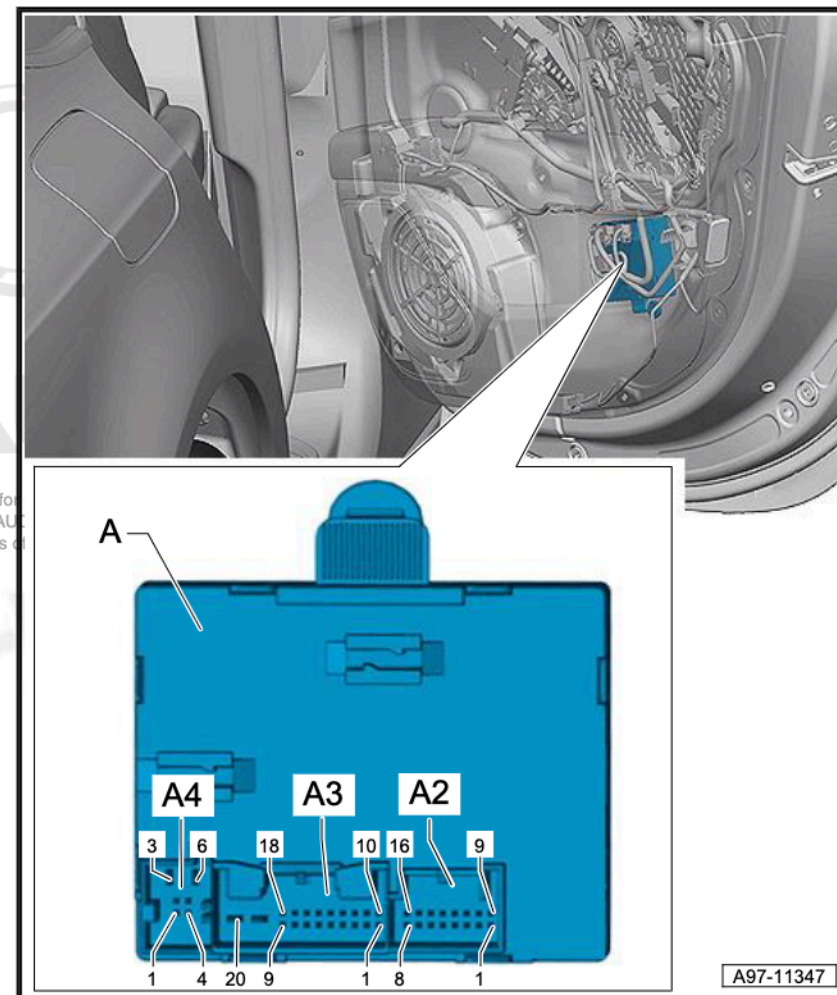

Back to overview ⇒ [page 1](#) .

## 1.16 Driver's Door Control Module -J386-

In front left door, left-hand drive.

In front right door, right-hand drive.



Note

*Illustration shows left-hand drive.*



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin



A - Driver's Door Control Module -J386-

A1 - 32-Pin Connector -T32k- , blue

A2 - 16-Pin Connector -T16l- , black

A3 - 20-Pin Connector -T20e- , black


A4 - 6-Pin Connector -T6as- , black



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in full, is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © 2019 Audi AG

erWin

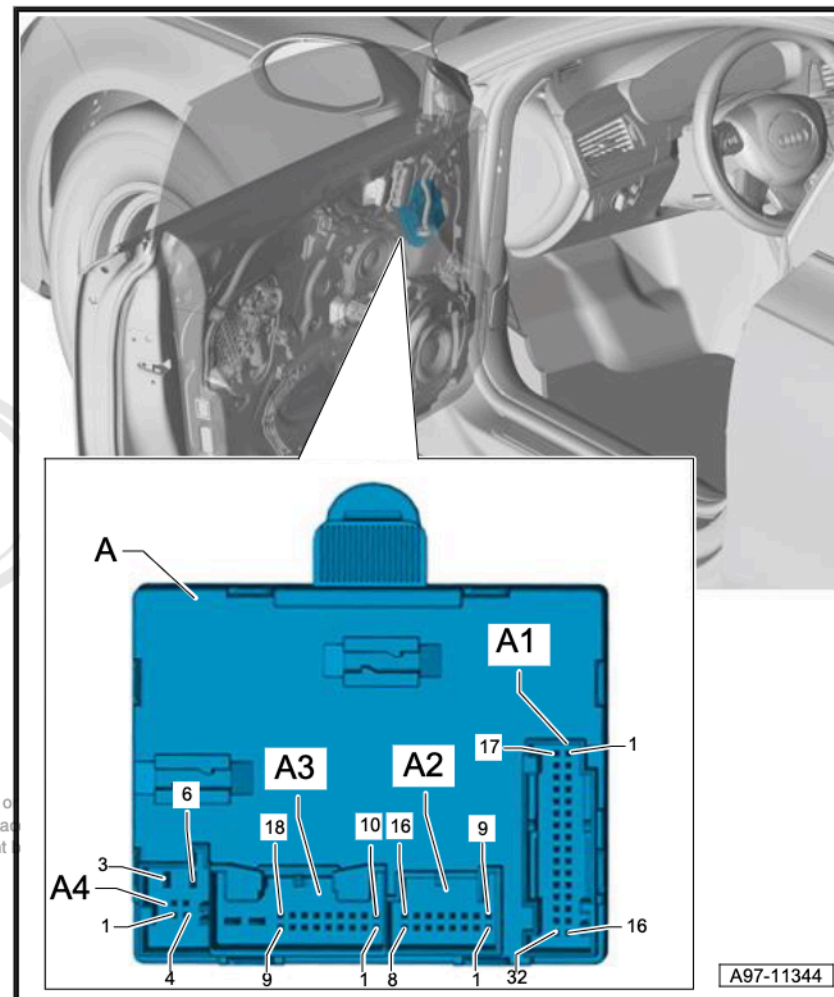

Back to overview ⇒ [page 1](#) .

## 1.17 Front Passenger's Door Control Module -J387-

In front right door, left-hand drive.

In front left door, right-hand drive.



Note

*Illustration shows left-hand drive.*

A - Front Passenger's Door Control Module -J387-


A1 - 32-Pin Connector -T32l- , blue

A2 - 16-Pin Connector -T16m- , black

A3 - 20-Pin Connector -T20f- , black

A4 - 6-Pin Connector -T6at- , black

Protected by copyright. Copying for private or  
permitted unless authorised by AUDI AG. All  
with respect to the correctness of informat

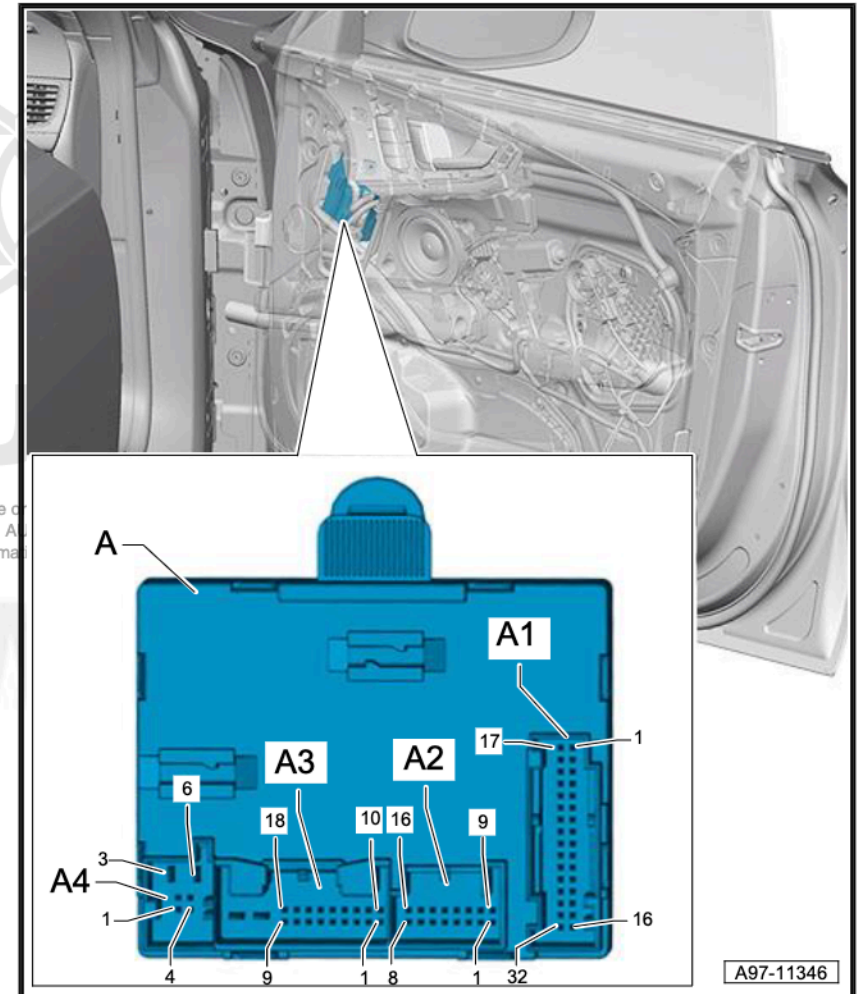

Back to overview ⇒ [page 1](#) .


## 1.18 Data Bus On Board Diagnostic Interface -J533-

Below rear seat -A-.

A - Data Bus On Board Diagnostic Interface -J533-

B - 32-Pin Connector -T32b- , black

C - 2-Pin Connector -T2aq- , MOST-Bus, black

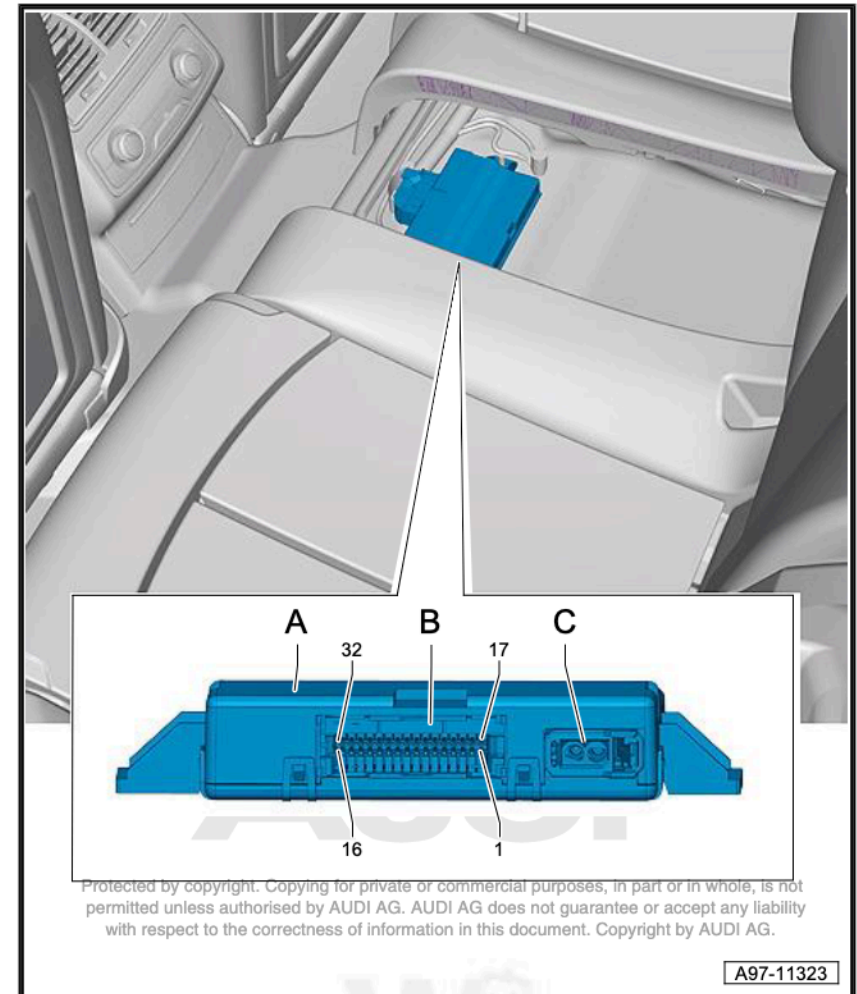

Back to overview ⇒ [page 1](#) .

## 1.19 Rear A/C Display Control Head -E265-

In the rear center console -B-.


A - 3 Pin Connector -T3r- , black

B - Rear A/C Display Control Head -E265-

- ☐ with Left Rear Heated Seat Regulating Switch -E128- , Right Rear Heated Seat Regulating Switch -E129-

C - 20-Pin Connector -T20a- , black

Protected by copyright. Copying  
permitted unless authorised by  
with respect to the correct

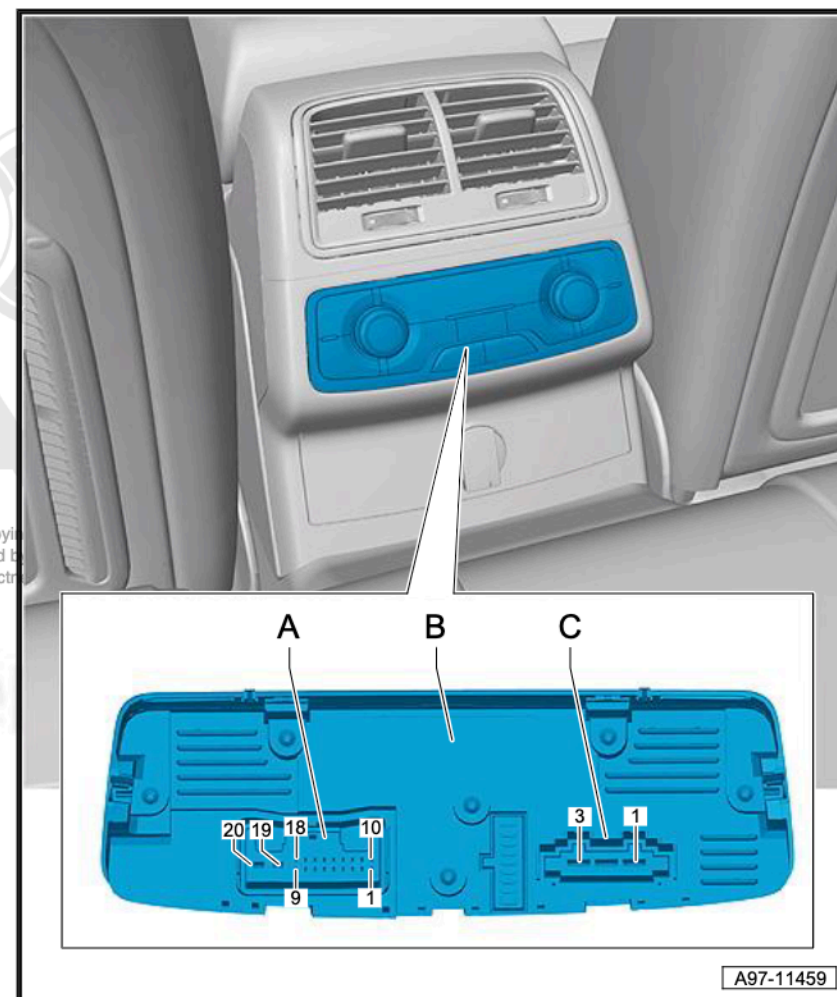

Back to overview ⇒ [page 1](#) .

## 1.20 Door Closing Assist Control Module -J657-

Below trim apron rail -A-.

A - Door Closing Assist Control Module -J657-

- ❑ with Rear Lid Closing Assist Motor -V382- , Rear Lid Opening Assist Unlock Stop Switch -F332- , Rear Lid Closing Assist Lock Stop Switch -F333-


B - 5-Pin Connector -T5ag- , black



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

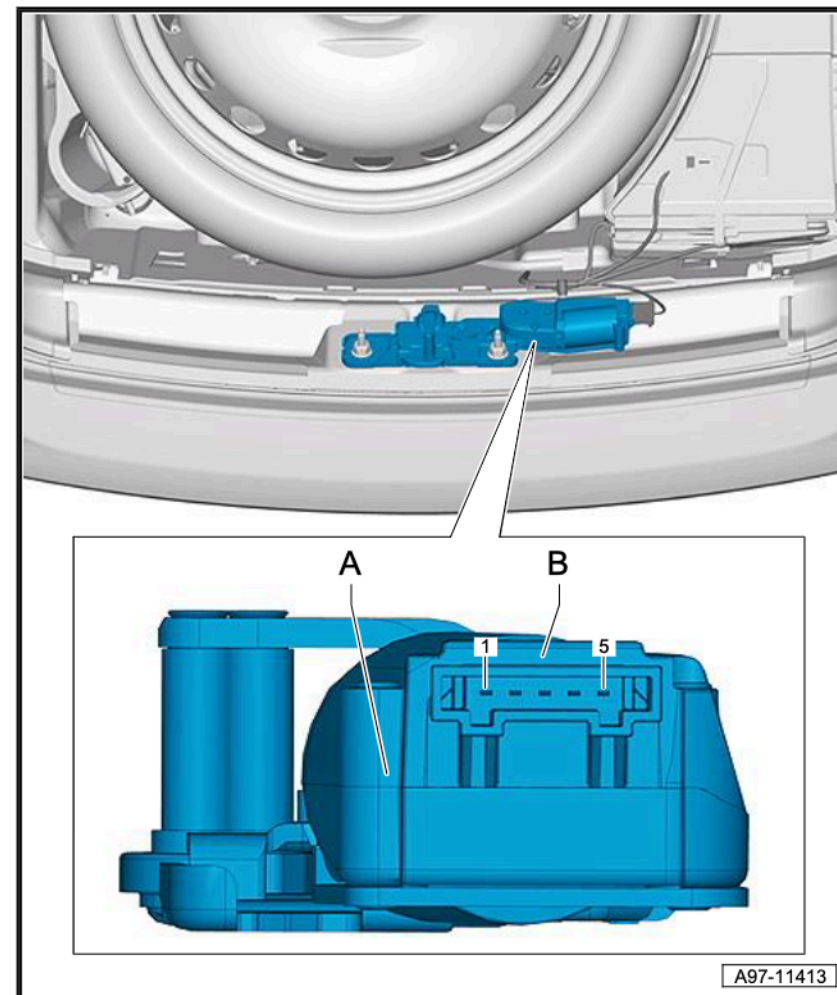



Back to overview ⇒ [page 1](#) .

## 1.21 Lane Change Assistance Control Module -J769-

In right rear bumper trim -A-.

A - Lane Change Assistance Control Module -J769-


B - 12-Pin Connector -T12t- , black



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

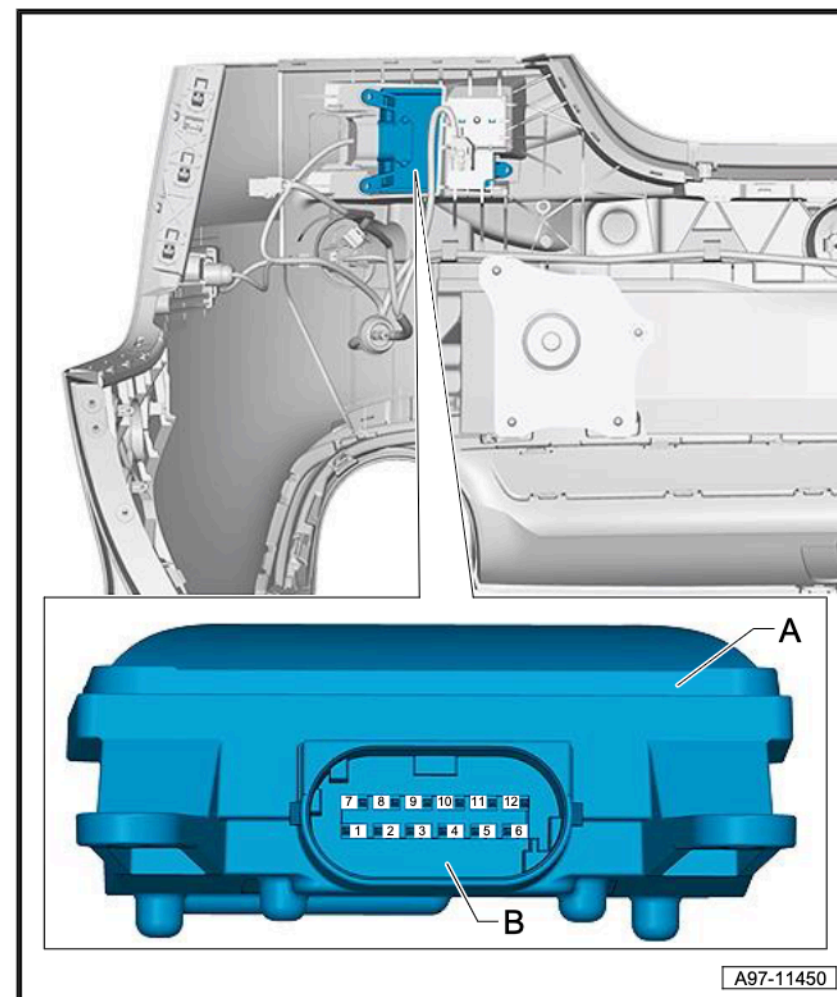



Back to overview ⇒ [page 1](#) .


## 1.22 Lane Change Assistance Control Module 2 -J770-

In left rear bumper trim -A-.

A - Lane Change Assistance Control Module 2 -J770-

B - 12-Pin Connector -T12u- , black

Protected by copyright. Copying for private or commercial purposes, in part or in full, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © 2020 Audi AG

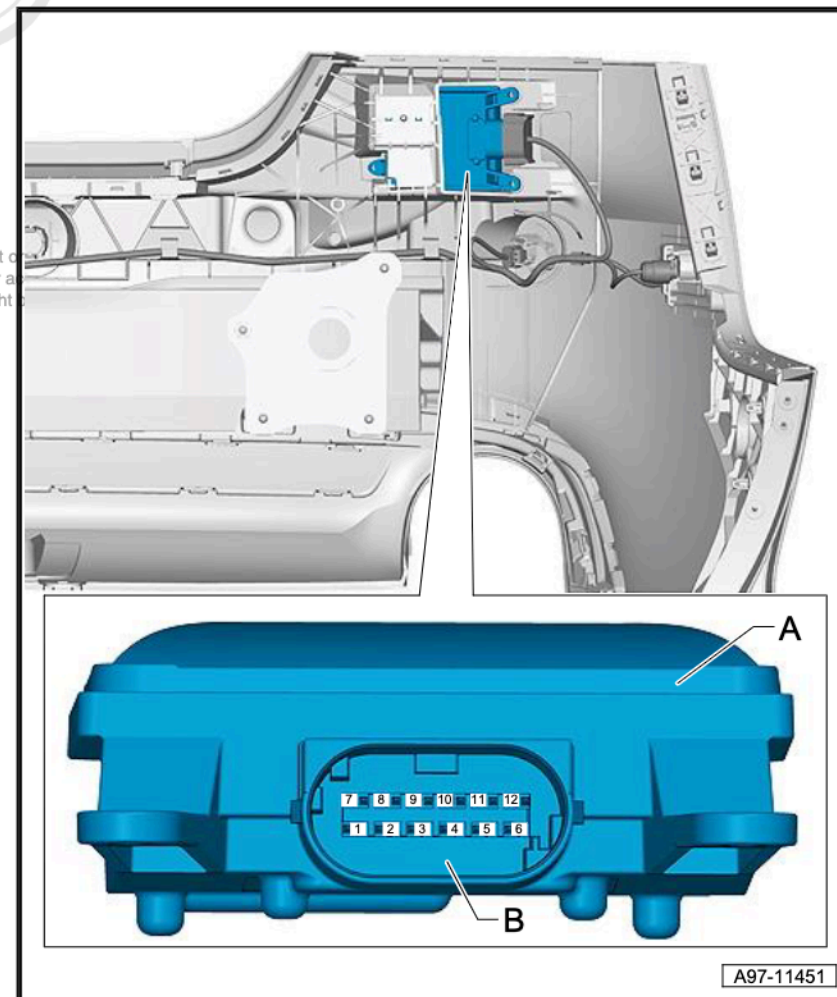

Back to overview ⇒ [page 1](#) .

## 1.23 Auxiliary Heater RF Receiver -R64-


In right luggage compartment, behind side panel trim -A-.

A - Auxiliary Heater RF Receiver -R64-

B - 2-Pin Connector -T2cv- , to Roof Antenna -R216-

C - 6-Pin Connector -T6v- , blue

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is prohibited without the written permission of Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG.

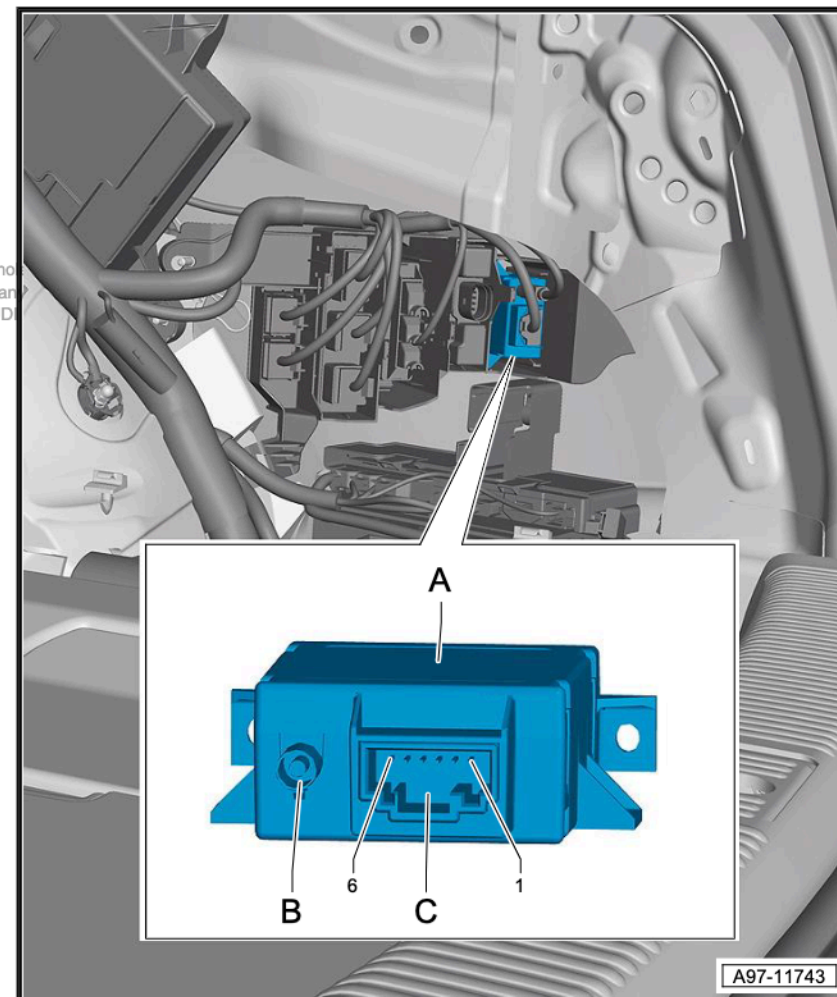

A97-11743

Back to overview ⇒ [page 1](#) .

## 1.24 Vehicle positioning system interface control module -J843-


In right luggage compartment, behind side panel trim -A-.

A - Vehicle positioning system interface control module -J843-

B - Not used

C - 12-Pin Connector -T12o- , brown

D - Not used

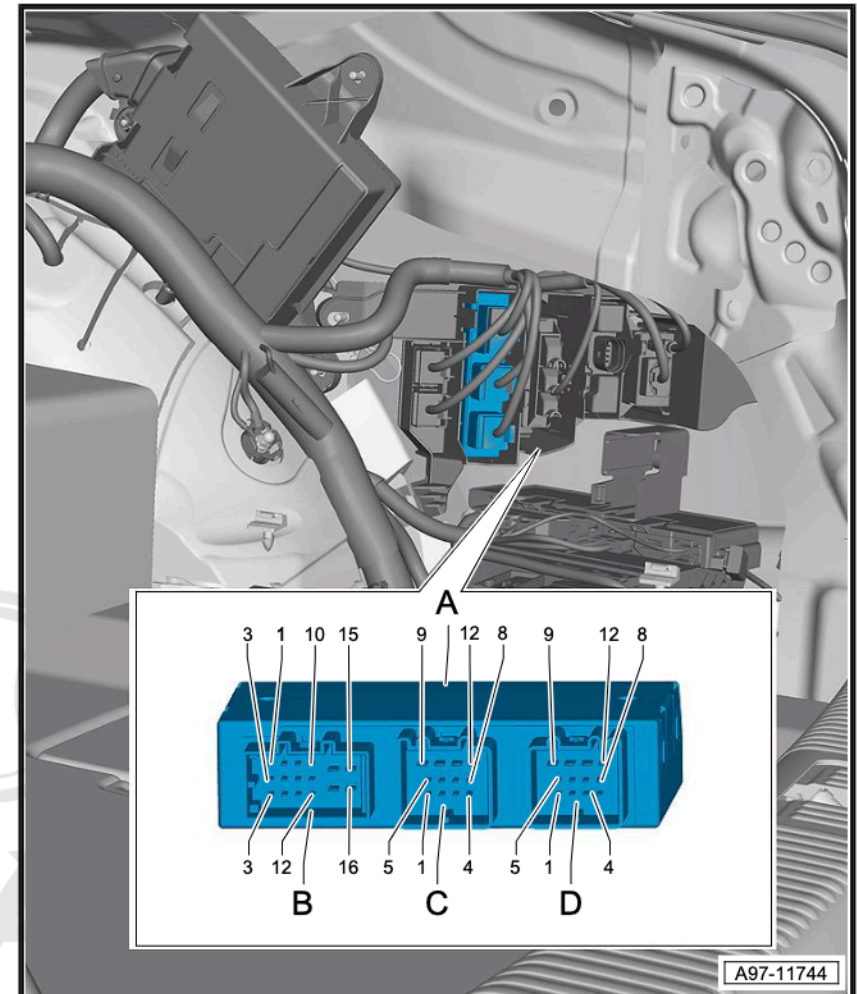

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Back to overview ⇒ [page 1](#) .

## 1.25 Engine Sound Generator Control Module -J943-

⇒ ["1.25.1 Engine Sound Generator Control Module J943 , Models without Hybrid Drive", page 32](#)

⇒ ["1.25.2 Engine Sound Generator Control Module J943 , Models with Hybrid Drive, from July 2017", page 33](#)

### 1.25.1 Engine Sound Generator Control Module -J943- , Models without Hybrid Drive

In right luggage compartment, behind side panel trim -A-.


A - Engine Sound Generator Control Module -J943-

B - 8-Pin Connector -T8ax- , black



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

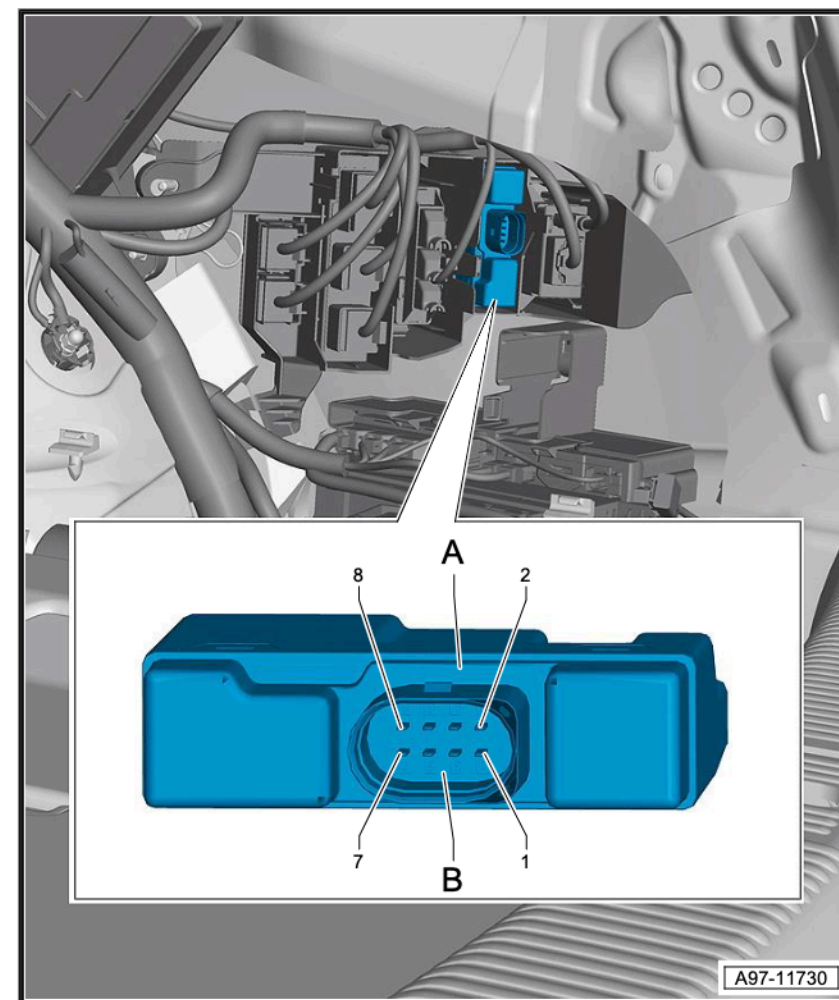

Back to overview ⇒ [page 1](#) .

## 1.25.2 Engine Sound Generator Control Module -J943- , Models with Hybrid Drive, from July 2017

In right center luggage compartment before Hybrid Battery Unit -AX1- .

1 - Engine Sound Generator Control Module -J943-


A - 12-Pin Connector -T12ar- , black



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

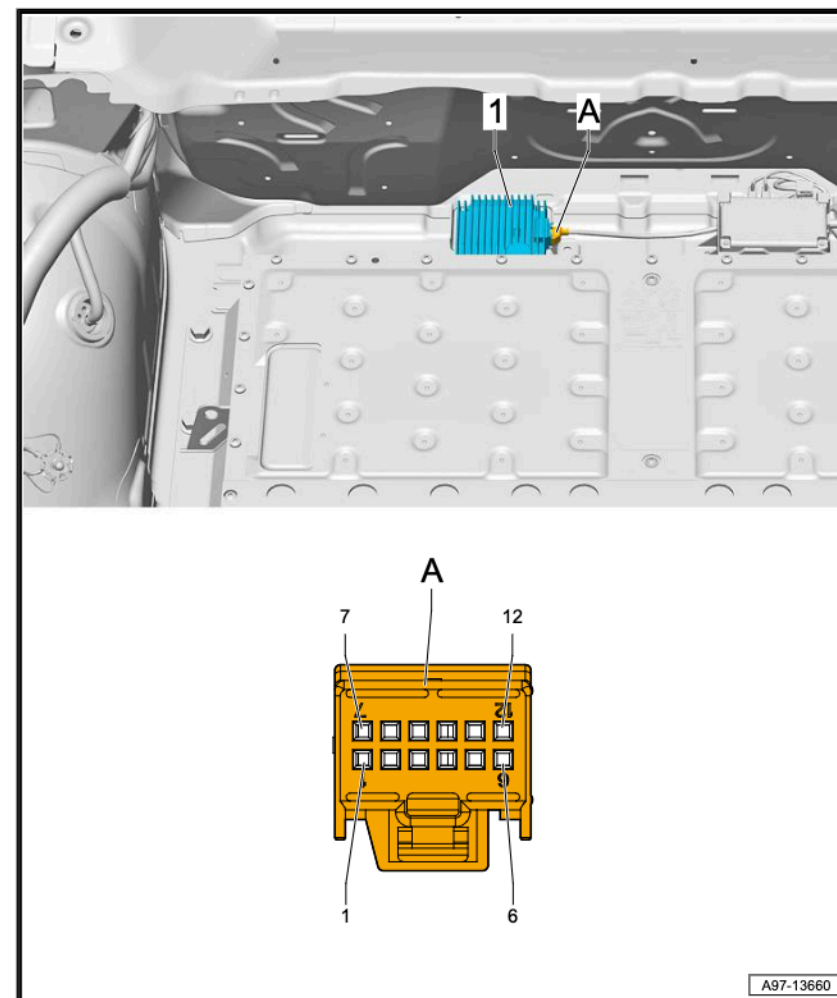



Back to overview ⇒ [page 1](#) .

## 1.26 Battery Monitoring Control Module -J367-

In luggage compartment on Battery -A- -4-.


- 1 - Battery positive connector
- 2 - Battery -A-
- 3 - 2-Pin Connector -T2a- , yellow
- 4 - Battery Monitoring Control Module -J367-



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

erWin

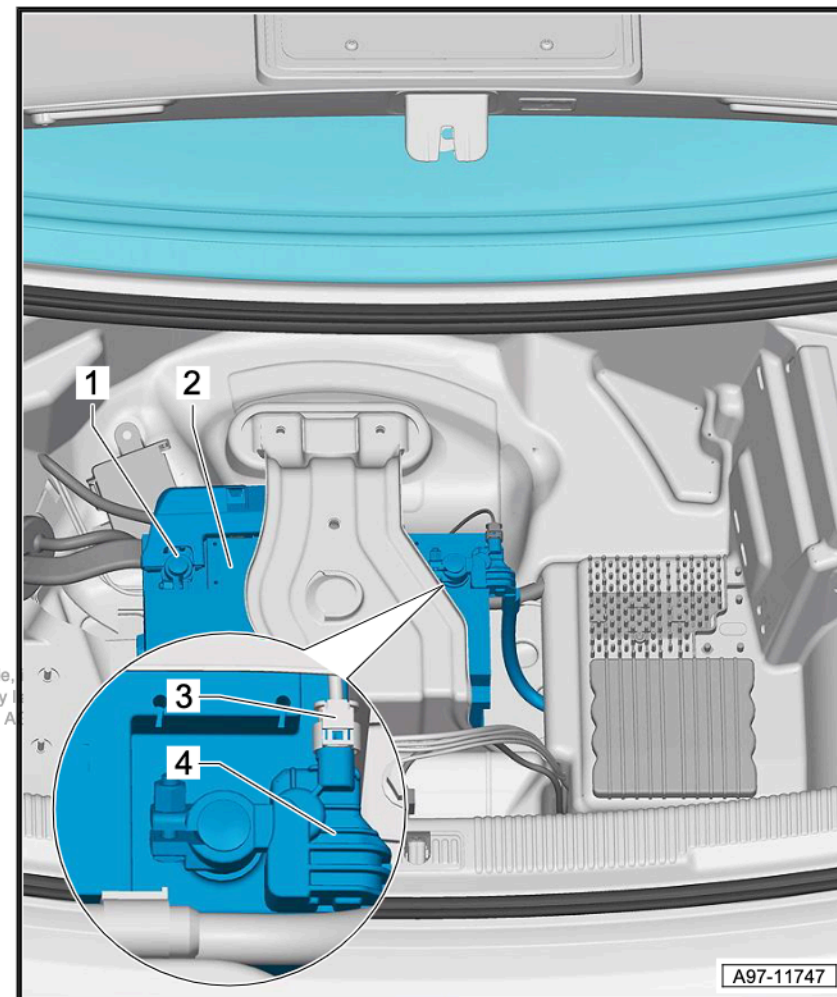





Back to overview ⇒ [page 1](#) .

## 1.27 Seat Heating Control Module -J882-

Below rear seat, left -A-.

A - 16-Pin Connector -T16d- , black

B - Seat Heating Control Module -J882-

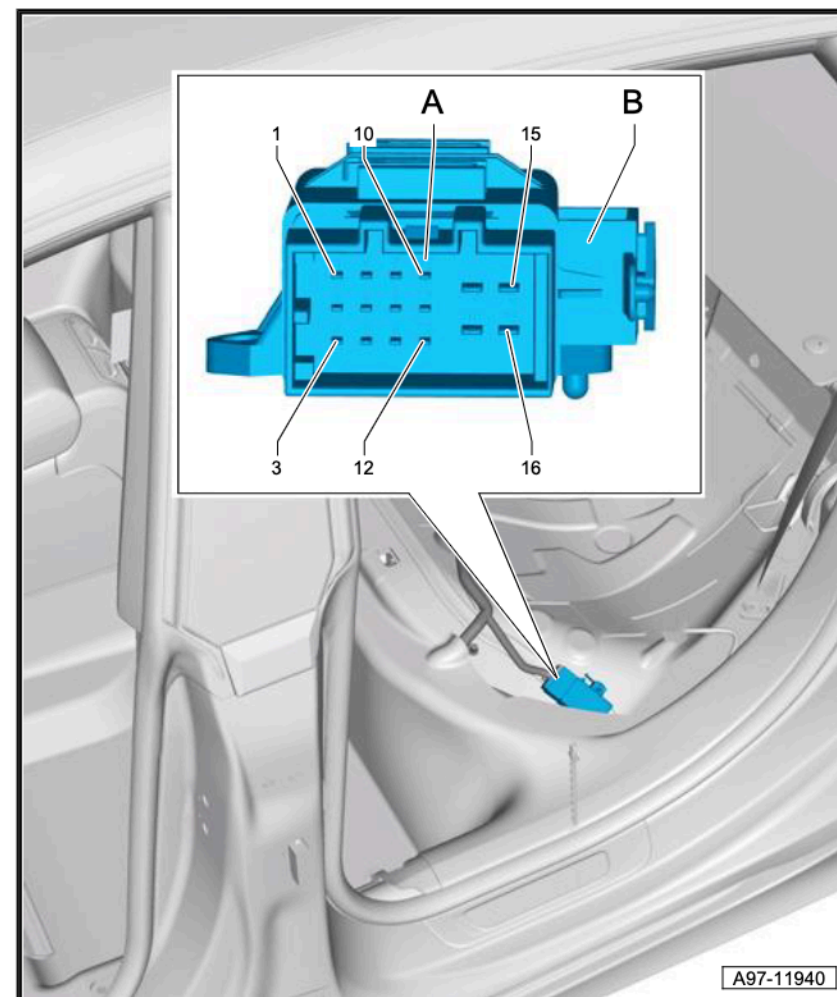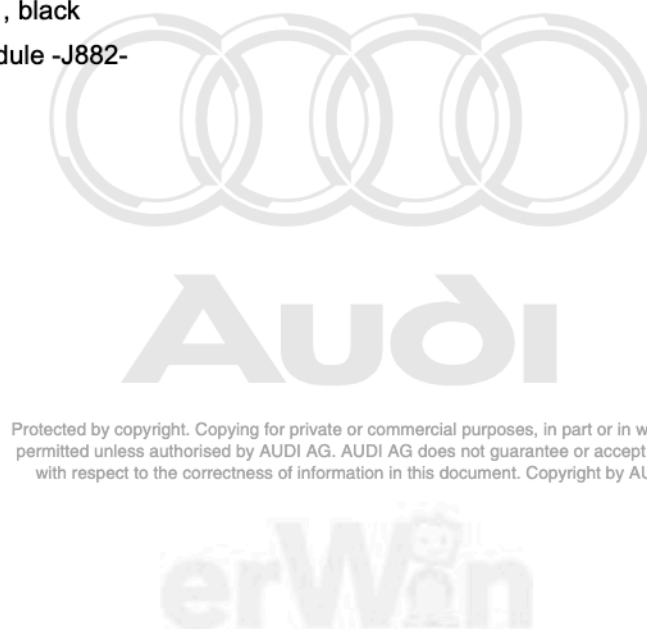

Back to overview ⇒ [page 1](#) .


## 1.28 Fuel Pump (FP) Control Module -J538-

Below rear seat, right, on underbody -A-.

A - 6-Pin Connector -T6ar- , black

B - Fuel Pump (FP) Control Module -J538-

Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information.

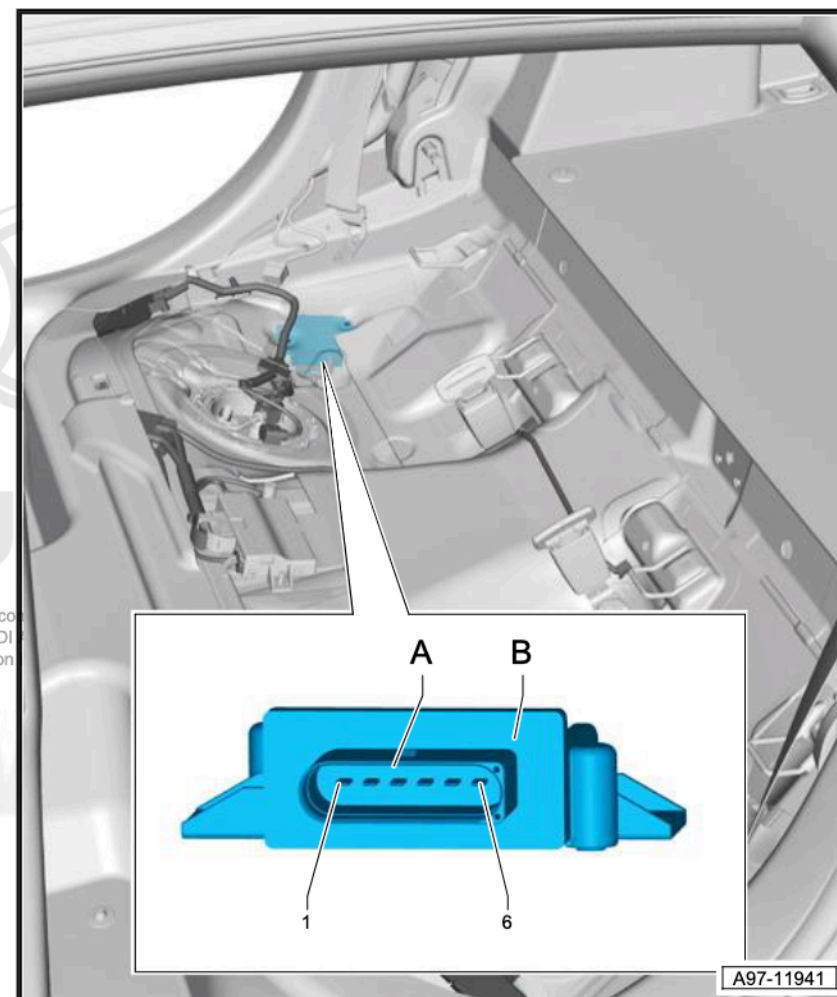

Back to overview ⇒ [page 1](#) .

## 1.29 Fuel Tank Lead Detection Control Module -J909-

On underbody, on tank left -1-.

1 - Fuel Tank Lead Detection Control Module -J909-


❑ 3 Pin Connector -T3s- , black



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

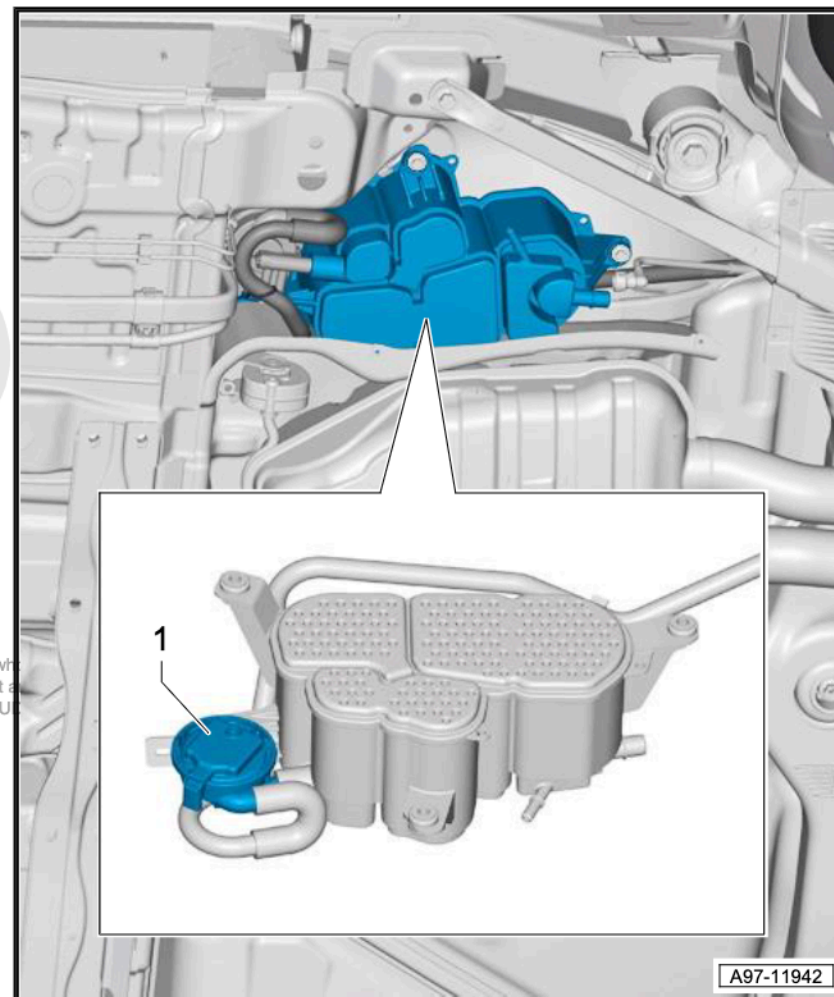

Back to overview ⇒ [page 1](#) .


### 1.30 Roof shade control module -J394- / Sunroof Blind Motor -V260-

On roof, rear -1-.

1 - Roof shade control module -J394- / Sunroof Blind Motor -V260-

A - 10-Pin Connector -T10ar-

Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information in this document.

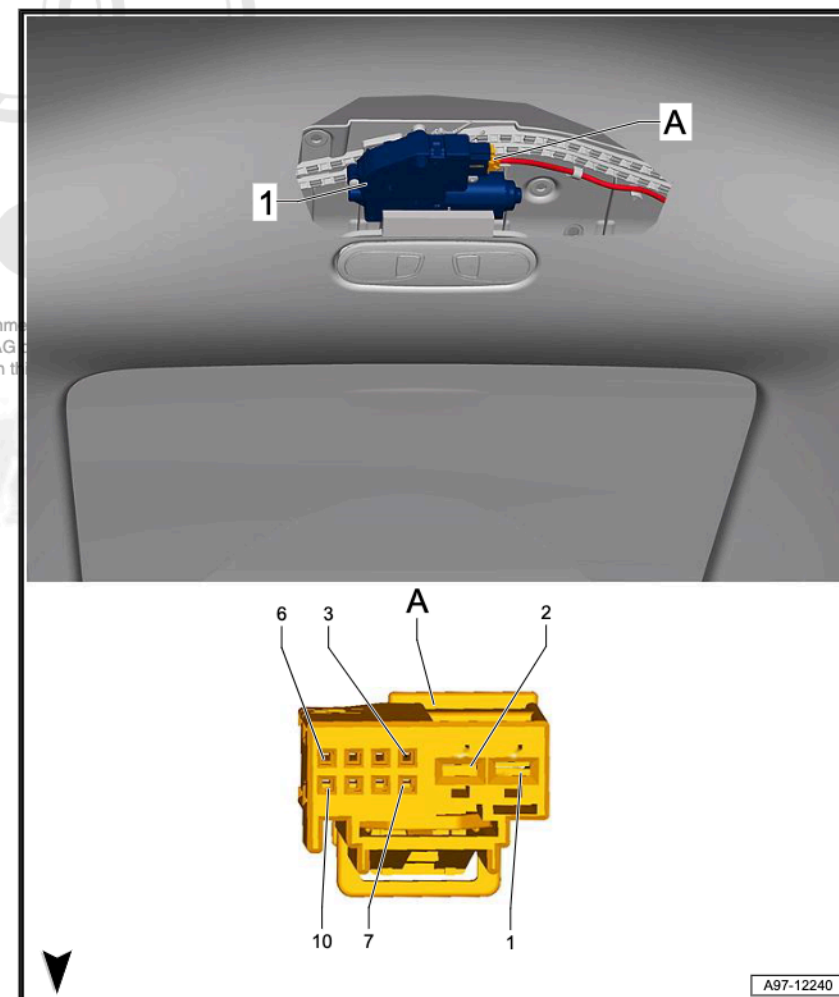

## Pin Arrangements Roof shade control module -J394-

-T10ar- (A)	Designation	-T10ar- (A)	Designation
1	LIN-Bus (B577) LIN-Bus Connection (in roof wiring harness) (B699) LIN-Bus Connection 4 (in main wiring harness) Comfort System Central Control Module -J393-	6	Not used
2		7	Not used
3		8	Bridge to pin 4
4	Bridge to pin 8	9	Terminal 31, to (178) Ground connection (in sunroof wiring harness) (369) Ground Connection 4 (in main wiring harness) (44) Ground Connection (on left lower A-pillar)
5	Folding Sunroof Button 2 -E585-	10	Terminal 30, from Fuse Panel B -SB-

Back to overview ⇒ [page 1](#) .

### 1.31 Air Ionization System Control Module -J897-

On right B-pillar -1-.




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



1 - Air Ionization System Control Module -J897-

A - 6-Pin Connector -T6bp- , black

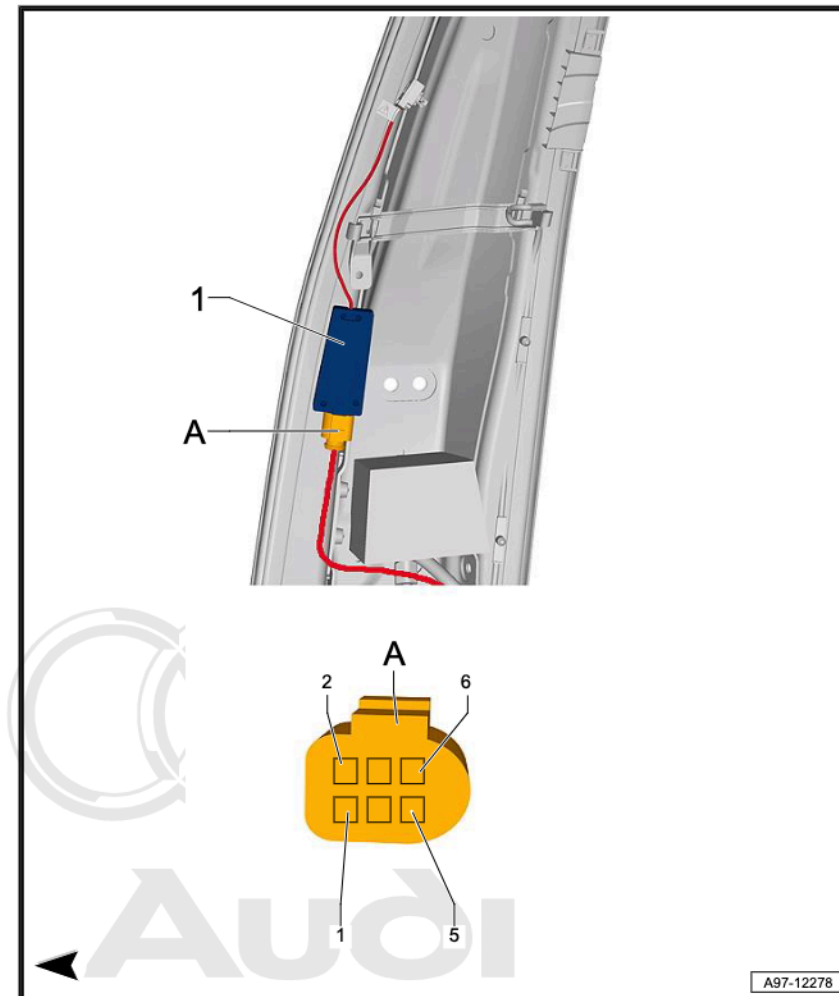

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

#### Pin Arrangements Air Ionization System Control Module -J897-

-T6bp-(A)	Designation	-T6bp-(A)	Designation
1	Terminal 15, from <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">B281</span> Positive connection 5 (15a) in main wiring harness Fuse Panel B -SB-	4	Air ionization system button -E677-



-T6bp-(A)	Designation		-T6bp-(A)	Designation
2	Terminal 31, to <sup>(366)</sup> Ground Connection 1 (in main wiring harness) <sup>(44)</sup> Ground Connection (on left lower A-pillar)		5	Air ionization system button -E677-
3	LIN-Bus, Rear A/C Display Control Head -E265-		6	Air ionization system button -E677-

Back to overview ⇒ [page 1](#) .

### 1.32 Rear lid opener control module -J938-

Behind rear bumper cover -1-.



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

1 - Rear lid opener control module -J938-


A - 4-Pin Connector -T4fh- , black

B - 5-Pin Connector -T5ao- , black

Protected by copyright. Copying for private or commercial purposes is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

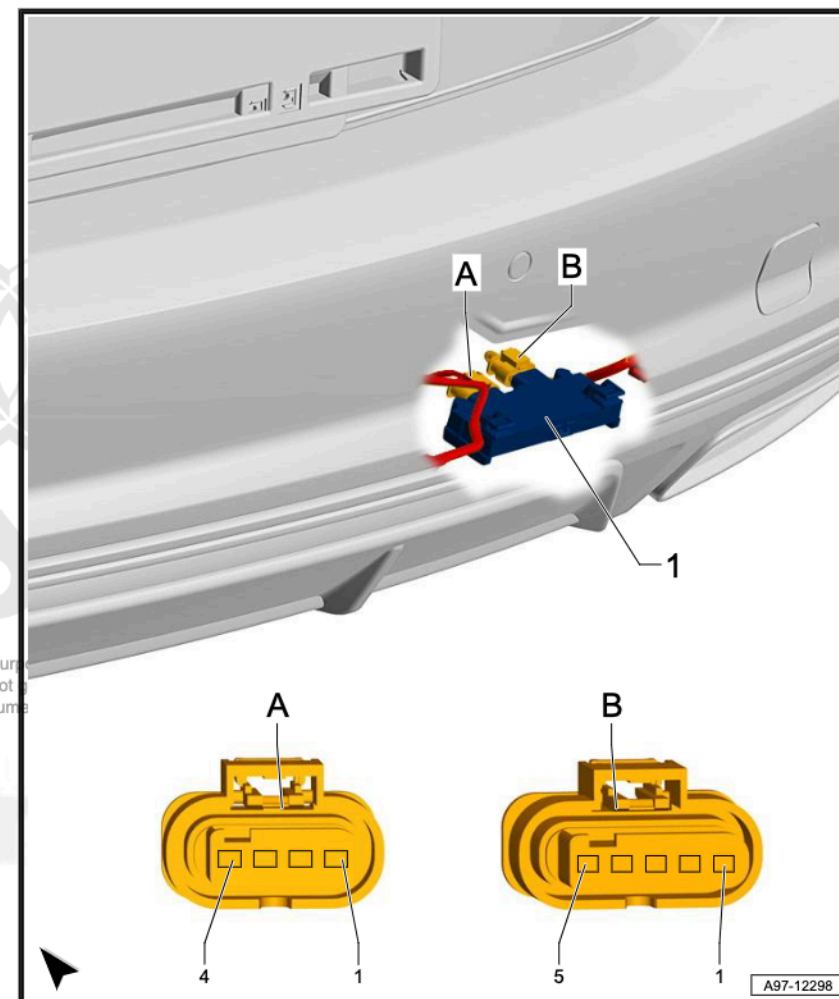

Pin Arrangements Rear lid opener control module -J938-

-T4fh- (A)	Designation	-T5ao- (B)	Designation
1	Terminal 30, from Rear Lid Remote Unlocking Fuse -S195-	1	Power rear lid opener sensor -G750-
2	Terminal 31, to  Ground connection in spare tire well	2	Power rear lid opener sensor -G750-
3	LIN-Bus, to Comfort System Central Control Module -J393-	3	

-T4fh- (A)	Designation		-T5ao- (B)	Designation
4			4	Power rear lid opener sensor 2 -G760-
			5	Power rear lid opener sensor 2 -G760-

Back to overview ⇒ [page 1](#) .

### 1.33 TV Tuner -R78- , from model year 2015

In left luggage compartment, behind side panel trim -1-.



**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

# 1 - TV Tuner -R78-

A - 2-Pin Connector -T2ne- , brown, TV1, Antenna Amplifier 3 -R112- (Sedan)/ Antenna Amplifier -R24- (Avant)

B - 4-Pin Connector -T4as- , green, TV2/TV3, Antenna Amplifier -R24- , Antenna Amplifier 4 -R113- (Sedan)/ Antenna Amplifier 3 -R112- , Antenna Amplifier 4 -R113- (Avant)

C - Not used

D - 2-Pin Connector -T2lq- , MOST-Bus, black


E - 12-Pin Connector -T12af- , black



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness of information in this document. Copyright © 2020 Audi AG

erWin

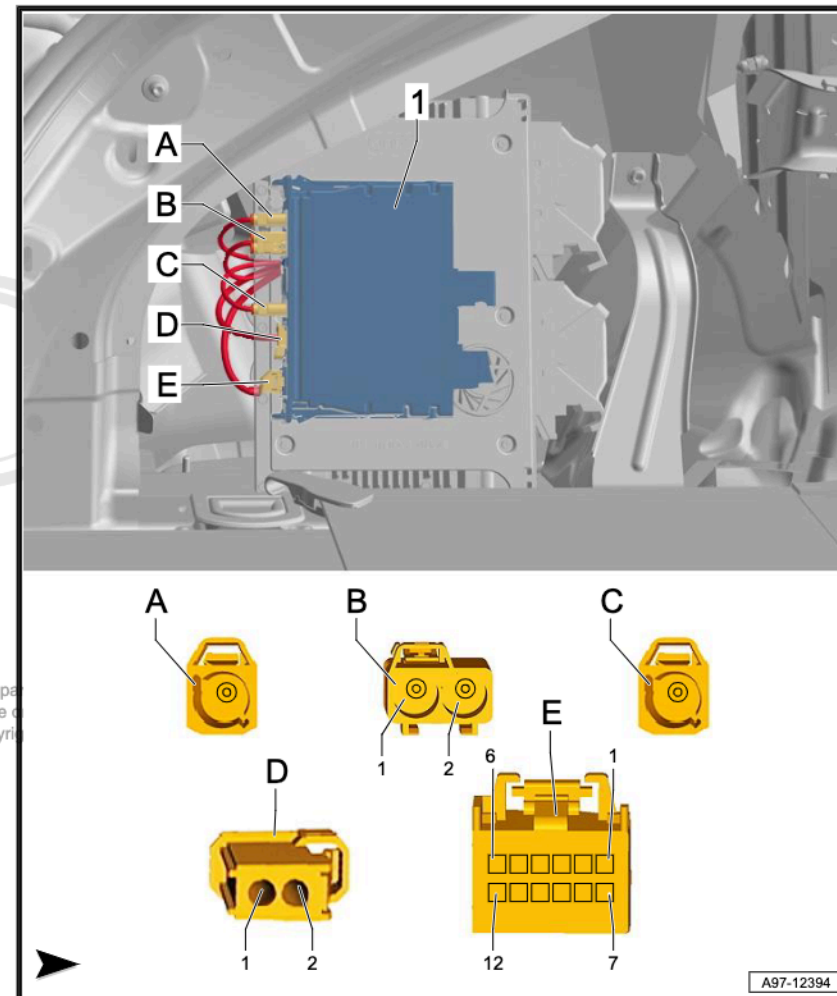

## Pin Arrangements TV Tuner -R78-

-T12af- (E)	Designation	-T12af- (E)	Designation
1	Terminal 30, from Fuse Panel F -SF-	7	Audio out L
2	Terminal 31, to 50 Ground Connection (in left luggage compartment)	8	Audio out R
3	Ringbreak Diagnosis Wire (B444) OBD connection 1 (in main wiring harness)	9	Ground-shielding

-T12af- (E)	Designation		-T12af- (E)	Designation
4	Ground-shielding		10	Audio in L
5	Video out		11	Audio in R
6	Ground-shielding		12	Video in

Back to overview ⇒ [page 1](#) .

## 1.34 Digital Sound System Control Module -J525- , Audi sound system, 9VD, from model year 2015

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

In left luggage compartment, behind side panel trim -1-.



Note

- ◆ The Digital Sound System Control Module -J525- is only installed in conjunction with noise compensation.
- ◆ For Audi sound system (9VD) without noise compensation (EP0), the speakers are connected directly to the control module.

1 - Digital Sound System Control Module -J525-


A - 38-Pin Connector -T38-, black

- Pin arrangements in conjunction with Radio (8DN, 8DP, 8DS) ⇒ [page 46](#)
- Pin arrangements in conjunction with MMI Navigation plus (I8H) ⇒ [page 48](#)

B - 18-Pin Connector -T18i-, black

- Pin arrangements in conjunction with Radio (8DN, 8DP, 8DS) ⇒ [page 46](#)
- Pin arrangements in conjunction with MMI Navigation plus (I8H) ⇒ [page 48](#)

C - 2-Pin Connector -T2ca-, MOST-Bus, black

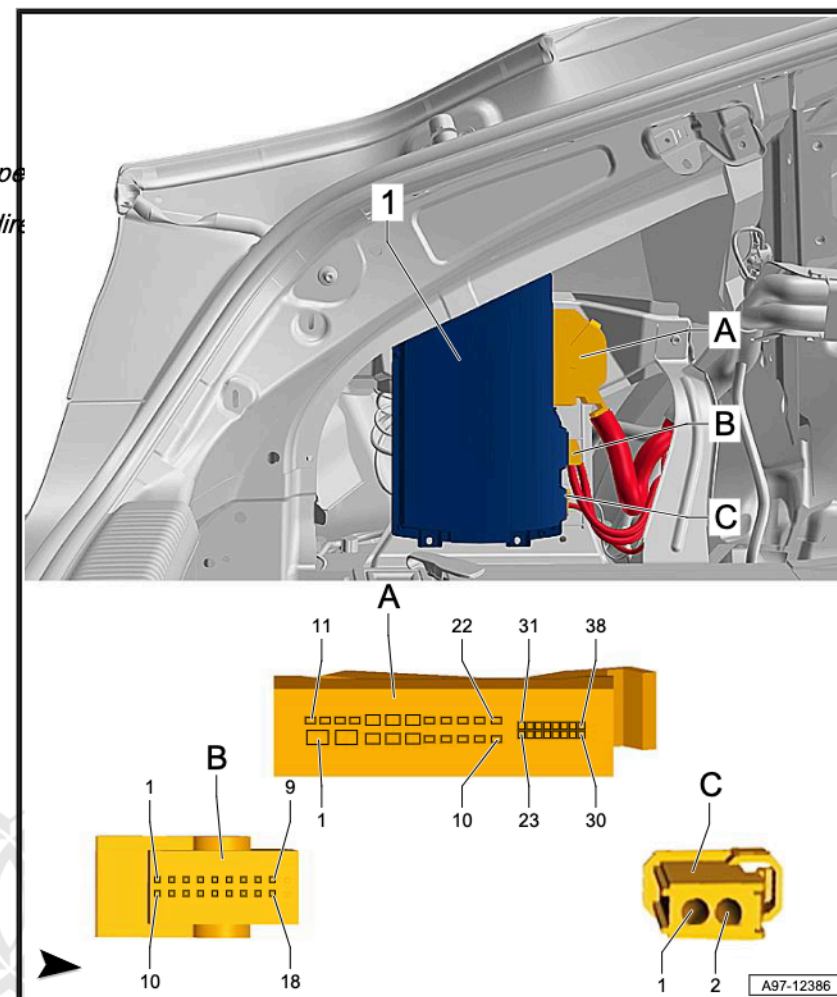

Pin Arrangements Digital Sound System Control Module -J525-, Radio, 8DN, 8DP, 8DS

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from Fuse Carrier 4 -ST4- in Fuse Panel F -SF-	20	Right Front Midrange Speaker -R104-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
2		2	Terminal 31, to (50) Ground Connection (in left luggage compartment) <sup>1)</sup> (729) Ground connection on left rear wheel housing <sup>2)</sup>	21	Right Front Speaker -R3-
3		3	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-	22	Left Front Speaker -R2-
4		4	Left Front Bass Speaker -R21-	23	
5		5	Subwoofer -R211-	24	
6	Noise Reduction Microphone 3 -R287-	6		25	Ringbreak Diagnosis Wire to (B444) OBD Connection 1 (in main wiring harness)
7	Noise Reduction Microphone 3 -R287-	7	Left Front Midrange Speaker -R103-	26	
8	Noise Reduction Microphone 4 -R288-	8	Right Front Midrange Speaker -R104-	27	
9	Noise Reduction Microphone 4 -R288-	9	Right Front Speaker -R3-	28	Ground-shielding for Interior microphone -R74- In the Microphone Unit (in front roof module) -R164-
10	Engine Control Module (ECM) -J623- / Subframe Mount Control Module -J931-	10	Left Front Speaker -R2-	29	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
11	Terminal 31, to (397) Ground Connection 32 (in main wiring harness)	11	Right Front Bass Speaker -R23-	30	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
12		12	Right Front Bass Speaker -R23-	31	Center speaker -R208-
13	Noise Reduction Microphone 2 -R286-	13	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-	32	Center speaker -R208-
14	Noise Reduction Microphone 2 -R286-	14	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-	33	
15		15	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-	34	
16	Noise Reduction Microphone 1 -R285-	16	Left Front Bass Speaker -R21-	35	
17	Noise Reduction Microphone 1 -R285-	17	Subwoofer -R211-	36	
18		18		37	
		19	Left Front Midrange Speaker -R103-	38	

◆ 1) Only sedan

◆ 2) Only Avant

Back to overview ⇒ [page 1](#) .

Pin Arrangements Digital Sound System Control Module -J525- , MMI Navigation plus, I8H

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from Fuse Carrier 4 -ST4- in Fuse Panel F -SF-	20	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-
2		2	Terminal 31, to (50) Ground Connection (in left luggage compartment) <sup>1)</sup> (729) Ground connection on left rear wheel housing <sup>2)</sup>	21	
3		3		22	
4		4	Subwoofer -R211-	23	
5		5		24	
6	Noise Reduction Microphone 3 -R287-	6		25	Ringbreak Diagnosis Wire to (B444) OBD Connection 1 (in main wiring harness)
7	Noise Reduction Microphone 3 -R287-	7	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-	26	Right Front Midrange Speaker -R104-
8	Noise Reduction Microphone 1 -R285-	8	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-	27	Right Front Midrange Speaker -R104-
9	Noise Reduction Microphone 1 -R285-	9		28	Ground-shielding for Interior microphone -R74- In the Microphone Unit (in front roof module) -R164-
10	Engine Control Module (ECM) -J623- / Subframe Mount Control Module -J931-	10		29	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
11	Terminal 31, to (397) Ground Connection 32 (in main wiring harness)	11	Left Front Bass Speaker -R21-	30	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
12		12	Left Front Bass Speaker -R21-	31	Center speaker -R208-
13	Noise Reduction Microphone 4 -R288-	13	Right Front Bass Speaker -R23-	32	Center speaker -R208-
14	Noise Reduction Microphone 4 -R288-	14	Right Front Bass Speaker -R23-	33	Right Front Speaker -R3-
15		15		34	Right Front Speaker -R3-
16	Noise Reduction Microphone 2 -R286-	16	Subwoofer -R211-	35	Left Front Speaker -R2-
17	Noise Reduction Microphone 2 -R286-	17		36	Left Front Speaker -R2-
18		18		37	Left Front Midrange Speaker -R103-
		19	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-	38	Left Front Midrange Speaker -R103-

♦ 1) Only sedan

♦ 2) Only Avant

Back to overview [⇒ page 1](#) .

### 1.35 Digital Sound System Control Module -J525- , Bose Surround Sound, 8RY, from model year 2015

In left luggage compartment, behind side panel trim -1-.

1 - Digital Sound System Control Module -J525-

A - 38-Pin Connector -T38- , black


- ☐ Pin arrangements in conjunction with Radio (8DN, 8DP, 8DS) [⇒ page 50](#)
- ☐ Pin arrangements in conjunction with MMI Navigation plus (I8H) [⇒ page 51](#)

B - 18-Pin Connector -T18i- , black

- ☐ Pin arrangements in conjunction with Radio (8DN, 8DP, 8DS) [⇒ page 50](#)
- ☐ Pin arrangements in conjunction with MMI Navigation plus (I8H) [⇒ page 51](#)

C - 2-Pin Connector -T2ca- , MOST-Bus, black

Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

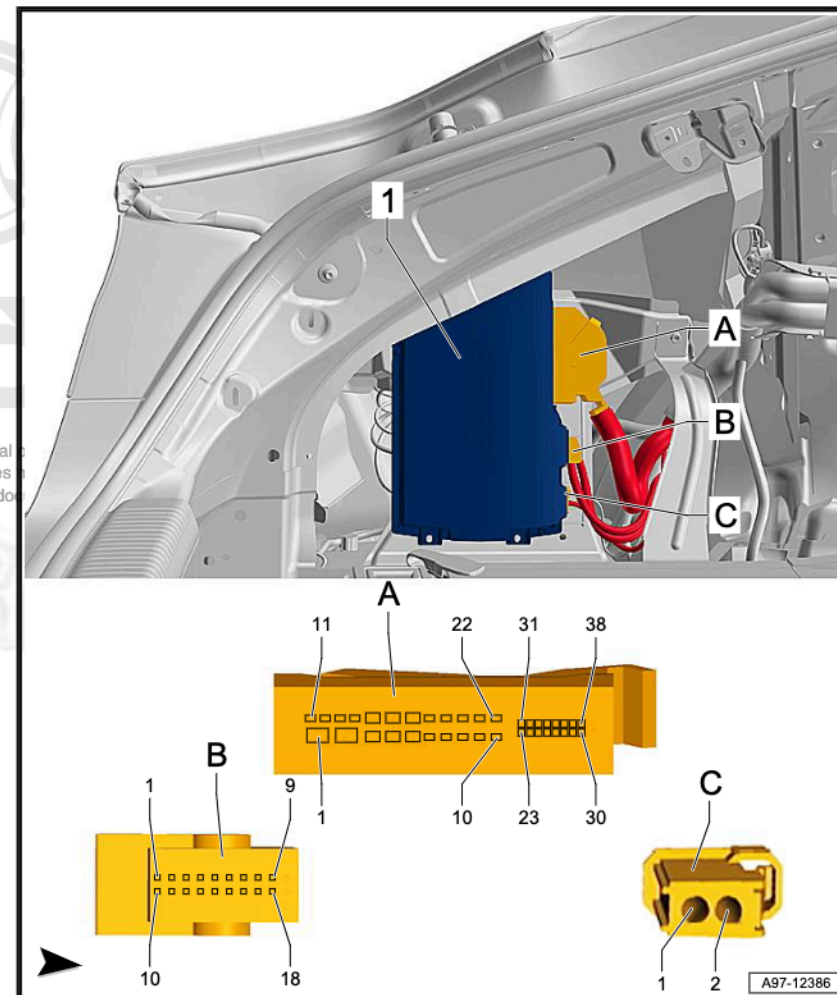

Pin Arrangements Digital Sound System Control Module -J525- , Radio, 8DN, 8DP, 8DS

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from Fuse Carrier 4 -ST4- in Fuse Panel F -SF-	20	Right Front Midrange Speaker -R104-
2		2	Terminal 31, to (50) Ground Connection (in left luggage compartment) <sup>2)</sup> (729) Ground connection on left rear wheel housing <sup>3)</sup>	21	Right Front Speaker -R3-
3		3	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-	22	Left Front Speaker -R2-
4		4	Left Front Bass Speaker -R21-	23	
5		5	Subwoofer -R211-	24	
6	Noise Reduction Microphone 3 -R287- 1)	6		25	Ringbreak Diagnosis Wire to (B444) OBD Connection 1 (in main wiring harness)
7	Noise Reduction Microphone 3 -R287- 1)	7	Left Front Midrange Speaker -R103-	26	
8	Noise Reduction Microphone 4 -R288- 1)	8	Right Front Midrange Speaker -R104-	27	
9	Noise Reduction Microphone 4 -R288- 1)	9	Right Front Speaker -R3-	28	Ground-shielding for Interior microphone -R74- In the Microphone Unit (in front roof module) -R164-
10	Engine Control Module (ECM) -J623- / Subframe Mount Control Module -J931- 1)	10	Left Front Speaker -R2-	29	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
11	Terminal 31, to (397) Ground Connection 32 in main wiring harness 1)	11	Right Front Bass Speaker -R23-	30	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
12		12	Right Front Bass Speaker -R23-	31	Center speaker -R208-
13	Noise Reduction Microphone 2 -R286- 1)	13	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-	32	Center speaker -R208-
14	Noise Reduction Microphone 2 -R286- 1)	14	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-	33	Left effects speaker -R209-
15		15	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-	34	Left effects speaker -R209-
16	Noise Reduction Microphone 1 -R285- 1)	16	Left Front Bass Speaker -R21-	35	
17	Noise Reduction Microphone 1 -R285- 1)	17	Subwoofer -R211-	36	
18		18		37	Right effects speaker -R210-
		19	Left Front Midrange Speaker -R103-	38	Right effects speaker -R210-

♦ 1) Only for vehicles with noise compensation, EP1



♦ 2) Only sedan

♦ 3) Only Avant

Back to overview ⇒ [page 1](#) .



Pin Arrangements Digital Sound System Control Module -J525- , MMI Navigation plus, I8H

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from Fuse Carrier 4 -ST4- in Fuse Panel F -SF-	20	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-
2		2	Terminal 31, to (50) Ground Connection (in left luggage compartment) <sup>2)</sup> (729) Ground connection on left rear wheel housing <sup>3)</sup>	21	Left effects speaker -R209-
3		3		22	Right effects speaker -R210-
4		4	Subwoofer -R211-	23	
5		5		24	
6	Noise Reduction Microphone 3 -R287- <sup>1)</sup>	6		25	Ringbreak Diagnosis Wire to (B444) OBD Connection 1 (in main wiring harness)
7	Noise Reduction Microphone 3 -R287- <sup>1)</sup>	7	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-	26	Right Front Midrange Speaker -R104-
8	Noise Reduction Microphone 1 -R285- <sup>1)</sup>	8	Right Rear Bass Speaker -R17- / Right Rear Treble Speaker -R16-	27	Right Front Midrange Speaker -R104-
9	Noise Reduction Microphone 1 -R285- <sup>1)</sup>	9	Left effects speaker -R209-	28	Ground-shielding for Interior microphone -R74- In the Microphone Unit (in front roof module) -R164-
10	Engine Control Module (ECM) -J623- / Subframe Mount Control Module -J931- <sup>1)</sup>	10	Right effects speaker -R210-	29	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
11	Terminal 31, to (397) Ground Connection 32 in main wiring harness <sup>1)</sup>	11	Left Front Bass Speaker -R21-	30	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
12		12	Left Front Bass Speaker -R21-	31	Center speaker -R208-
13	Noise Reduction Microphone 4 -R288- <sup>1)</sup>	13	Right Front Bass Speaker -R23-	32	Center speaker -R208-
14	Noise Reduction Microphone 4 -R288- <sup>1)</sup>	14	Right Front Bass Speaker -R23-	33	Right Front Speaker -R3-
15		15		34	Right Front Speaker -R3-
16	Noise Reduction Microphone 2 -R286- <sup>1)</sup>	16	Subwoofer -R211-	35	Left Front Speaker -R2-
17	Noise Reduction Microphone 2 -R286- <sup>1)</sup>	17		36	Left Front Speaker -R2-

-T18i- (B)	Designation		-T38- (A)	Designation		-T38- (A)	Designation
18			18			37	Left Front Midrange Speaker -R103-
			19	Left Rear Bass Speaker -R15- / Left Rear Treble Speaker -R14-		38	Left Front Midrange Speaker -R103-

◆ 1) Only for vehicles with noise compensation, EP1

◆ 2) Only sedan

◆ 3) Only Avant

Back to overview ⇒ [page 1](#) .

### 1.36 Digital Sound System Control Module -J525- , Bang & Olufsen Advanced Sound System, 8RF, from model year 2015

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




In left luggage compartment, behind side panel trim -1-.

1 - Digital Sound System Control Module -J525-

A - 38-Pin Connector -T38- , black

B - 2-Pin Connector -T2ca- , MOST-Bus, black

C - 32-Pin Connector -T32e- , black

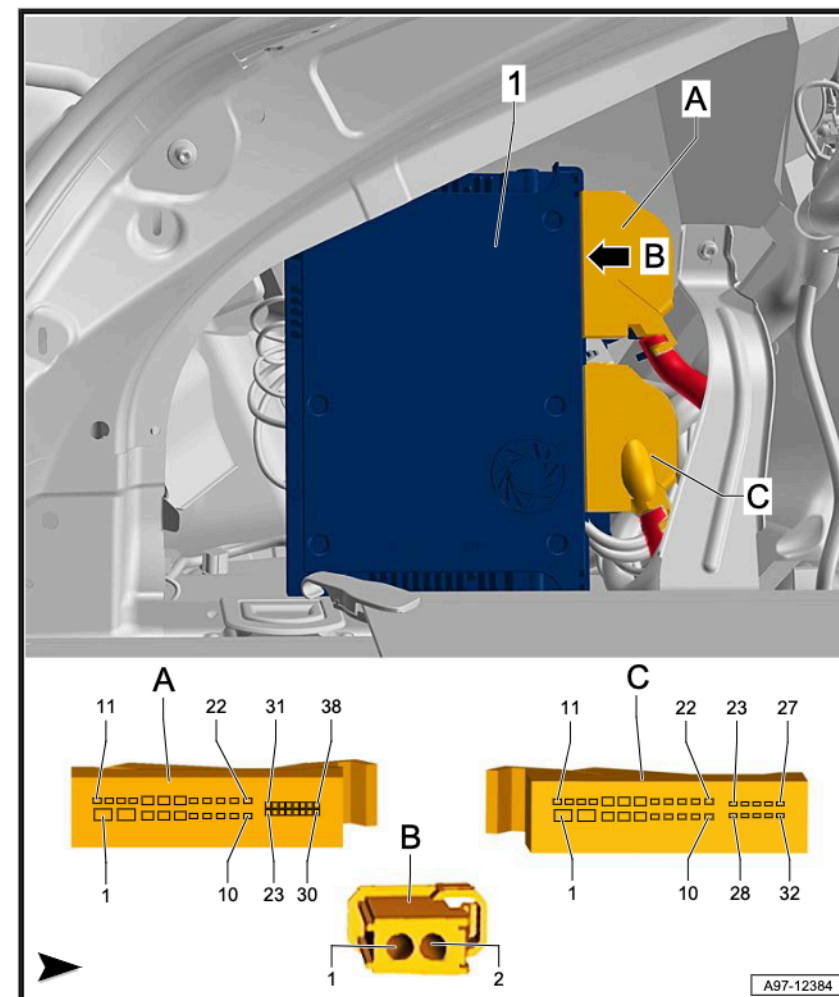

Pin Arrangements Digital Sound System Control Module -J525-

-T32e- (C)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from Fuse 1 - terminal 30 -S204- in Fuse Panel F -SF-
2		2	Terminal 31, to 50 Ground Connection (in left luggage compartment)
3		3	Subwoofer -R211-
4		4	Left Front Bass Speaker -R21-
5	Left Front Midrange Speaker -R103-	5	Right Front Bass Speaker -R23-

-T32e- (C)	Designation		-T38- (A)	Designation
6	Right Front Midrange Speaker -R104-		6	Left Rear Bass Speaker -R15-
7	Left Rear Treble Speaker -R14-		7	Right Rear Bass Speaker -R17-
8	Right Rear Treble Speaker -R16-		8	Left Front Treble Speaker Motor -V344-
9	Left effects speaker -R209-		9	Left Front Treble Speaker Motor -V344-
10	Center speaker -R208-		10	Left Front Treble Speaker Motor -V344-
11			11	
12			12	
13	Ringbreak Diagnosis Wire to (B444) OBD Connection 1 (in main wiring harness)		13	
14			14	Engine Control Module (ECM) -J623- / Subframe Mount Control Module -J931- 1)
15			15	Subwoofer -R211-
16	Terminal 31, to (397) Ground Connection 32 in main wiring harness 1)		16	Left Front Bass Speaker -R21-
17	Left Front Midrange Speaker -R103-		17	Right Front Bass Speaker -R23-
18	Right Front Midrange Speaker -R104-		18	Left Rear Bass Speaker -R15-
19	Left Rear Treble Speaker -R14-		19	Right Rear Bass Speaker -R17-
20	Right Rear Treble Speaker -R16-		20	Right Front Treble Speaker Motor -V345-
21	Left effects speaker -R209-		21	Right Front Treble Speaker Motor -V345-
22	Center speaker -R208-		22	Right Front Treble Speaker Motor -V345-
23	Right effects speaker -R210-		23	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
24			24	Noise Reduction Microphone 1 -R285- 1)
25	Center speaker 2 -R219-		25	Noise Reduction Microphone 2 -R286- 1)
26	Left Front Treble Speaker -R20-		26	Noise Reduction Microphone 3 -R287- 1)
27	Right Front Treble Speaker -R22-		27	Noise Reduction Microphone 4 -R288- 1)
28	Right effects speaker -R210-		28	
29			29	
30	Center speaker 2 -R219-		30	
31	Left Front Treble Speaker -R20-		31	Inside Microphone -R74- In the Microphone Unit (in front roof module) -R164-
32	Right Front Treble Speaker -R22-		32	Noise Reduction Microphone 1 -R285- 1)
			33	Noise Reduction Microphone 2 -R286- 1)
			34	Noise Reduction Microphone 3 -R287- 1)
			35	Noise Reduction Microphone 4 -R288- 1)

-T32e- (C)	Designation		-T38- (A)	Designation
			36	
			37	
			38	

♦ 1) Only for vehicles with noise compensation, EP1

Back to overview ⇒ [page 1](#) .

## 1.37 Rear View Camera System Control Module -J772-

⇒ ["1.37.1 Rear View Camera System Control Module J772 , through model year 2014", page 55](#)

⇒ ["1.37.2 Rear View Camera System Control Module J772 , model year 2015", page 57](#)

⇒ ["1.37.3 Rear View Camera System Control Module J772 , from model year 2016", page 59](#)

### 1.37.1 Rear View Camera System Control Module -J772- , through model year 2014

Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


In right luggage compartment, behind side panel trim -1-.

1 - Rear View Camera System Control Module -J772-

A - 54-Pin Connector -T54a-

B - 2-Pin Connector -T2df- , green, Control Module for Information Electronics 1 -J794-

C - 2-Pin Connector -T2dg- , gray, Rear View Camera -R189-

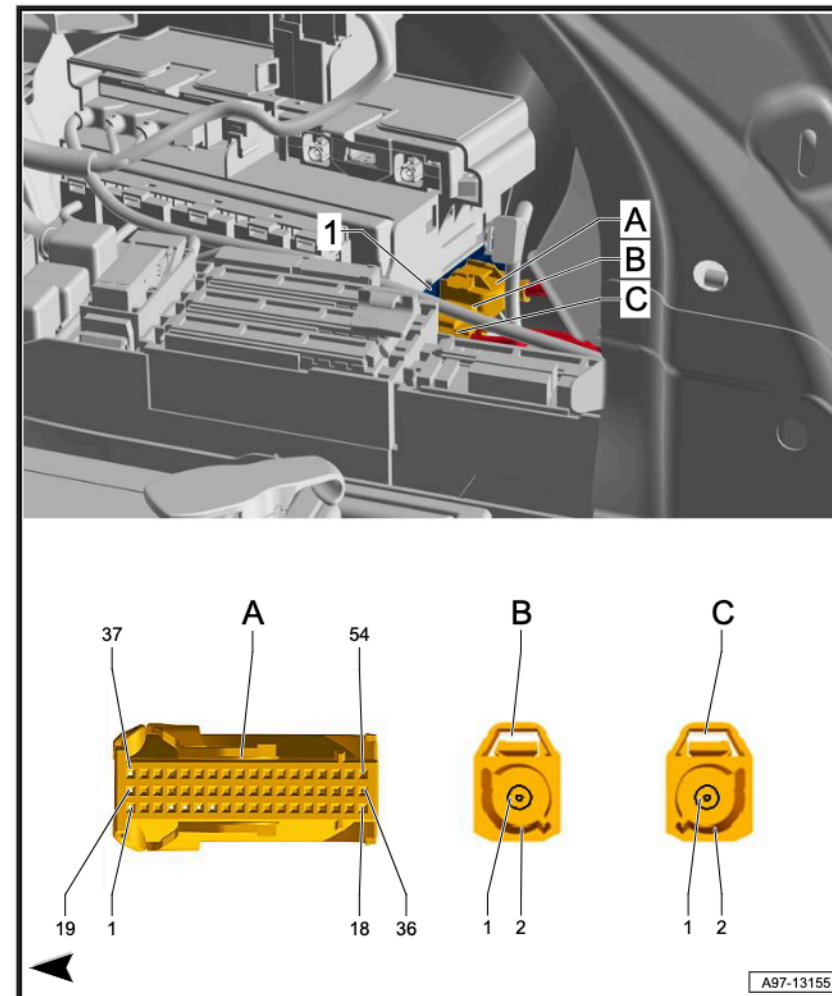

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the written consent of Audi AG. Audi AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

#### Pin Arrangements Rear View Camera System Control Module -J772-

-T54a-	Designation	-T54a-	Designation	-T54a-	Designation
1		19		37	
2		20		38	
3		21		39	CAN-Bus Instrument Cluster Low, to Wiring junction for instrument cluster CAN Bus, Low -TV40-

-T54a-	Designation	-T54a-	Designation	-T54a-	Designation
4		22		40	CAN-Bus Instrument Cluster High, to Wiring junction for instrument cluster CAN-Bus, High -TV36-
5		23		41	
6		24		42	
7		25		43	Terminal 30, from Fuse Carrier 3 -ST3- in Fuse Panel F -SF-
8		26		44	Terminal 31, to <sup>51</sup> Ground Connection (in right luggage compartment)
9		27		45	
10		28		46	
11		29		47	Rear View Camera -R189-
12		30		48	Rear View Camera -R189-
13		31		49	
14		32		50	
15		33		51	
16		34		52	
17		35		53	
18		36		54	

Back to overview ⇒ [page 1](#) .

### 1.37.2 Rear View Camera System Control Module -J772- , model year 2015

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


In right luggage compartment, behind side panel trim -1-.

1 - Rear View Camera System Control Module -J772-

A - 20-Pin Connector -T20I- , red

B - 2-Pin Connector -T2df- , green, Control Module for Information Electronics 1 -J794-

C - 2-Pin Connector -T2dg- , gray, Rear View Camera -R189-

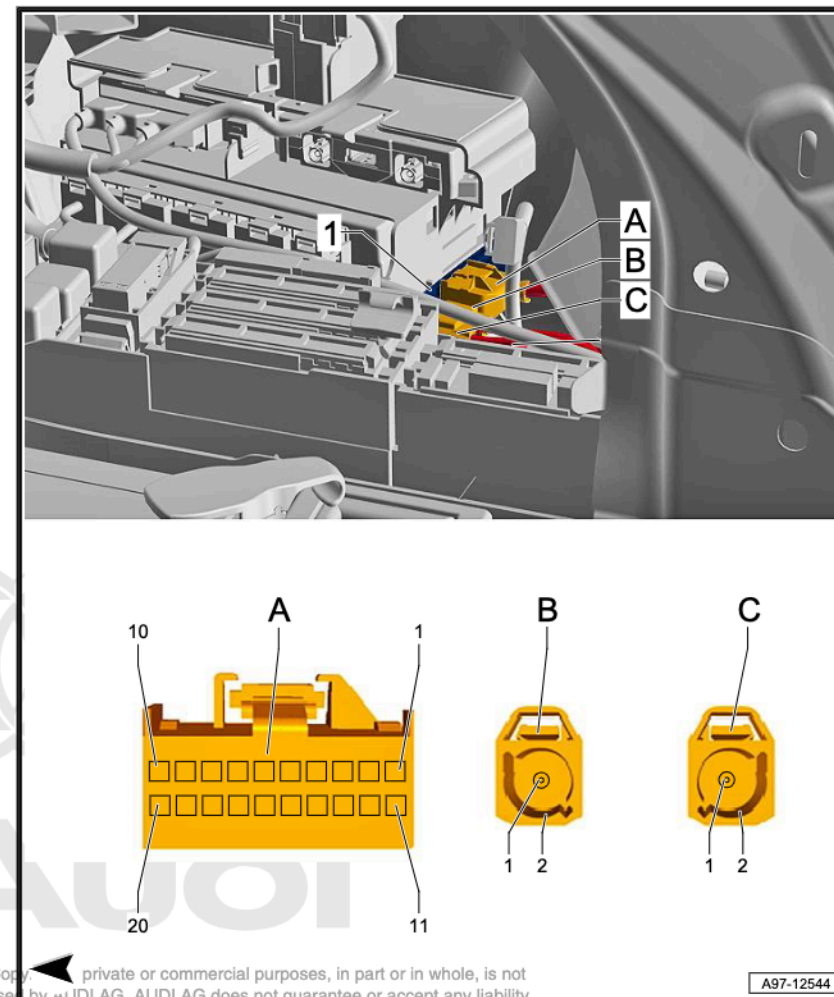

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A97-12544

#### Pin Arrangements Rear View Camera System Control Module -J772-

-T20I- (A)	Designation	-T20I- (A)	Designation
1		11	CAN-Bus Instrument Cluster Low, to Wiring junction for instrument cluster CAN Bus, Low -TV40-
2		12	CAN-Bus Instrument Cluster High, to Wiring junction for instrument cluster CAN-Bus, High -TV36-
3		13	



-T20I- (A)	Designation		-T20I- (A)	Designation
4			14	
5			15	
6			16	
7			17	
8			18	
9	Rear View Camera -R189-		19	Rear View Camera -R189-
10	Terminal 30, from Fuse Carrier 3 -ST3- in Fuse Panel F -SF-		20	Terminal 31, to 51 Ground Connection (in right luggage compartment)

Back to overview ⇒ [page 1](#) .

### 1.37.3 Rear View Camera System Control Module -J772- , from model year 2016



# Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


# erWin

In rear lid button handle.

1 - Rear View Camera System Control Module -J772-

A - 8-Pin Connector -T8bg- , black

B - 2-Pin Connector -T2pb- , blue, Control Module for Information Electronics 1 -J794-

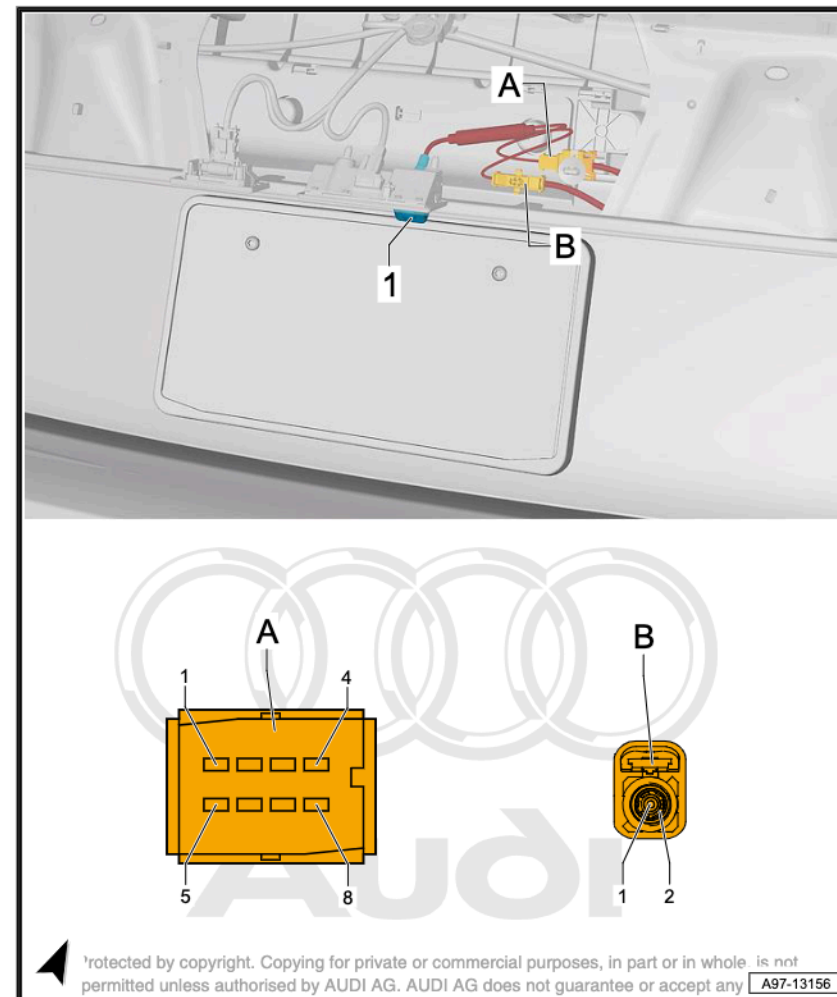

#### Pin Arrangements Rear View Camera System Control Module -J772-

-T8bg- (A)	Designation	-T8bg- (A)	Designation
1	Terminal 15, from Fuse Carrier 1 -ST1- in Fuse Panel B -SB-	5	Terminal 31, to 51 Ground Connection (in right luggage compartment)
2		6	
3		7	
4	Extended System CAN-Bus High, to B108 CAN-Bus Extended High Connection 1 (in main wiring harness)	8	Extended System CAN-Bus Low, to B109 CAN-Bus Extended Low Connection 1 (in main wiring harness)

Back to overview [⇒ page 1](#) .


### 1.38 Reducing Agent Metering System Control Module -J880-

On reducing agent tank on left underbody (below).

1 - Reducing Agent Metering System Control Module -J880-

A - 8-Pin Connector -T8an-

B - 28-Pin Connector -T28a-

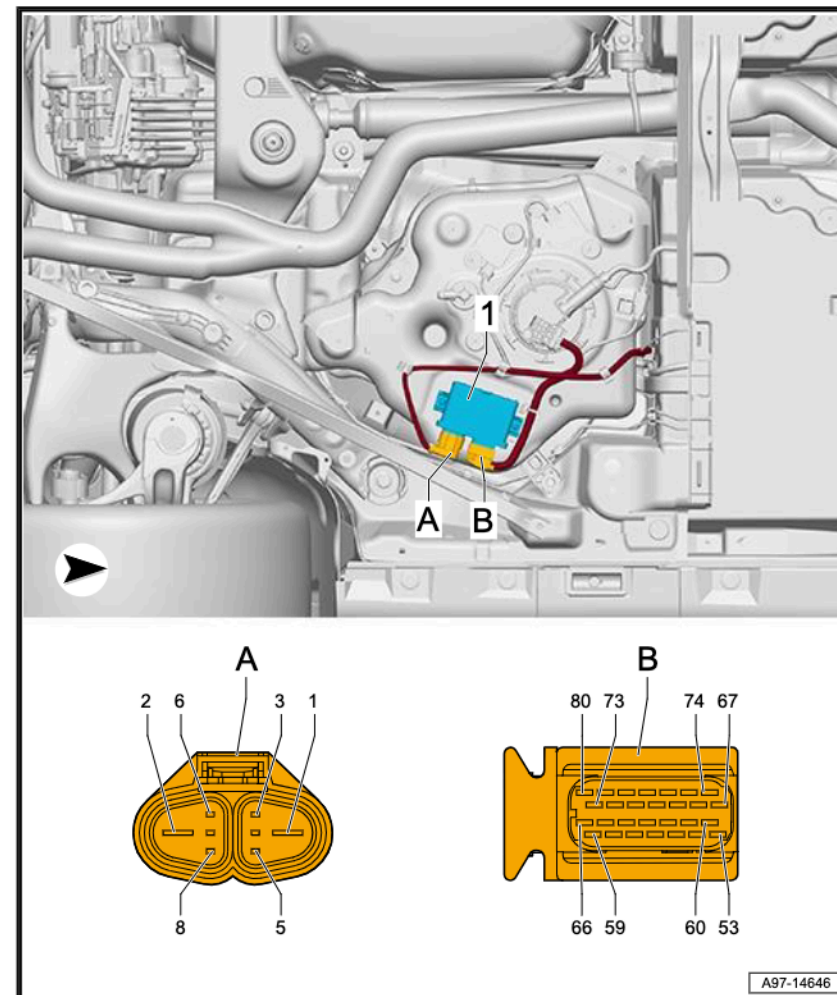

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

## Pin Arrangements Reducing Agent Metering System Control Module -J880-

-T8an- (A)	Designation	-T8an- (A)	Designation
1	Terminal 31, to (34) Ground Connection (below front passenger's seat)	5	CAN-Bus powertrain, Low to (B390) Powertrain CAN-Bus Low connection 1 (in main wiring harness)
2	Terminal 30, from Fuse Carrier 5 -ST5- in Fuse Panel F -SF- <sup>1)</sup> Fuse Carrier 2 -ST2- in Fuse Panel F -SF- <sup>2)</sup>	6	Terminal 30, from Fuse Carrier 3 -ST3- in Fuse Panel F -SF- <sup>1)</sup> Fuse Carrier 2 -ST2- in Fuse Panel F -SF- <sup>2)</sup>
3	CAN-Bus powertrain, High to (B383) Powertrain CAN-Bus High connection 1 (in main wiring harness)	7	Reducing Agent Metering System Relay -J963-
4		8	Terminal 87, from Fuse Carrier 3 -ST3- in Fuse Panel B -SB-

◆ <sup>1)</sup> For models through model year 2014

◆ <sup>2)</sup> For models from model year 2015

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

-T28a- (B)	Designation	-T28a- (B)	Designation
53	Reducing Agent Line Heater (Heating Circuit 2) -Z104-	67	Reducing Agent Temperature Sensor -G685- in Reducing Agent Metering System Delivery Unit -GX19-
54		68	
55	Reducing Agent Tank Sensor -G684- in Reducing Agent Metering System Delivery Unit -GX19-	69	Reducing Agent Pump -V437- in Reducing Agent Metering System Delivery Unit -GX19-
56		70	Reducing Agent Pump -V437- in Reducing Agent Metering System Delivery Unit -GX19-
57		71	Reducing Agent Pump -V437- in Reducing Agent Metering System Delivery Unit -GX19-
58		72	Reducing Agent Pump -V437- in Reducing Agent Metering System Delivery Unit -GX19-
59		73	Reducing Agent Metering System Pressure Sensor -G686- in Reducing Agent Metering System Delivery Unit -GX19-
60	Reducing Agent Temperature Sensor -G685- in Reducing Agent Metering System Delivery Unit -GX19-	74	Heater for reducing-agent tank (heater circuit 1) -Z102- in Reducing Agent Metering System Delivery Unit -GX19-
61	Reducing Agent Tank Sensor -G684- in Reducing Agent Metering System Delivery Unit -GX19-	75	Reducing Agent Tank Sensor -G684- in Reducing Agent Metering System Delivery Unit -GX19-
62		76	Reducing Agent Line Heater (Heating Circuit 2) -Z104-
63		77	
64	Heater for reducing-agent tank (heater circuit 1) -Z102- in Reducing Agent Metering System Delivery Unit -GX19-	78	
65		79	

-T28a- (B)	Designation	-T28a- (B)	Designation
66	Reducing Agent Metering System Pressure Sensor -G686- in Reducing Agent Metering System Delivery Unit -GX19-	80	Reducing Agent Metering System Pressure Sensor -G686- in Reducing Agent Metering System Delivery Unit -GX19-

Back to overview [⇒ page 1](#) .

### 1.39 Peripheral Camera Control Module -J928-

Below front passenger's seat -1-.

1 - Peripheral Camera Control Module -J928-

A - 5-Pin Connector -T5ay- , blue, Rear Peripheral Camera -R246-

B - 5-Pin Connector -T5ax- , white, Front Peripheral Camera -R243-


C - 5-Pin Connector -T5aw- , black, right Peripheral Camera -R245-

D - 5-Pin Connector -T5av- , green, left Peripheral Camera -R244-


E - 2-Pin Connector -T2lt- , green, Control Module for Information Electronics 1 -J794-

F - 18-Pin Connector -T18f- , black

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. All rights reserved with respect to the correctness of information.

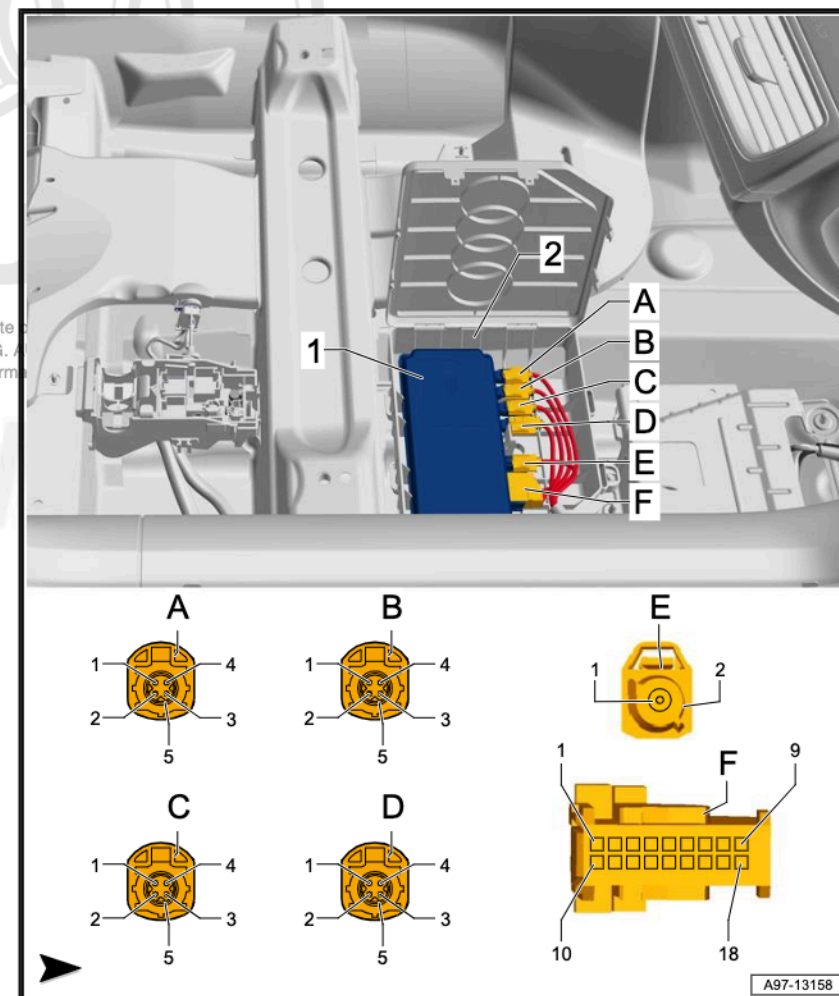

**Pin Arrangements Peripheral Camera Control Module -J928-**

 -T18f- (A)	Designation		-T18f- (A)	Designation
1	Terminal 30, from Fuse Carrier 3 -ST3- in Fuse Panel F -SF-		10	CAN-Bus Instrument Cluster Low, to Wiring junction for instrument cluster CAN Bus, Low -TV40-
2	CAN-Bus Instrument Cluster High, to Wiring junction for instrument cluster CAN-Bus, High -TV36-		11	
3			12	Terminal 31, to  Ground Connection 2 (on Center Tunnel)
4			13	
5			14	
6			15	
7			16	
8			17	
9			18	

Back to overview ⇒ [page 1](#) .

## 1.40 Amplifier for Telephone -R86-

⇒ ["1.40.1 Amplifier for Telephone R86 , through model year 2014", page 64](#)

⇒ ["1.40.2 Amplifier for Telephone R86 , from model year 2015", page 66](#)

### 1.40.1 Amplifier for Telephone -R86- , through model year 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



In right luggage compartment, behind side panel trim



Note

From model year 2013 the connectors -B- and -C- on Cellular telephone amplifier -R86- changed.

1 - Amplifier for Telephone -R86-

A - 2-Pin Connector -T2dc- , purple

❑ from Telephone Antenna -R65-

B - 2-Pin Connector -T2dd- , black

❑ Through model year 2012

❑ to Telephone Baseplate -R126-

B - 4-Pin Connector -T4az- , black

❑ from model year 2013


C - 4-Pin Connector -T4az- , black

❑ Through model year 2012

C - 2-Pin Connector -T2dd- , black

❑ from model year 2013

❑ to Telephone Baseplate -R126-

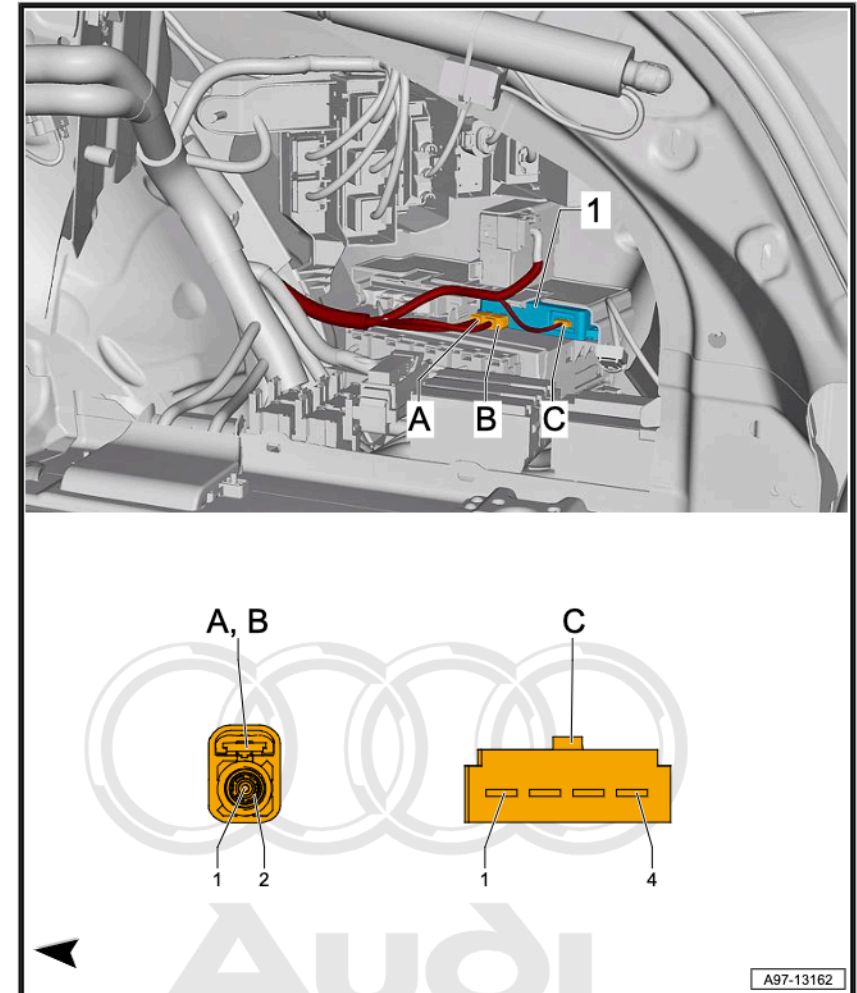

#### Pin Arrangements Amplifier for Telephone -R86-

-T4az- (B/C)	Designation
1	Terminal 30, from Fuse Carrier 2 -ST2- in Fuse Panel F -SF-
2	Terminal 31, to 51 Ground Connection (in right luggage compartment)
3	Control Module for Information Electronics 1 -J794- / Telephone Baseplate -R126-
4	

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Back to overview ⇒ [page 1](#) .

## 1.40.2 Amplifier for Telephone -R86- , from model year 2015

In left luggage compartment, behind side panel trim

1 - Amplifier for Telephone -R86-

A - 2-Pin Connector -T2dc- , purple

- ☐ Through model year 2017
- ☐ from Telephone Antenna -R65-

A - 2-Pin Connector -T2dc- , purple/beige/curry yellow


- ☐ from model year 2018
- ☐ Connector colour purple: only models for area ECE (GB1)
- ☐ Connector colour beige: only models for area NAR (GB2)
- ☐ Connector colour curry yellow: only models for area China, Asia (GB3)
- ☐ from Telephone Antenna -R65-

B - 4-Pin Connector -T4az- , black

C - 2-Pin Connector -T2dd- , black

- ☐ to Telephone Baseplate -R126-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

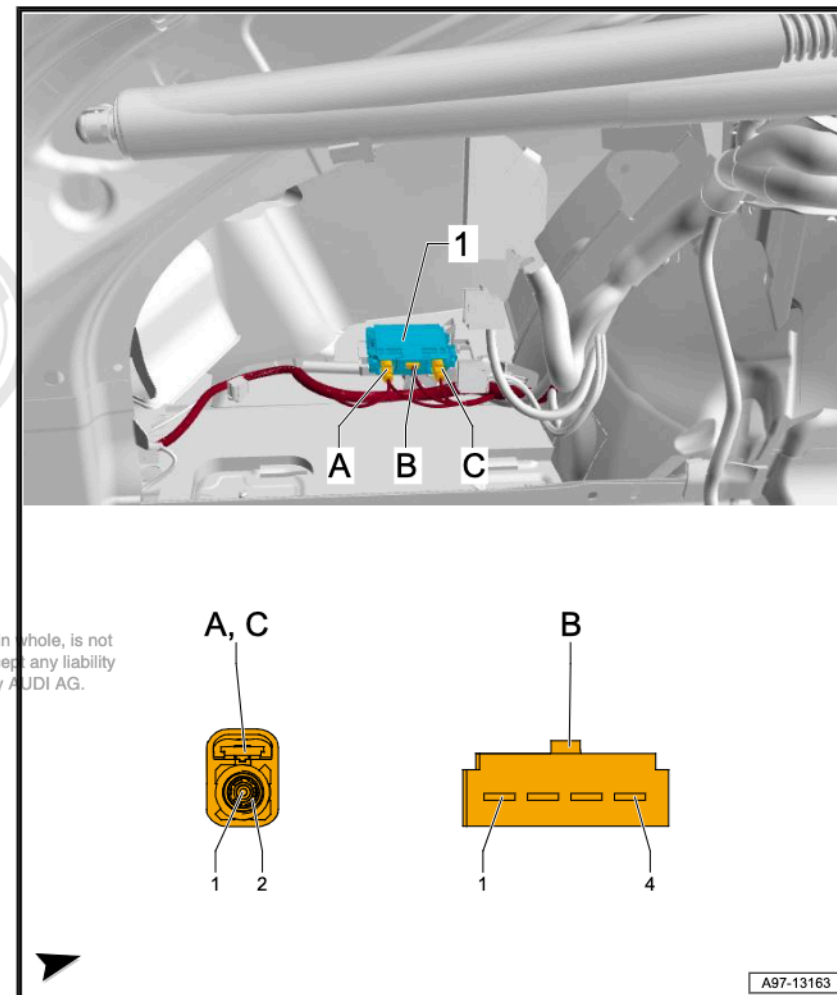

**Pin Arrangements Amplifier for Telephone -R86-**

-T4az- (B)	Designation
1	Terminal 30, from Fuse Carrier 2 -ST2- in Fuse Panel F -SF-
2	Terminal 31, to 50 Ground Connection (in left luggage compartment)
3	Control Module for Information Electronics 1 -J794- / Telephone Baseplate -R126-
4	

Back to overview ⇒ [page 1](#) .

**1.41 Telephone/Telematics Control Module -J526-**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


In left center luggage compartment before Hybrid Battery Unit -AX1- .

1 - Telephone/Telematics Control Module -J526-

A - 20-Pin Connector -T20n- , brown







Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

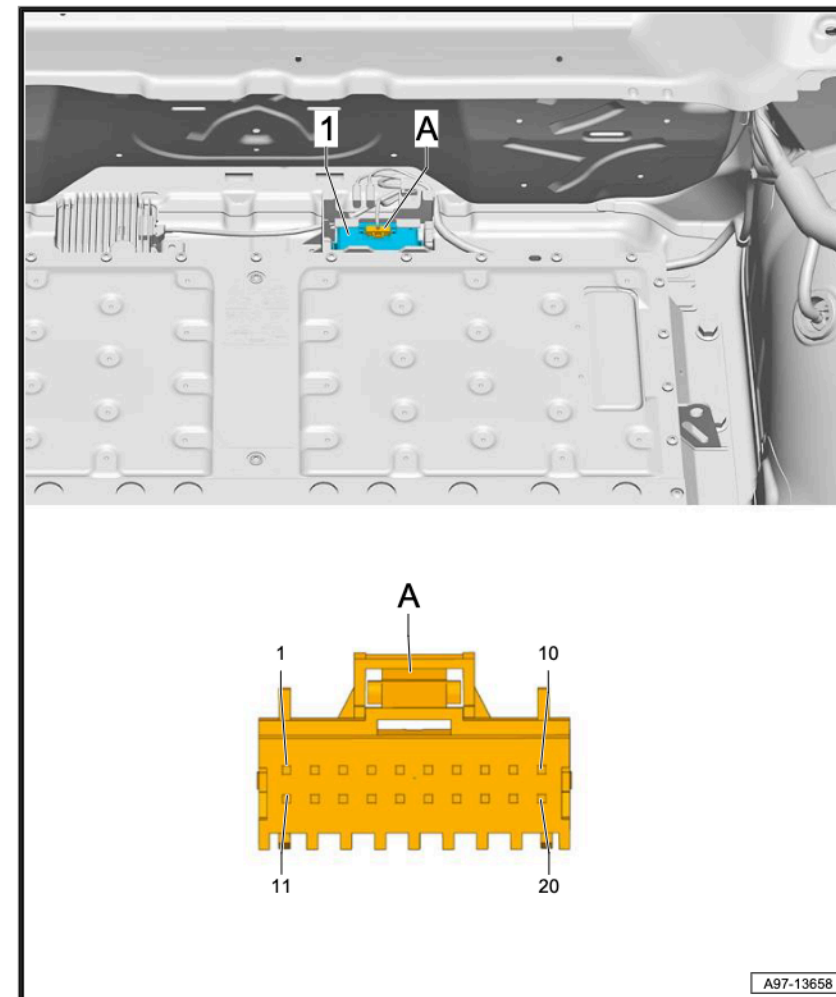

#### Pin Arrangements Telephone/Telematics Control Module -J526-

    -T20n- (A)	Designation	-T20n- (A)	Designation
1	Terminal 30, from Fuse Carrier 1 -ST1- in Fuse Panel F -SF-	11	Terminal 31, to 51 Ground Connection (in right luggage compartment)
2		12	
3		13	
4		14	
5	CAN-Bus Low, to Telematics Interface Control Module -J1221-	15	CAN-Bus High, to Telematics Interface Control Module -J1221-

-T20n- (A)	Designation		-T20n- (A)	Designation	
6			16		
7			17		
8			18		
9	CAN-Bus Hybrid Low, to (in main wiring harness)	 Hybrid CAN bus low connection 1	19	CAN-Bus Hybrid High, to (in main wiring harness)	 Hybrid CAN bus high connection 1 (in
10	CAN-Bus Hybrid Low, to (in main wiring harness)	 Hybrid CAN bus low connection 2	20	CAN-Bus Hybrid High, to (in main wiring harness)	 Hybrid CAN bus high connection 2 (in

Back to overview ⇒ [page 1](#) .

## 1.42 Telematics Interface Control Module -J1221-



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

In left center luggage compartment before Hybrid Battery Unit -AX1- .

1 - Telematics Interface Control Module -J1221-

A - 2-Pin Connector -T2qn- , purple


□ from Telephone Antenna -R65- in Radio Data Transmission Antenna -R180-

B - 2-Pin Connector -T2qp- , blue

□ from Navigation System Antenna -R50- in Radio Data Transmission Antenna -R180-

C - 10-Pin Connector -T10qp- , black

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

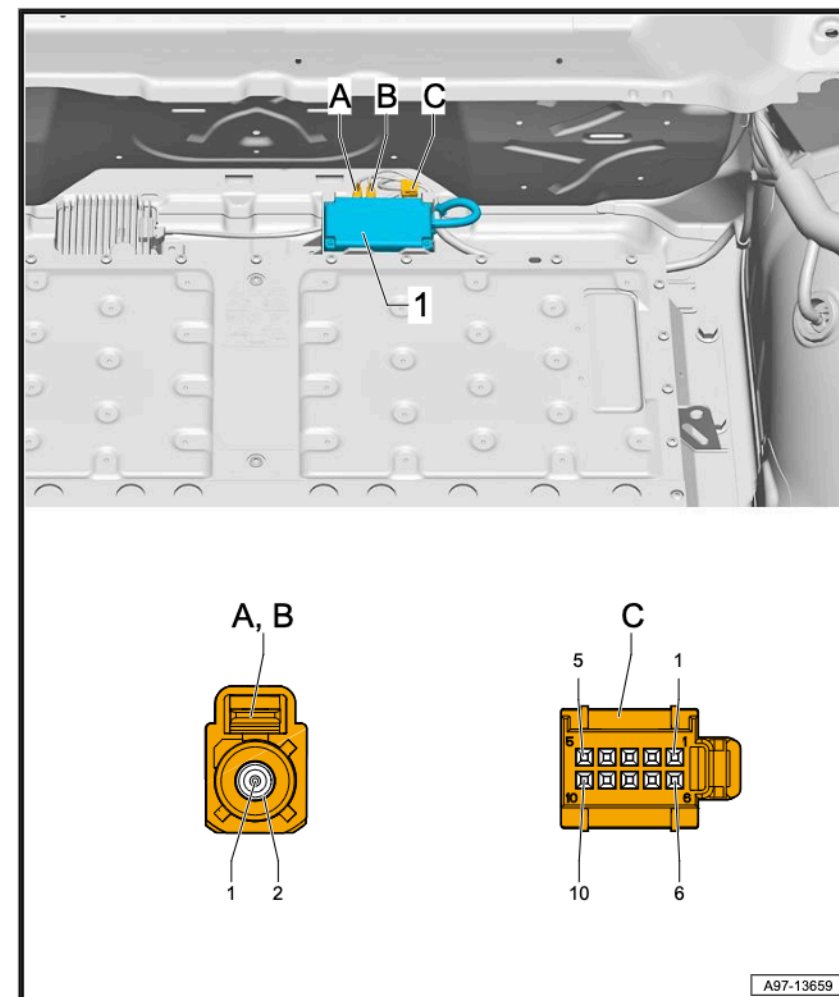

Pin Arrangements Telematics Interface Control Module -J1221-

-T10qp-(C)	Designation		-T10qp-(C)	Designation
1	Terminal 30, from Fuse Carrier 1 -ST1- in Fuse Panel F -SF-		6	Terminal 31, to 51 Ground Connection (in right luggage compartment)
2			7	
3			8	
4			9	




-T10qp-(C)	Designation	-T10qp-(C)	Designation
5	CAN-Bus Low, to Telephone/Telematics Control Module -J526-	10	CAN-Bus High, to Telephone/Telematics Control Module -J526-

Back to overview [⇒ page 1](#).

## 1.43 Overview of Control Modules for High-Voltage Models

- 1 -  
Electrical A/C Compressor -V470-  
☐ Components: -J842- , -P3-  
☐ and Connectors [⇒ page 72](#)
- 2 -  
Electric Drive Power and Control Electronics -JX1-  
☐ Components: -J841- , -A37- , -A19-  
☐ and Connectors [⇒ page 73](#)
- 3 -  
Hybrid Battery Unit -AX1-  
☐ Components: -J840- , -A38- , -TW- , -S350- , -TV44- , -P2- , -P1-  
☐ and Connectors [⇒ page 75](#)
- 4 -  
Auxiliary Battery -A1- High-Voltage System  
☐ Components: -J934-  
☐ and Connectors [⇒ page 78](#)
- 5 -  
High-Voltage System Battery Cooling Module  
☐ Components: -G756- , -G757- , -N516- , -V457- , -V479- , -V480-  
☐ and Connectors [⇒ page 76](#)
- 6 -  
Wire Junction -TV1- High-Voltage System  
☐ Components: -J580- , -S207- , -S208- , -S209- , -J7-  
☐ and Connectors [⇒ page 77](#)
- 7 - Battery -A-
- 8 -  
Electro-Drive Drive Motor -V141-  
☐ Components: -VX54- , -G712- , -P4- , -P5- , -P6-

Protected by copyright. Copying for private or commercial use is permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information in this document.

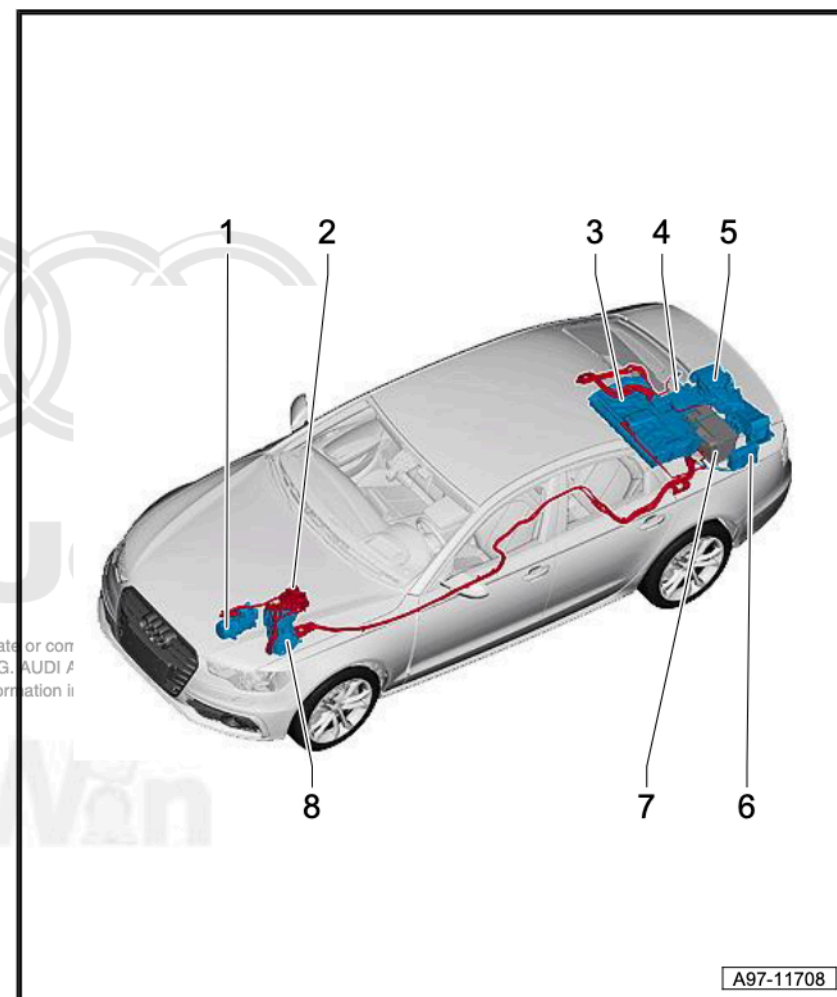

A97-11708

□ and Connectors ⇒ [page 74](#)

## 1.44 Electrical A/C Compressor -V470- Models with High-Voltage System

on left engine block -2-.

1 - 8-Pin Connector -T8ba- , black

2 - Electrical A/C Compressor -V470-

Internal Components: A/C Compressor Control Module -J842-


3 - 4-Pin Connector -T4fq- , Electrical A/C Compressor High Voltage Cable -P3-



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

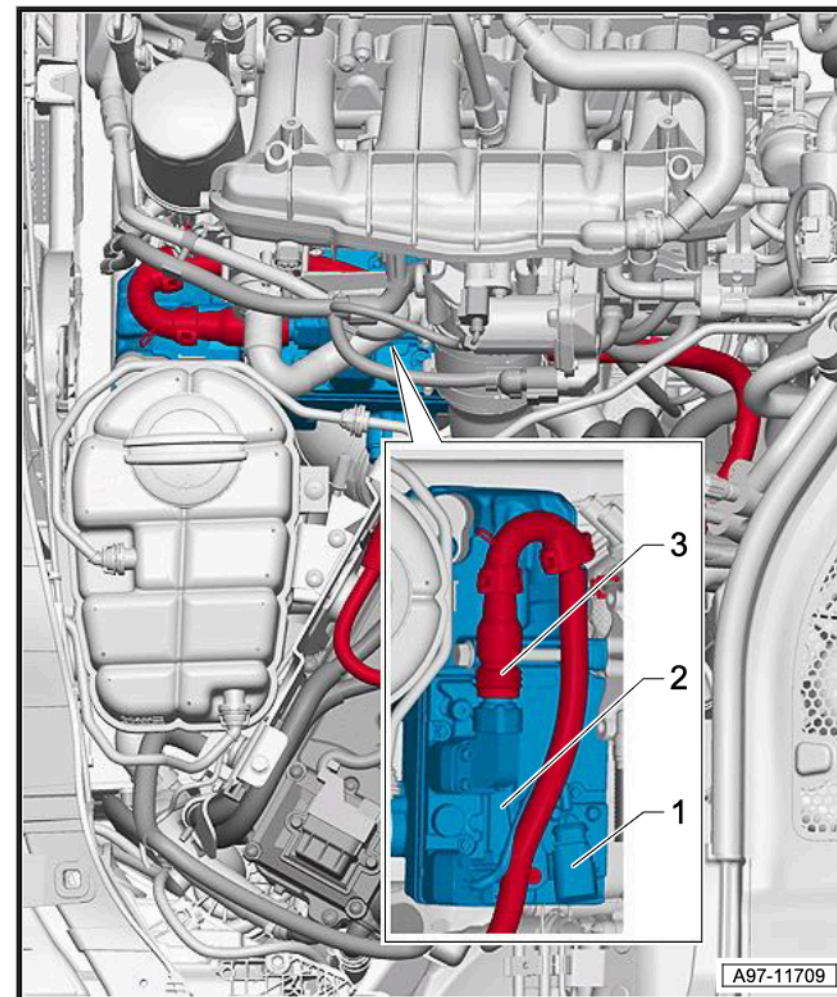

A97-11709

Back to overview ⇒ [page 71](#) .

## 1.45 Electric Drive Power and Control Electronics -JX1- , models with High-Voltage System

In front left in engine compartment -A-.

A - Electric Drive Power and Control Electronics -JX1-

Internal Components: Electrical Drive Control Module -J841- , Drive Motor Inverter -A37- , Voltage Converter -A19-

A1 - 1-Pin Connector -T1p- , Hybrid Battery High Voltage Cable, Positive Terminal -P1-

A2 - 1-Pin Connector -T1o- , Hybrid Battery High Voltage Cable, Negative Terminal -P2-


A3 - 1-Pin Connector -T1h- , Drive Motor High Voltage Cable 3 -P6-

A4 - 1-Pin Connector -T1g- , Drive Motor High Voltage Cable 2 -P5-

A5 - 1-Pin Connector -T1f- , Drive Motor High Voltage Cable 1 -P4-

A6 - 28-Pin Connector -T28b- , black

A7 - 4-Pin Connector -T4fp- , Electrical A/C Compressor High Voltage Cable -P3-

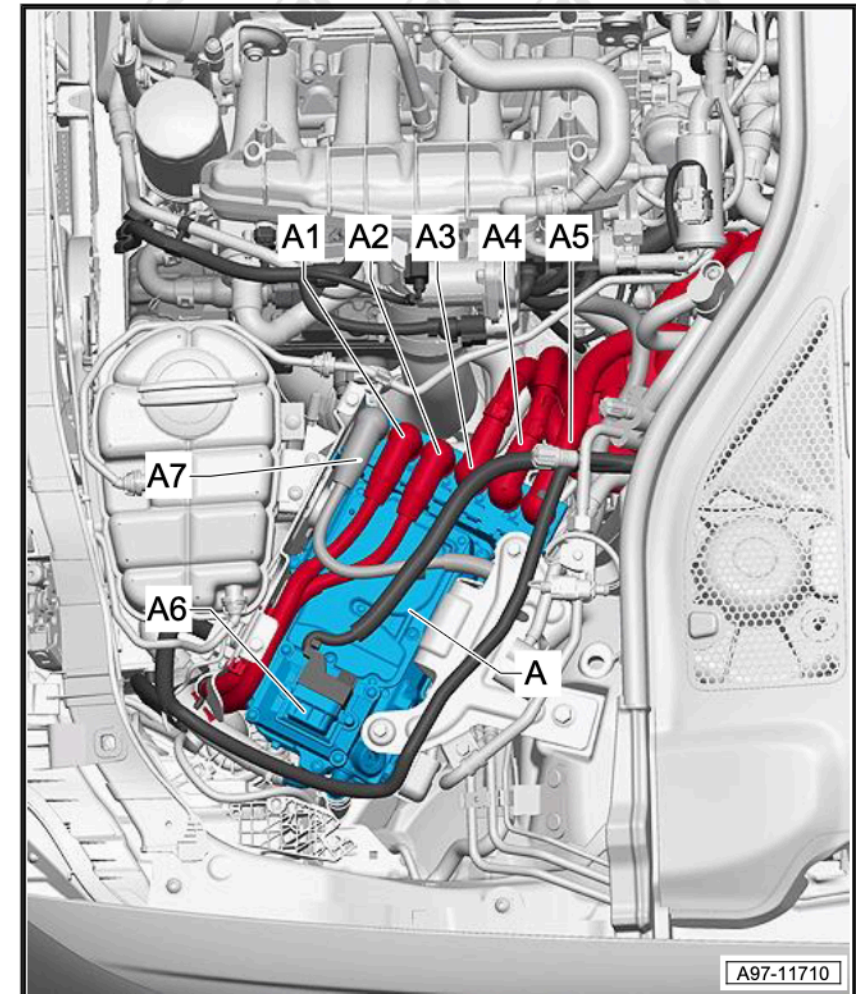



Back to overview ⇒ [page 71](#) .

## 1.46 Electro-Drive Drive Motor -V141- , models with High-Voltage System

On transmission housing -A-.

A - Electro-Drive Drive Motor -V141-

Internal Components: Three-Phrase Current Drive -VX54- , Drive motor temperature sensor -G712-

A1 - 10-Pin Connector -T10ao- , black


A2 - 1-Pin Connector -T1i- , Drive Motor High Voltage Cable 1 -P4-

A3 - 1-Pin Connector -T1k- , Drive Motor High Voltage Cable 2 -P5-

A4 - 1-Pin Connector -T1l- , Drive Motor High Voltage Cable 3 -P6-

A5 - 2-Pin Connector -T2ms- , black

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

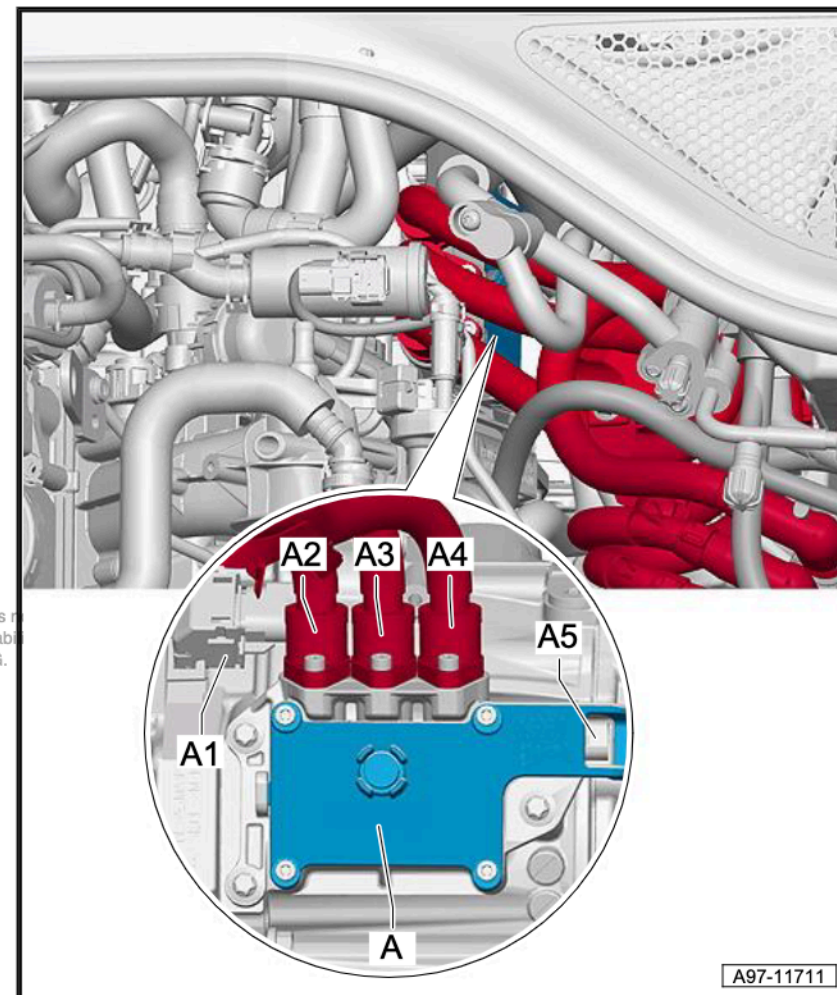

A97-11711

Back to overview ⇒ [page 71](#) .

## 1.47 Hybrid Battery Unit -AX1- , models with High-Voltage System

Under cover of luggage compartment -A-.

A - Hybrid Battery Unit -AX1-

Internal Components: Battery Regulation Control Module -J840- , Hybrid Battery -A38-

A1 - 8-Pin Connector -T8az- , black

A2 - 14-Pin Connector -T14l- , black


A3 - 1-Pin Connector -T1n- , Hybrid Battery High Voltage Cable, Negative Terminal -P2-

A4 - 1-Pin Connector -T1m- , Hybrid Battery High Voltage Cable, Positive Terminal -P1-

A5 - Connection for High Voltage System Maintenance Connector -TW-

A6 - High Voltage System Maintenance Connector -TW- with High Voltage System Fuse -S350-

A7 - Safety Connector 1 -TV44-

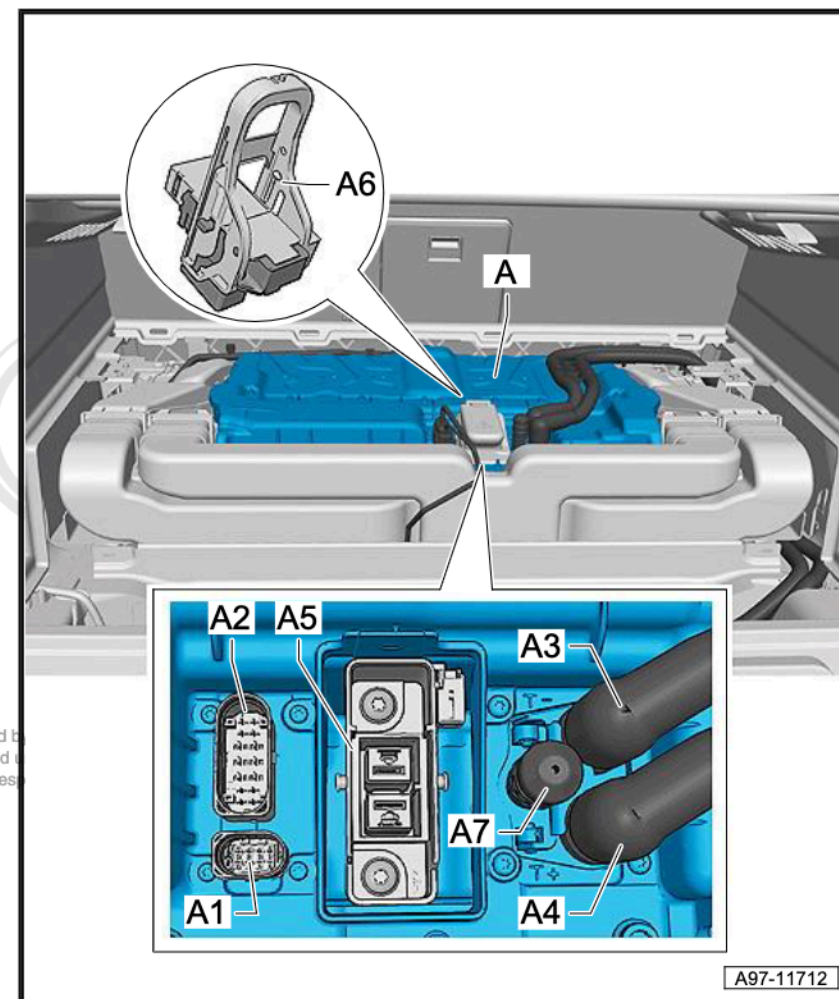

Back to overview ⇒ [page 71](#) .


## 1.48 , Battery Cooling Module, Models with High-Voltage System

Under cover of luggage compartment -1-.

### 1 - High-Voltage System Battery Cooling Module

Components:

- ◆ Temperature Sensor Before Hybrid Battery Evaporator -G756-
- ◆ Temperature Sensor After Hybrid Battery Evaporator -G757-
- ◆ Hybrid Battery Refrigerant Shut-Off Valve 1 -N516-
- ◆ Battery Fan 1 -V457-
- ◆ Hybrid Battery Recirculation Door Positioning Motor 1 -V479-
- ◆ Hybrid Battery Recirculation Door Positioning Motor 2 -V480-

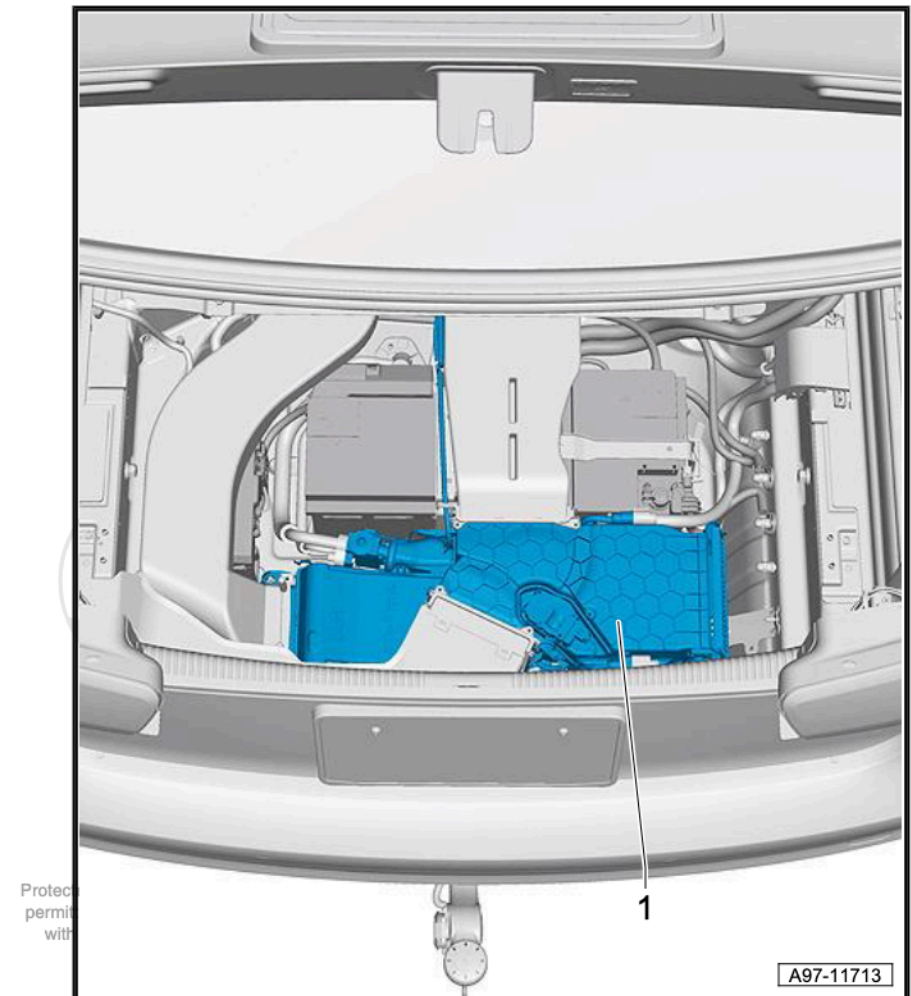

Protect  
permit  
with



Back to overview ⇒ [page 71](#) .

## 1.49 Wire Junction -TV1- , models with High-Voltage System

Under cover of left luggage compartment, beside Battery -A- .

A - Wiring Connection to Battery -A-

B - Starter Battery Switch-Over Relay -J580-

B1 - 2-Pin Connector -T2mv- , black

F1 - Wiring Connection to Terminal 30 Wire Junction -TV2-

D - Fuse 4 - terminal 30 -S207- , 150 A


E - Fuse 5 - terminal 30 -S208- , 150 A

F - Fuse 6 - terminal 30 -S209- , 200 A

G - Wiring Connection to Auxiliary Battery -A1-

H - Battery Separation Relay -J7-

H1 - 2-Pin Connector -T2mw- , black

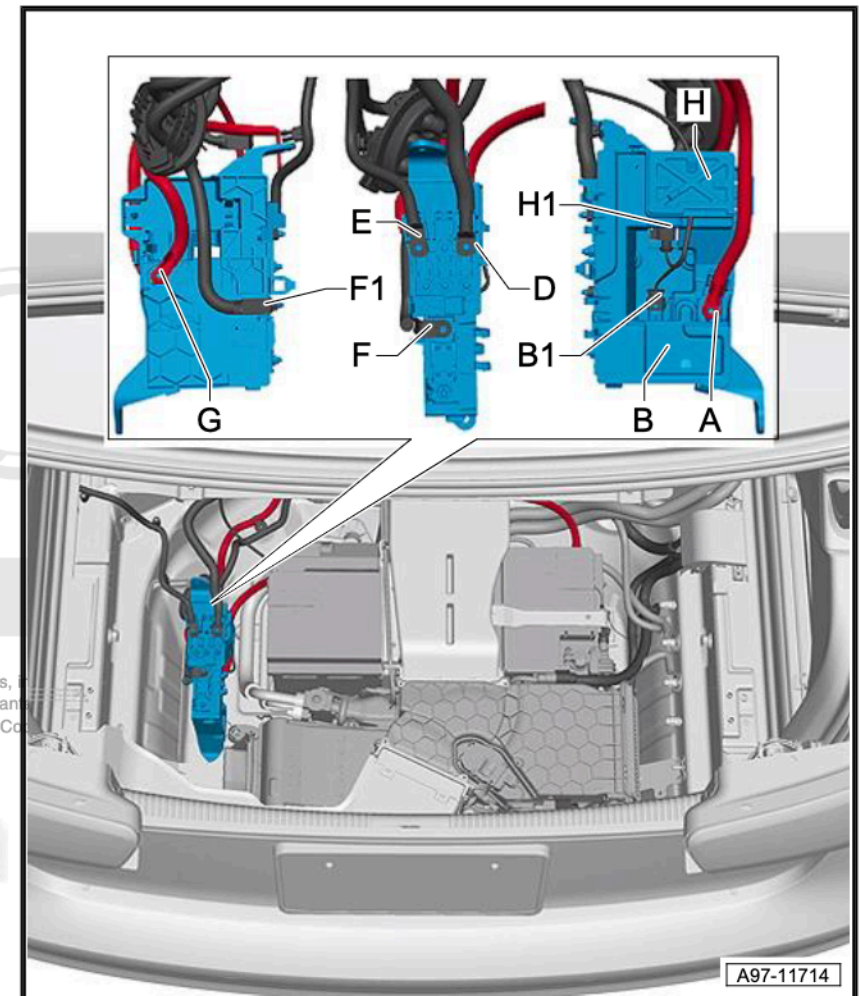

Protected by copyright. Copying for private or commercial purposes, without permission, is prohibited unless authorised by AUDI AG. AUDI AG does not guarantee the accuracy of the information in this document. Copyright © 2020 Audi AG.

Back to overview ⇒ [page 71](#) .

## 1.50 Auxiliary Battery -A1- , models with High-Voltage System

Under cover of right luggage compartment, beside Battery -A- -1-.


- 1 - Auxiliary Battery -A1-
- 2 - Battery positive
- 3 - 2-Pin Connector -T2mu- , yellow
- 4 - Battery Monitoring Control Module 2 -J934-



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

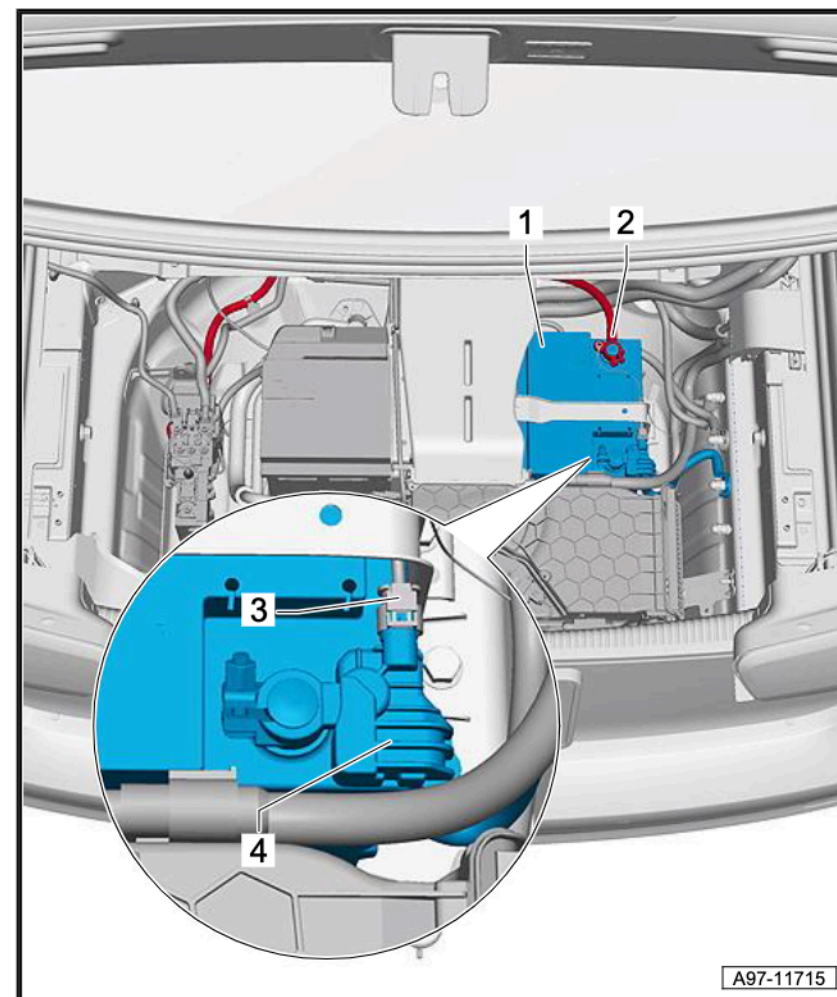

Back to overview ⇒ [page 71](#) .

## 1.51 Additional control modules and components in rear part, for models with high-voltage system, overview, from Week 47/2016

1 -

Hybrid Battery Unit -AX1-

- ❑ Components: -J840- , -SX6-
- ❑ and Connectors ⇒ [page 80](#)

2 - Battery Regulation Control Module -J840-

- ❑ and connectors, from Week 47/2016 ⇒ [page 82](#)
- ❑ , from Week 45/2011 ⇒ [page 75](#)

3 -

High voltage battery charger 1 -AX4-

- ❑ Components: -J1050-
- ❑ and Connectors ⇒ [page 86](#)

4 - Wire Junction -TV1-


5 -

High voltage battery charging socket 1 -UX4-

- ❑ Components: -F498- , -G853-

- ❑ and Connectors ⇒ [page 84](#)

This document is not to be used for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

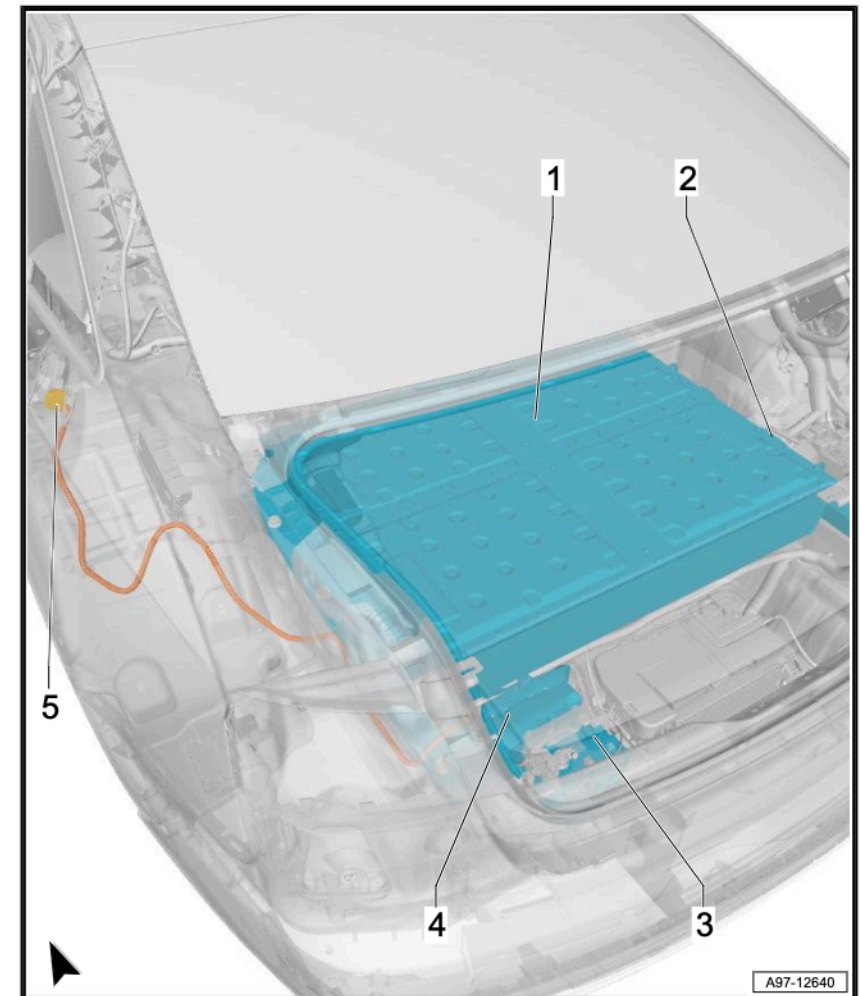

## 1.52 Hybrid Battery Unit -AX1- , from Week 47/2016

In luggage compartment, center.

1 - Hybrid Battery Unit -AX1-


□ with Battery Regulation Control Module -J840- , High-Voltage Battery Switch Box -SX6-

2 - Battery Regulation Control Module -J840-

3 - Battery -A-

4 - Wire Junction -TV1-

5 - Auxiliary Battery -A1-

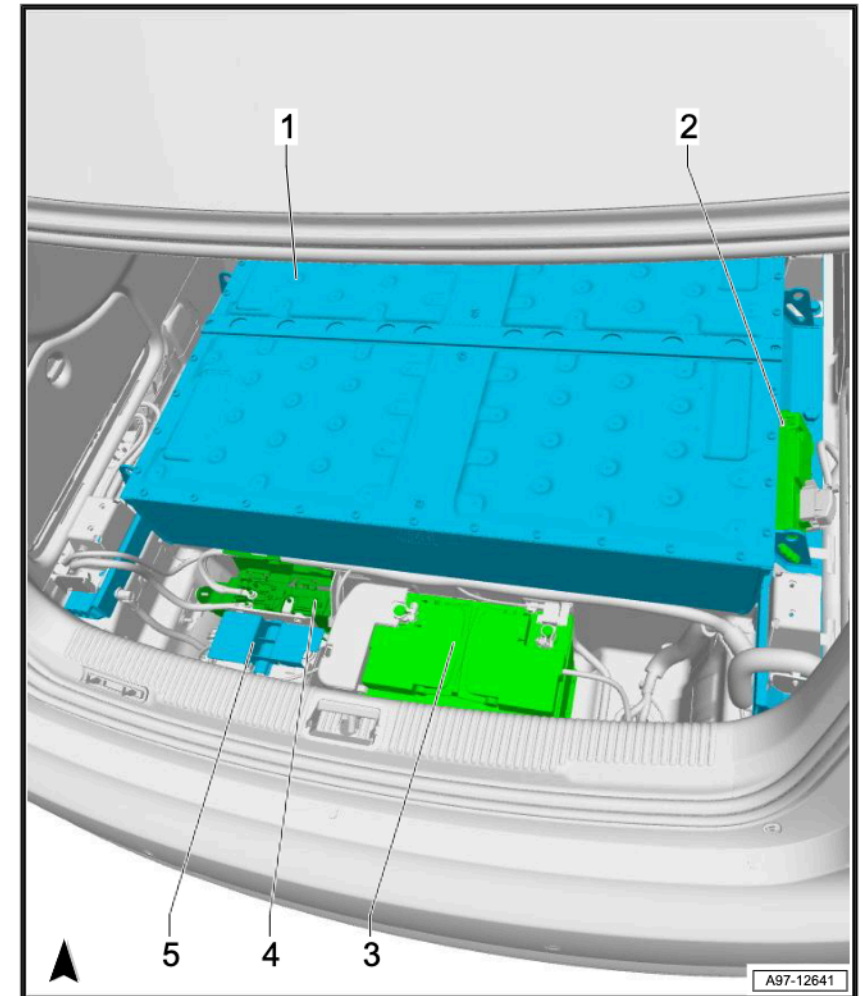

Back to overview ⇒ [page 79](#) .


## 1.53 Connectors Hybrid Battery Unit -AX1- , from Week 47/2016

Rear on underbody below Hybrid Battery Unit -AX1- .

1 - Hybrid Battery Unit -AX1-

A - 14-Pin Connector -T14w- , black

B - 20-Pin Connector -T20m- , black

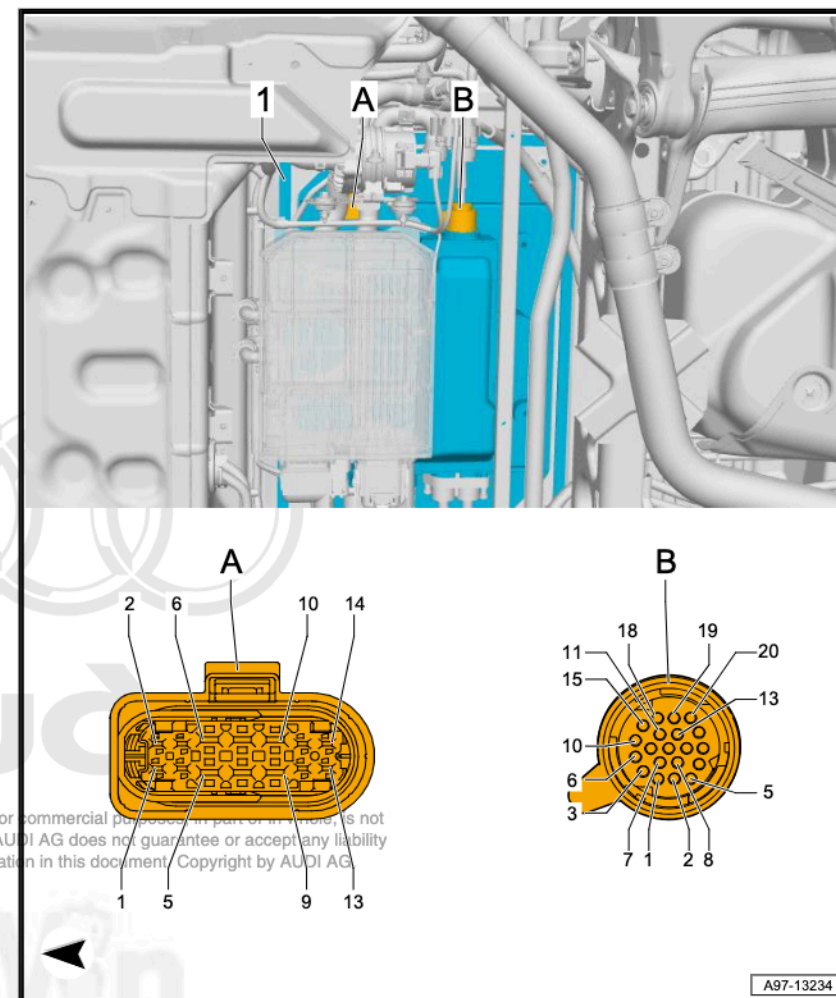

### Pin Arrangements Hybrid Battery Unit -AX1-

-T14w- (A)	Designation	-T20m- (B)	Designation
1	Airbag Control Module -J234-	1	CAN-Bus Hybrid Low, to main wiring harness) <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">B817</span> Hybrid CAN bus low connection 2 (in



-T14w- (A)	Designation	-T20m- (B)	Designation
2	20-Pin Connector -T20m- , Connection Bridge	2	CAN-Bus Hybrid High, to (B816) Hybrid CAN bus high connection 2 (in main wiring harness)
3	Airbag Control Module -J234-	3	
4	20-Pin Connector -T20m- , Connection Bridge	4	Terminal 30, from (P8) Connection 2 (in High-Voltage Battery Wiring Harness), Fuse Carrier 3 -ST3- in Fuse Panel F -SF-
5		5	Terminal 31, to (399) Ground Connection 34 (in main wiring harness) (51) Earth point, on right in luggage compartment
6	Battery Regulation Control Module -J840-	6	
7		7	14-Pin Connector -T14w- , Connection Bridge
8		8	Terminal 30, from (P7) Connection 1 (in High-Voltage Battery Wiring Harness), High Voltage System Maintenance Connector -TW-
9	Terminal 31, to (399) Ground Connection 34 (in main wiring harness) (51) Earth point, on right in luggage compartment	9	Battery Regulation Control Module -J840- , Pilot Line
10		10	14-Pin Connector -T14w- , Connection Bridge
11	Battery Regulation Control Module -J840-	11	Battery Regulation Control Module -J840-
12	Battery Regulation Control Module -J840-	12	
13	CAN-Bus Hybrid High, to (B816) Hybrid CAN bus high connection 2 (in main wiring harness)	13	
14	CAN-Bus Hybrid Low, to (B817) Hybrid CAN bus low connection 2 (in main wiring harness)	14	High voltage heater (PTC) control module -J848- , Pilot Line
		15	
		16	
		17	
		18	
		19	
		20	

Back to overview ⇒ [page 79](#) .


## 1.54 Battery Regulation Control Module -J840- , from Week 47/2016



In luggage compartment right, on Hybrid Battery Unit -AX1- .

1 - Battery Regulation Control Module -J840-

A - 28-Pin Connector -T28c- , black

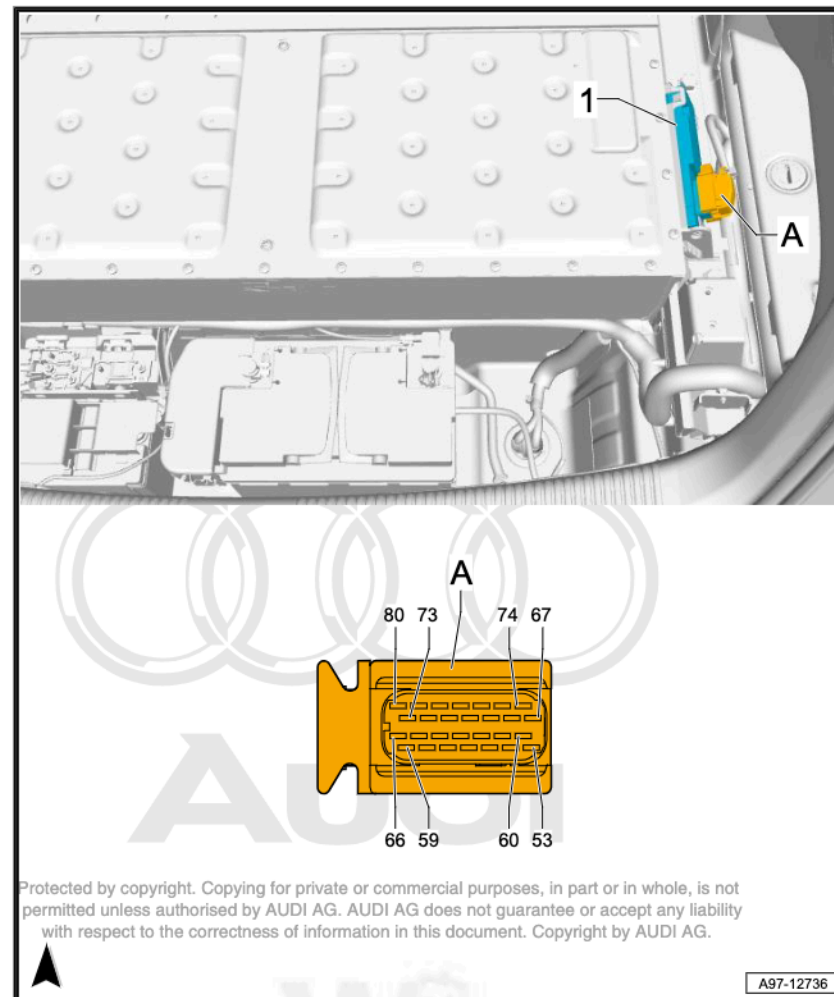

#### Pin Arrangements Battery Regulation Control Module -J840-

-T28c-(A)	Designation	-T28c-(A)	Designation	-T28c-(A)	Designation
53	CAN-Bus Hybrid High, to (B816) Hybrid CAN bus high-connection 2 (in main wiring harness)	63	Hybrid Battery Unit -AX1-	73	High voltage battery coolant pump -V590-

-T28c-(A)	Designation	-T28c-(A)	Designation	-T28c-(A)	Designation
54	CAN-Bus Hybrid Low, to (B817) Hybrid CAN bus low connection 2 (in main wiring harness)	64		74	Hybrid Battery Unit -AX1-
55	CAN-Bus Hybrid High, to (B776) Hybrid CAN bus high-connection 1 (in main wiring harness)	65		75	Hybrid Battery Unit -AX1-
56	CAN-Bus Hybrid Low, to (B777) Hybrid CAN bus low connection 1 (in main wiring harness)	66	High Voltage System Maintenance Connector -TW- , Pilot Line	76	Hybrid Battery Unit -AX1-
57		67	High-voltage battery coolant pump relay -J1156-	77	Hybrid Battery Unit -AX1- , Pilot Line
58		68		78	High-Voltage Battery Coolant Temperature Sensor 2 -G899-
59	Terminal 31, to (399) Ground Connection 34 (in main wiring harness) Earth point, on right in luggage compartment (51)	69		79	High-Voltage Battery Coolant Temperature Sensor 2 -G899-
60	Terminal 30, from (P8) Connection 2 (in High-Voltage Battery Wiring Harness), Fuse Carrier 3 -ST3- in Fuse Panel F -SF-	70	High-Voltage Battery Coolant Temperature Sensor 1 -G898-	80	Terminal 30, from (P7) Connection 1 (in High-Voltage Battery Wiring Harness), High-Voltage System Maintenance Connector -TW-
61		71	High-Voltage Battery Coolant Temperature Sensor 1 -G898-		
62		72			

Back to overview ⇒ [page 79](#) .


## 1.55 High voltage battery charging socket 1 -UX4- , from Week 47/2016

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

In left side panel, above wheel housing.

A - High voltage battery charging socket 1 -UX4-

- with High voltage connector lock 1 adjuster -F498- , Charging socket temperature sensor 1 -G853-

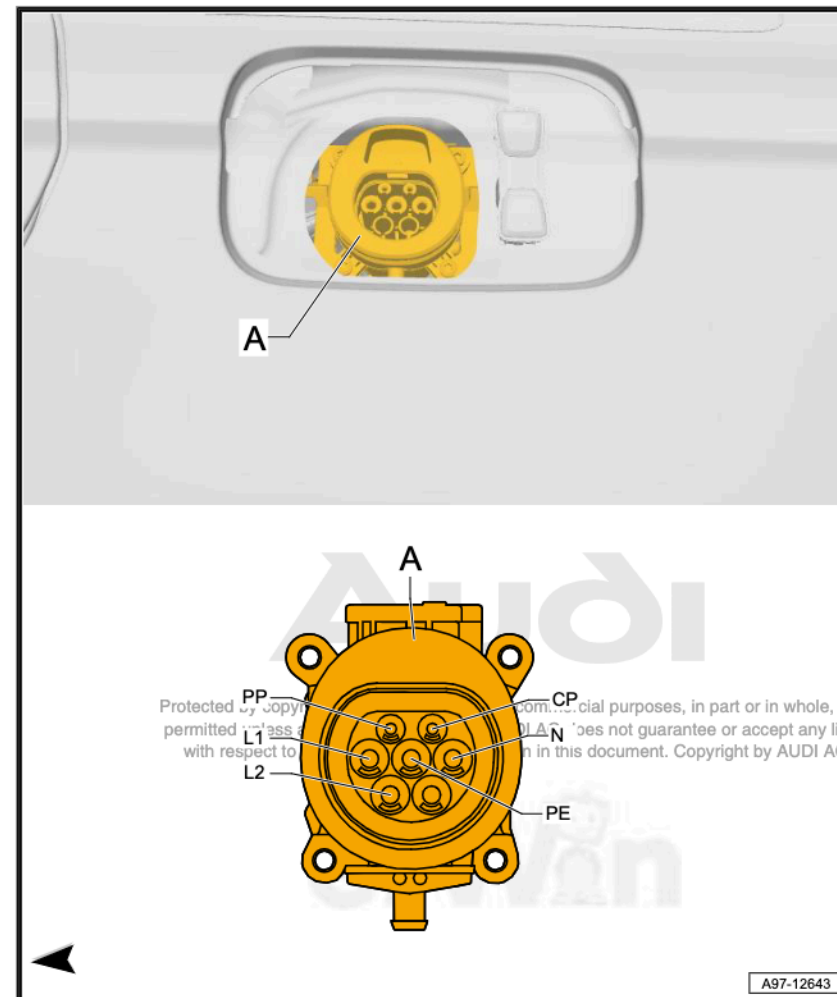

Back to overview ⇒ [page 79](#) .

## 1.56 High voltage battery charger 1 -AX4- , from Week 47/2016

1 - High voltage battery charger 1 -AX4-

□ with High voltage battery charger control module -J1050-


2 - High voltage battery charger high voltage wiring -P25-

3 - High voltage heating high voltage cable (PTC) -P11-

4 - Not used

A - 60-Pin Connector -T60a- , black

B - 8-Pin Connector -T8bl- , orange

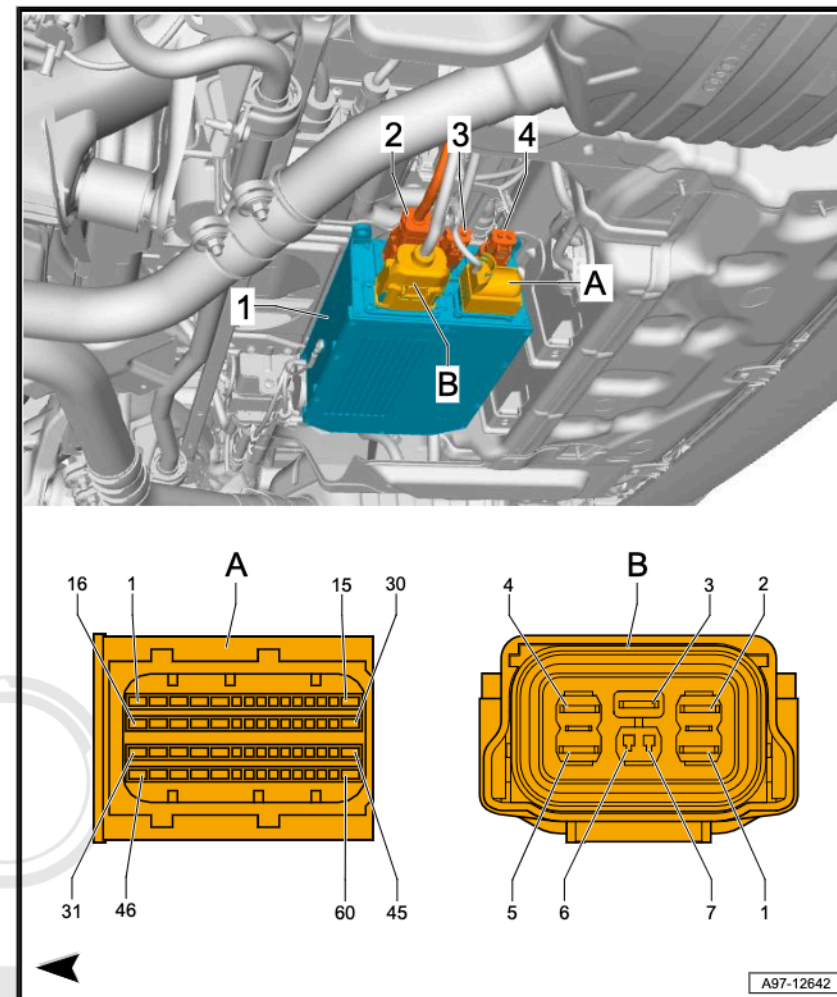

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

## Pin Arrangements High voltage battery charger 1 -AX4-

-T60a- (A)	Designation	-T60a- (A)	Designation	-T60a- (A)	Designation
1	Terminal 30, from Fuse Carrier 3 -ST3- in Fuse Panel F -SF-	21	Battery charging button module -EX32-	41	
2		22	Battery charging button module -EX32-	42	
3	Ground supply Battery charging button module -EX32-	23	High voltage battery charging socket 1 -UX4-	43	
4	Battery charging button module -EX32-	24	High voltage battery charging socket 1 -UX4-	44	
5	Battery charging button module -EX32-	25	Battery charging button module -EX32-	45	
6	Battery charging button module -EX32-	26	Battery charging button module -EX32-	46	
7		27	Charging socket temperature sensor 1 -G853- In the High voltage battery charging socket 1 -UX4-	47	
8	High voltage battery charging socket 1 -UX4-	28	Charging socket temperature sensor 1 -G853- In the High voltage battery charging socket 1 -UX4-	48	
9	CAN-Bus Hybrid High, to (B776) Hybrid CAN bus high connection 1 (in main wiring harness)	29		49	
10	CAN-Bus Hybrid Low, to (B777) Hybrid CAN bus low connection 1 (in main wiring harness)	30		50	
11		31	High voltage charge flap lock 1 adjuster -F496-	51	
12		32	High voltage charge flap lock 1 adjuster -F496-	52	
13		33		53	
14		34		54	
15		35		55	
16	High voltage connector lock 1 adjuster -F498- In the High voltage battery charging socket 1 -UX4-	36		56	
17	High voltage connector lock 1 adjuster -F498- In the High voltage battery charging socket 1 -UX4-	37		57	
18	High voltage connector lock 1 adjuster -F498- In the High voltage battery charging socket 1 -UX4-	38		58	

-T60a- (A)	Designation	-T60a- (A)	Designation	-T60a- (A)	Designation
19	High voltage connector lock 1 adjuster -F498- In the High voltage battery charging socket 1 -UX4-	39		59	
20		40		60	Terminal 31, to (396) Ground Connection 31 (in main wiring harness), (399) Ground Connection 34 (in main wiring harness), (51) Ground Connection (in luggage compartment, right)


-T8bl- (B)	Designation	-T8bl- (B)	Designation
1	High voltage battery charging socket 1 -UX4-	5	High voltage battery charging socket 1 -UX4-
2		6	
3		7	
4	High voltage battery charging socket 1 -UX4-	8	Shielding

Back to overview ⇒ [page 79](#) .


## 1.57 Auxiliary Battery -A1- , from Week 47/2016

In left luggage compartment behind Hybrid Battery Unit -AX1- .

Protected by copyright. Copying for  
permitted unless authorised by Audi AG  
with respect to the correctness

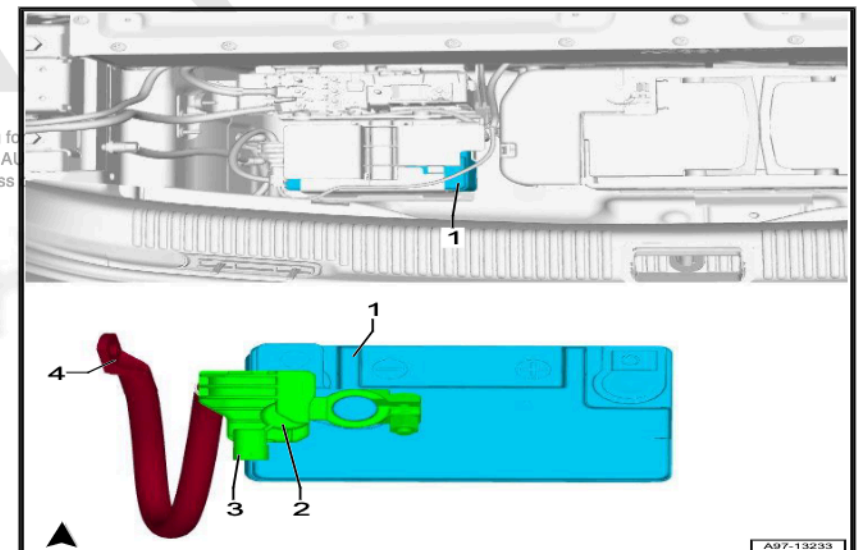



- 1 - Auxiliary Battery -A1-
- 2 - Battery Monitoring Control Module 2 -J934-
- 3 - 2-Pin Connector -T2mu-
- 4 -  Ground Connection 2 (in left luggage compartment)

Back to overview ⇒ [page 79](#) .



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

